

**FPU® SYSTEMS OPERATION MANUAL
(INCLUDING REPAIR PARTS)
EXPEDITIONARY CONTAINERIZED AUTHORIZED STOCKAGE LIST (ECASL)
BOH FPU Field Pack-up Units**

European Patent Number EP 1224127

CHAPTER 6
PARTS SUPPORTING INFORMATION

This page was intentionally left blank

PARTS SUPPORTING INFORMATION**FPU® SYSTEMS OPERATION MANUAL
(INCLUDING REPAIR PARTS)
EXPEDITIONARY CONTAINERIZED AUTHORIZED STOCKAGE LIST (ECASL)
BOH FPU Field Pack-up Units****INTRODUCTION TO MAINTENANCE ALLOCATION CHART (MAC)**

INTRODUCTION**BOH Environmental LLC Recommended MAC**

This introduction provides a general explanation of all maintenance and repair functions authorized at various maintenance levels under the standard Army Maintenance System concept.

The MAC (WP 0042 00, Table 1, immediately following the introduction) designates overall authority and responsibility for the performance of maintenance functions on the ECASL SYSTEMS. The application of the maintenance functions to the ECASL SYSTEMS shall be consistent with the capacities and capabilities of the designated maintenance levels, which are shown on the MAC in column (4) as:

Unit – includes two sub columns, C (operator/crew) and O (unit) maintenance.

Direct Support – includes an F sub column.

General Support – includes an H sub column.

Depot – includes a D sub column.

Maintenance Functions

Maintenance functions are limited to and defined as follows:

1. Inspect: To determine the serviceability of an item by comparing its physical and mechanical characteristics with established standards through examination (e.g., by sight, sound, or feel). This includes scheduled inspections.
2. Test: To verify serviceability by measuring the mechanical characteristics of an item and comparing those characteristics with prescribed standards on a scheduled basis, i.e., load testing of lift devices and hydrostatic testing of pressure hoses.
3. Service: Operations required periodically to keep an item in proper operating condition; e.g., to clean (includes decontaminate, when required), to preserve, to drain, to paint, or to replenish fuel, lubricants, chemical fluids, or gases.
4. Adjust: To maintain or regulate, within prescribed limits, by bringing into proper position, or by setting the operating characteristics to specific parameters.
5. Align: To adjust specified variable elements of an item to bring about optimum or desired performance.
6. Calibrate: To determine and cause corrections to be made or to be adjusted on instruments of test, measuring, and diagnostic equipment used in precision measurement. Consists of comparisons of two instruments, one of which is a certified standard of known accuracy, to detect and adjust any discrepancy in the accuracy of the instrument being compared.
7. Remove/Install: To remove and install the same item when required to perform service or other maintenance functions. Install may be the act of emplacing, seating, or fixing into position a spare,

repair part, or module (component or assembly) in a manner to allow the proper functioning of an equipment or system.

8. Replace: To remove an unserviceable item and install a serviceable counterpart in its place. "Replace" is authorized by the MAC and assigned maintenance level is shown as the third position code of the Source, Maintenance and Recoverability (SMR) code.
9. Repair: The application of maintenance services, including fault location/troubleshooting, removal/installation, disassembly/assembly procedures, and maintenance actions to identify troubles and restore serviceability to an item by correcting specific damage, fault, malfunction, or failure in a part, subassembly, module (component or assembly), end item, or system.

NOTE

The following definitions are applicable to the "REPAIR" maintenance functions of Service, Inspect, Test, Adjust, Align, Calibrate, and/or Replace:

Fault location/troubleshooting – The process of investigating and detecting the cause of equipment malfunctioning; the act of isolating a fault within a system or Unit Under Test (UUT).

Disassembly/Assembly – The step-by-step breakdown (taking apart) of a spare/functional group coded item to the level of its least component, that is assigned an SMR code for the level of maintenance under consideration (i.e., identified as maintenance significant).

Actions – Welding, grinding, riveting, straightening, facing, machining, and/or resurfacing.

10. Overhaul: That maintenance effort (service/action) prescribed to restore an item to a completely serviceable/operational condition as required by maintenance standards in appropriate technical publications. Overhaul is normally the highest degree of maintenance performed by the Army. Overhaul does not normally return an item to like new condition.
11. Rebuild: Consists of those services/actions necessary for the restoration of unserviceable equipment to a like new condition in accordance with original manufacturing standards. Rebuild is the highest degree of materiel maintenance applied to Army equipment. The rebuild operation includes the act of returning to zero those age measurements (e.g., hours/miles) considered in classifying Army equipment/components.

Explanation of Columns in the MAC

Column (1) – Group Number. Column (1) lists Functional Group Code (FGC) numbers, the purpose of which is to identify maintenance significant components, assemblies, subassemblies, and modules with the Next Higher Assembly (NHA).

Column (2) – Component/Assembly. Column (2) contains the item names of components, assemblies, subassemblies, and modules for which maintenance is authorized.

Column (3) – Maintenance Function. Column (3) lists the functions to be performed on the item listed in column (2). (For a detailed explanation of these functions refer to "Maintenance Functions" outlined above).

Column (4) – Maintenance Level. Column (4) specifies each level of maintenance authorized to perform each function listed in column (3), by indicating work time required (expressed as man-hours in whole hours or decimals) in the appropriate sub column. This work time figure represents the active time required to perform that maintenance function at the indicated level of maintenance. If the number or complexity of the tasks within the listed maintenance function varies at different maintenance levels, appropriate work time figures are to be shown for each level. The work time figure represents the average time required to restore an item (assembly, subassembly, component, module, end item, or system) to a serviceable condition under typical field operating conditions. This time includes preparation time (including any necessary disassembly/assembly time), troubleshooting/fault location time, and quality assurance time in addition to the time required to perform the specific tasks identified for the maintenance functions authorized in the MAC. The symbol designations for the various maintenance levels are as follows:

- **C – Operator or crew maintenance**
- **O – Unit maintenance**
- **F – Direct Support maintenance**
- **L – Specialized repair activity (SRA)**
- **H – General support maintenance**
- **K – Commercial depot maintenance**

Column (5) – Tools and Equipment Reference Code. Column (5) specifies, by code, those common tool sets (not individual tools), common Test, Measurement and Diagnostic Equipment (TMDE), and special tools, special TMDE and special support equipment required to perform the designated function.

Column (6) – Remarks Code. When applicable, this column contains a letter code, in alphabetical order.

END OF WORK PACKAGE

This page was intentionally left blank

PARTS SUPPORTING INFORMATION

**FPU® SYSTEMS OPERATION MANUAL
(INCLUDING REPAIR PARTS)**

**EXPEDITIONARY CONTAINERIZED AUTHORIZED STOCKAGE LIST (ECASL)
BOH FPU Field Pack-up Units**

MAINTENANCE ALLOCATION CHART (MAC)

(1)	(2)	(3)	(4) Maintenance Level					(5)	(6)
Group Number	Component/Assembly	Maintenance Function	Unit		Direct Support	General Support	Depot	Tools and Equipment Ref Code	Remarks
			C	O	F	H	D		
00	ECASL SYSTEMS								
01	ECASL Configurations								
0101	ECASL #1								
0102	ECASL #2								
0103	ECASL #3								
0104	ECASL #4								
0105	ECASL #5								
02	FPU-20-3 Container								
0201	Door Assembly	INSPECT	0.1	0.1					
		SERVICE		0.2					
		ALIGN			0.5				
		REPLACE				1			
		REPAIR				2			
0202	Folding Steps	INSPECT	0.1	0.1					
		SERVICE		0.1					
		REPLACE			0.2				

(1)	(2)	(3)	(4)					(5)	(6)
Group Number	Component/Assembly	Maintenance Function	Maintenance Level					Tools and Equipment Ref Code	Remarks
			Unit		Direct Support	General Support	Depot		
			C	O	F	H	D		
0203	Rear Roller Assembly	INSPECT		0.1					
		SERVICE		0.1					
		REPLACE				0.2			
		REPAIR				0.3			
0204	Vertical Rack Frame	INSPECT	0.2	0.2					
		SERVICE		0.2					
		REPAIR			0.5				
0205	Parts Storage Aids								
020501	Drawer Assembly	INSPECT		0.2					
		SERVICE		0.2					
		REPLACE			0.7				
0206	Bulk Storage Aids								
020601	Pallets	INSPECT	0.2	0.2					
		SERVICE		0.2					
		REPLACE		0.1					
020602	Pallet Ledge	INSPECT	0.2	0.2					
		SERVICE		0.1					
		REPLACE			0.5				
		REPAIR			1				
0207	Removable Cradle	INSPECT		0.2					
		SERVICE		0.1					
		REPLACE			0.6				
		REPAIR			0.6				
0208	Tie Down Ring	INSPECT	0.1	0.1					
		SERVICE		0.1					
		REPLACE			0.2				

(1)	(2)	(3)	(4)				(5)	(6)
Group Number	Component/Assembly	Maintenance Function	Maintenance Level				Tools and Equipment Ref Code	Remarks
			Unit		Direct Support	General Support		
			C	O	F	H	D	
0209	Wall Vent Kit	INSPECT	0.1	0.1				
		SERVICE		0.1				
		REPLACE			0.2			
0210	Riv-Nut	INSPECT	0.1	0.1				
		SERVICE		0.1				
		REPLACE				0.2		
03	STANDARD MODULES							
0301	Module #26	INSPECT	0.5	0.5				
		SERVICE		0.5				
		REPLACE		0.2				
0302	Module #23	INSPECT	0.5	0.5				
		SERVICE		0.2				
		REPLACE		0.2				
0303	Module #22	INSPECT	0.5	0.5				
		SERVICE		0.2				
		REPLACE		0.2				
0304	Module #21	INSPECT	0.5	0.5				
		SERVICE		0.2				
		REPLACE		0.2				
0305	Module Drawers and Bearing Slide	INSPECT	0.5	0.5				
		SERVICE		0.2				
		REPLACE				0.5		

(1)	(2)	(3)	(4)					(5)	(6)
Group Number	Component/Assembly	Maintenance Function	Maintenance Level					Tools and Equipment Ref Code	Remarks
			Unit		Direct Support	General Support	Depot		
			C	O	F	H	D		
04	BULK MODULE								
0401	Bulk Module #3	INSPECT	0.2	0.2					
		SERVICE	0.2						
		REPLACE				0.5			
		ALIGN				1			
		REPAIR				1			
040101	FPU BULK Chassis	INSPECT	0.2	0.2					
		SERVICE	0.2						
		REPLACE				0.5			
		ALIGN				4			
		REPAIR				1			
040102	BULK Tray 1000 lb.	INSPECT	0.2	0.2					
		SERVICE	0.2						
		REPLACE				0.5			
		ALIGN				1			
		REPAIR							
040103	8" BULK Bin Adapter Kit	INSPECT	0.2						
		SERVICE	0.2						
		REPLACE			0.5				
040104	Latch and Bearing Assemblies	INSPECT		0.1					
		SERVICE		0.2					
		REPLACE			0.2				
		REPAIR			1.5				

End of MAC

END OF WORK PACKAGE

PARTS SUPPORTING INFORMATION

FPU® SYSTEMS OPERATION MANUAL (INCLUDING REPAIR PARTS)

EXPEDITIONARY CONTAINERIZED AUTHORIZED STOCKAGE LIST (ECASL) BOH FPU Field Pack-up Units

INTRODUCTION TO REPAIR PARTS LIST

INTRODUCTION

SCOPE

This Repair Parts lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Operator, Unit, and Direct Support maintenance of the ECASL Systems. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the Source, Maintenance, and Recoverability (SMR) codes.

GENERAL

In addition to the Introduction work package, this RPSTL is divided into the following work packages:

1. **Repair Parts List Work Packages.** See WP 0044 through WP 0047 00. Work packages containing lists of spares and repair parts authorized by this Repair Parts List for use in the performance of maintenance. These work packages also include parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Sending units, brackets, filters, and bolts are listed with the component they mount on. Bulk materials are listed by item name in FIG. BULK at the end of the work packages. Repair parts kits are listed separately in their own functional group and work package. Repair parts for reparable special tools are also listed in a separate work package. Items listed are shown on the associated illustrations.
2. **Cross-Reference Indexes Work Packages.** See WP 0048 00 and WP 0049 00. There are two cross-reference indexes work packages in this Repair Parts List: the National Stock Number (NSN) Index work package and the Part Number (P/N) Index work package. The National Stock Number Index work package refers you to the figure and item number. The Part Number Index work package refers you to the figure and item number.

EXPLANATION OF COLUMNS IN THE REPAIR PARTS LIST WORK PACKAGE

ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

NSN (Column (2)). The NSN for the item is listed in this column.

CAGEC (Column (3)). The Commercial and Government Entity Code (CAGEC) is a five-digit code which is used to identify the manufacturer, distributor, or Government agency/activity that supplies the item.

PART NUMBER (Column (4)). Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When you use an NSN to requisition an item, the item you receive may have a different P/N from the number listed.

DESCRIPTION AND USABLE ON CODE (UOC)

(Column (5)). This column includes the following information:

The ITEM Assembly Progression (**.Item or Assembly, ..Next Lower Item, ...Next Lower Item**)

1. The federal item name, and when required, a minimum description to identify the item.
2. P/Ns of bulk materials are referenced in this column in the line entry to be manufactured or fabricated.
3. Hardness Critical Item (HCI). A support item that provides the equipment with special protection from electromagnetic pulse (EMP) damage during a nuclear attack.
4. The statement END OF FIGURE appears just below the last item description for a given figure in both the repair parts list and special tools list work packages.

QTY (Column (6)). The QTY (quantity per figure) column indicates the quantity of the item used in the breakout shown on the illustration/figure, which is prepared for a functional group, sub-functional group, or an assembly. A "V" appearing in this column instead of a quantity indicates that the quantity is variable and quantity may change from application to application.

EXPLANATION OF CROSS-REFERENCE INDEXES WORK PACKAGES FORMAT AND COLUMNS.

1. National Stock Number (NSN) Index Work Package.

STOCK NUMBER Column. This column lists the NSN in National Item Identification Number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN.

<u>NSN</u> (e.g.,5385-01-574-1476)	When using this column to locate an item, ignore the first four digits of the NSN. However, the complete NSN should be used when ordering items by stock number.
---------------------------------------	--

FIG. Column. This column lists the number of the figure where the item is identified/located. The figures are in numerical order in the repair parts list and special tools list work packages.

ITEM Column. The item number identifies the item associated with the figure listed in the adjacent FIG. Column. This item is also identified by the NSN listed on the same line.

2. Part Number (P/N) Index Work Package. P/Ns in this index are listed in ascending alphanumeric sequence (vertical AIDS of letter and number combinations which places the first letter or digit of each group in order A through Z, followed by the numbers 0 through 9 and each following letter or digit in like order).

PART NUMBER Column. Indicates the P/N assigned to the item.

FIG. Column. This column lists the number of the figure where the item is identified/located in the repair parts list and special tools list work packages.

ITEM Column. The item number is the number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

SPECIAL INFORMATION

UOC. The UOC appears in the lower left corner of the Description Column heading. Usable On Codes are shown as “UOC . . .” in the Description Column (justified left) on the first line under the applicable item/nomenclature. None coded items are applicable to all models. Identification of the UOCs used in this RPSTL are:

CODE	Usable On
FAA	ECASL GREEN – Forest Green
FAB	ECASL TAN – Desert Sand

Fabrication Instructions. Bulk materiel required to manufacture items are listed in the bulk materiel functional group of this RPSTL. Part numbers for bulk materiel are also referenced in the Description Column of the line item entry for the item to be manufactured/fabricated. Detailed fabrication instructions for items source Coded to be manufactured or fabricated are found in: Not Applicable.

Index Numbers. Items which have the word BULK in the figure column will have an index number shown in the item number column. This index number is a cross-reference between the NSN and P/N index work packages and the bulk materiel list in the repair parts list work package.

Illustrations List. The illustrations in this RPSTL contain unit and direct support authorized items. The tabular list in the repair parts list work package contains only those parts coded “O” and “F” in the third position of the SMR code, therefore, there may be a break in the item number sequence.

HOW TO LOCATE REPAIR PARTS

A. When NSNs or P/Ns Are Not Known.

1. Using the table of contents, determine the assembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and lists are divided into the same groups.
2. Find the figure covering the functional group or the sub functional group to which the item belongs.
3. Identify the item on the figure and note the number(s).
4. Look in the repair parts list work packages for the figure and item numbers. The NSNs and part numbers are on the same line as the associated item numbers.









B. When NSN Is Known.


1. If you have the NSN, look in the STOCK NUMBER column of the NSN index work package. The NSN is arranged in NIIN sequence. Note the figure and item number next to the NSN.
2. Turn to the figure and locate the item number. Verify that the item is the one you are looking for.

C. When the P/N Is Known.

1. If you have the P/N and not the NSN, look in the PART NUMBER column of the P/N index work package. Identify the figure and item number.
2. Look up the item on the figure in the applicable repair parts list work package.

END OF WORK PACKAGE

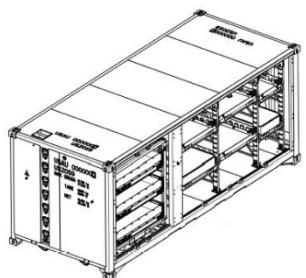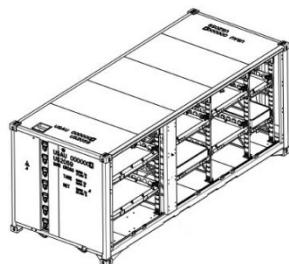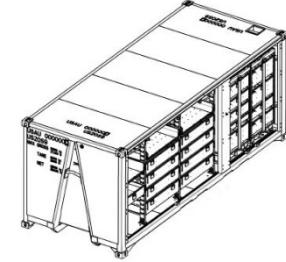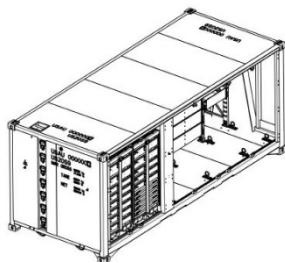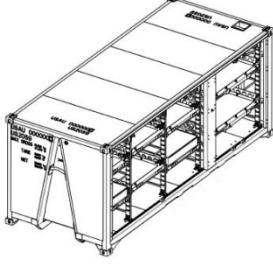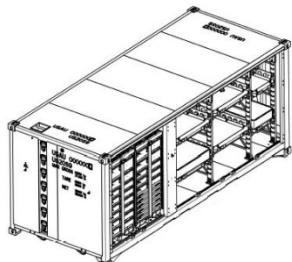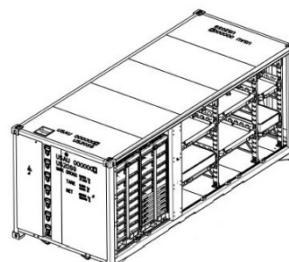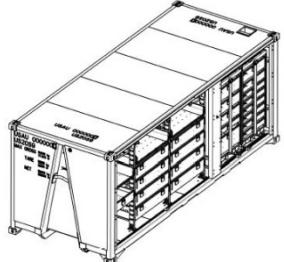
PARTS SUPPORTING INFORMATION**FPU® SYSTEMS OPERATION MANUAL
(INCLUDING REPAIR PARTS)****EXPEDITIONARY CONTAINERIZED AUTHORIZED STOCKAGE LIST (ECASL)
BOH FPU Field Pack-up Units****REPAIR PARTS LIST
ECASL CONFIGURATIONS #1 - #5****ECASL #1****ECASL #2****ECASL #3****ECASL #4****ECASL #5****FIGURES #1 through #5**

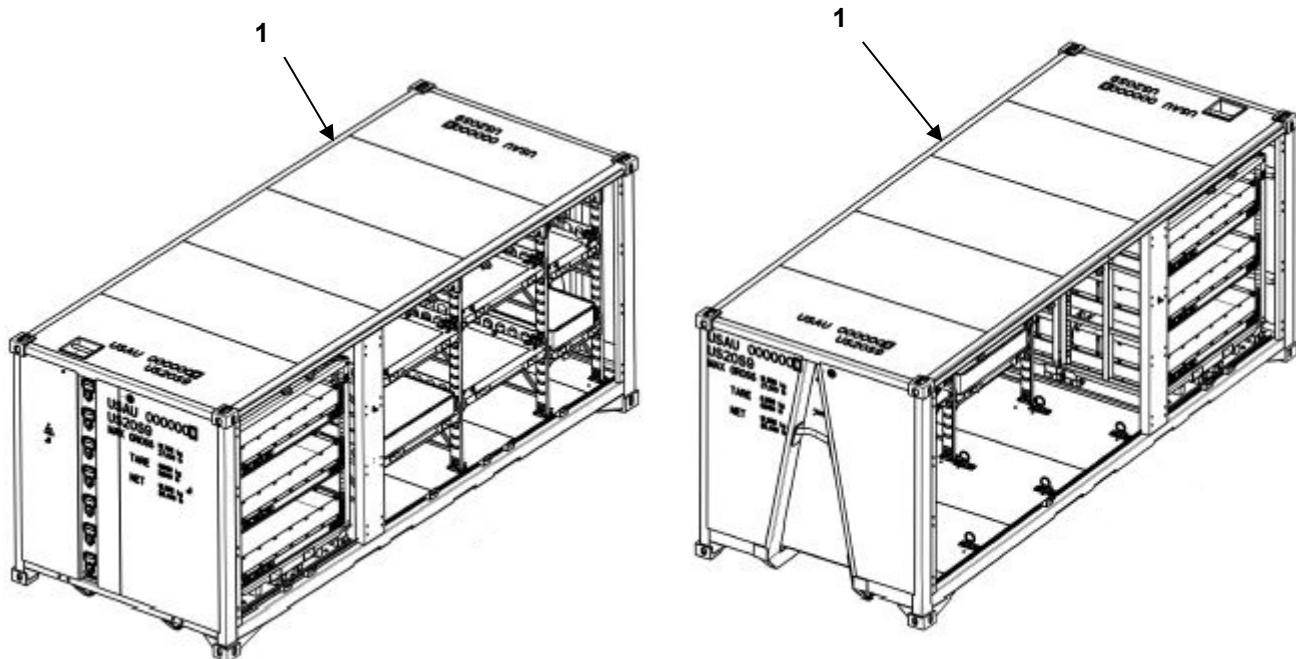ECASL CONFIGURATION #1

Note: Doors removed for clarity

FIGURE 1A ECASL CONFIGURATION #1

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0101 FIGURE 1A ECASL CONFIGURATION #1	
1	8145-01-654-0925	1NSG3	75000001-001	.ECASL #1 GREEN UOC: FAA	1
1	8145-01-654-0930	1NSG3	75000001-002	.ECASL #1 TAN UOC: FAB	1
END OF FIGURE 1A					

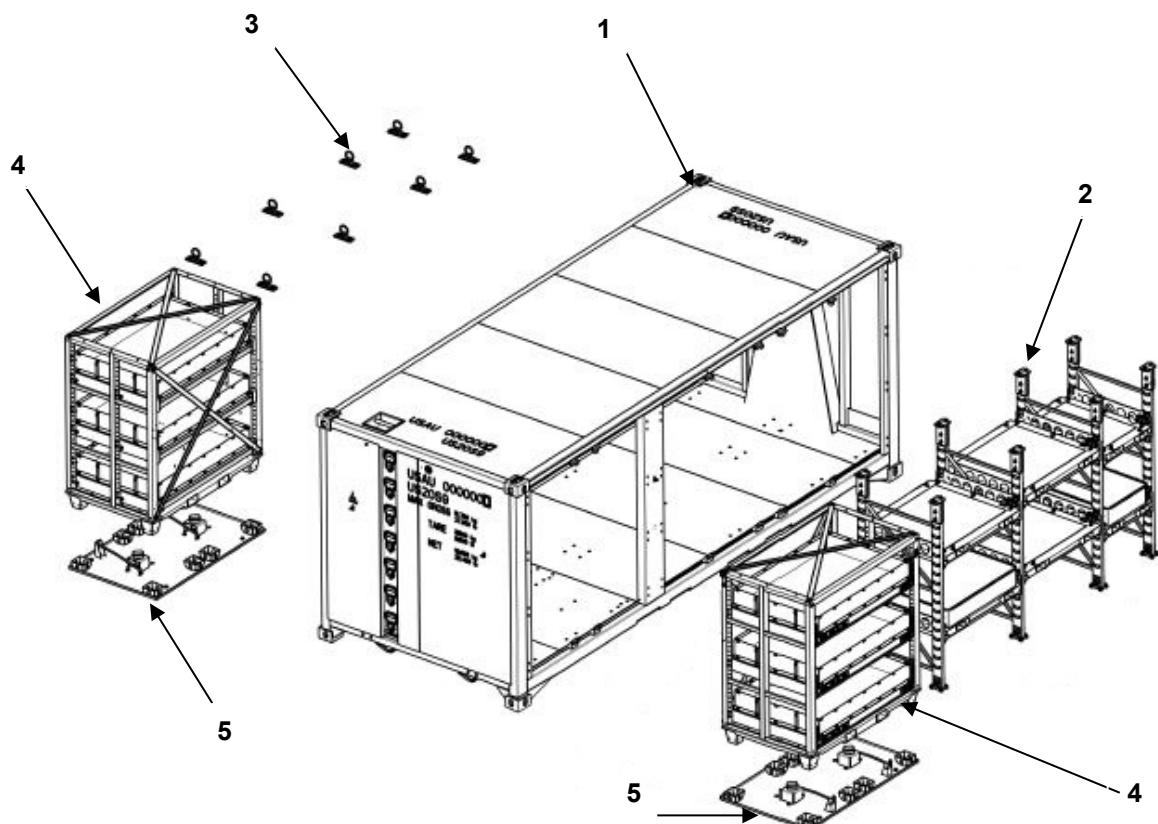
ECASL CONFIGURATION #1 PARTS

Note: Doors removed for clarity

FIGURE 1B ECASL CONFIGURATION #1 PARTS

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0101 FIGURE 1B ECASL CONFIGURATION #1 PARTS	
NA	8145-01-654-0925	1NSG3	75000001-001	.ECASL #1 GREEN UOC: FAA	1
1	8150-01-598-3304	1NSG3	15002003-001	..FPU-20-3 GREEN UOC: FAA	1
2	8145-01-524-0244	1NSG3	15310022-001	..1/2 BULK STORAGE AID GREEN UOC: FAA	1
3	8145-01-513-6262	1NSG3	16509501-001	..TIE-DOWN RINGS GREEN UOC: FAA	8
4	8145-01-588-3691	1NSG3	15410203-001	..BULK MODULE #3 (3 BINS) GREEN UOC: FAA	2
5	8145-01-598-3344	1NSG3	15530122-001	..REMOVABLE CRADLE GREEN UOC: FAA	2
NA	8145-01-654-0930	1NSG3	75000001-002	.ECASL #1 TAN UOC: FAB	1
1	8150-01-598-3223	1NSG3	15002003-002	..FPU-20-3 TAN UOC: FAB	1
2	8145-01-524-0244	1NSG3	15310022-002	..1/2 BULK STORAGE AID TAN UOC: FAB	1
3	8145-01-513-6262	1NSG3	16509501-002	..TIE-DOWN RINGS TAN UOC: FAB	8
4	8145-01-588-3691	1NSG3	15410203-002	..BULK MODULE #3 (3 BINS) TAN UOC: FAB	2
5	8145-01-598-3354	1NSG3	15530122-002	..REMOVABLE CRADLE TAN UOC: FAB	2
END OF FIGURE 1B					


ECASL CONFIGURATION #2

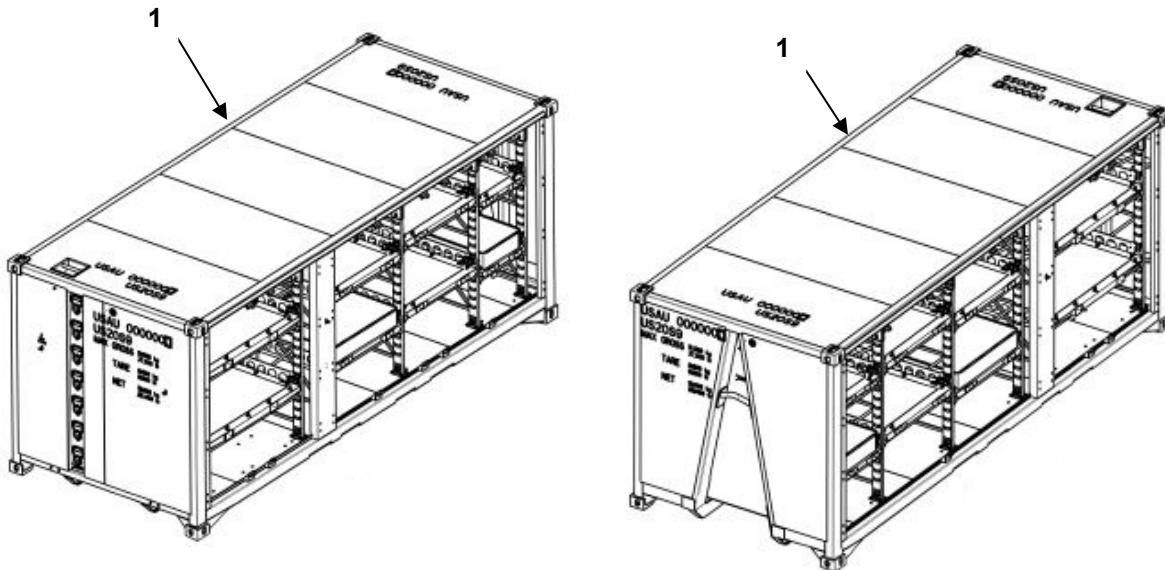

Note: Doors removed for clarity

FIGURE 2A ECASL CONFIGURATION #2


(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0102 FIGURE 2A ECASL CONFIGURATION #2	
1	8145-01-654-0588	1NSG3	75000002-001	.ECASL #2 GREEN UOC: FAA	1
1	8145-01-654-0593	1NSG3	75000002-002	.ECASL #2 TAN UOC: FAB	1
END OF FIGURE 2A					

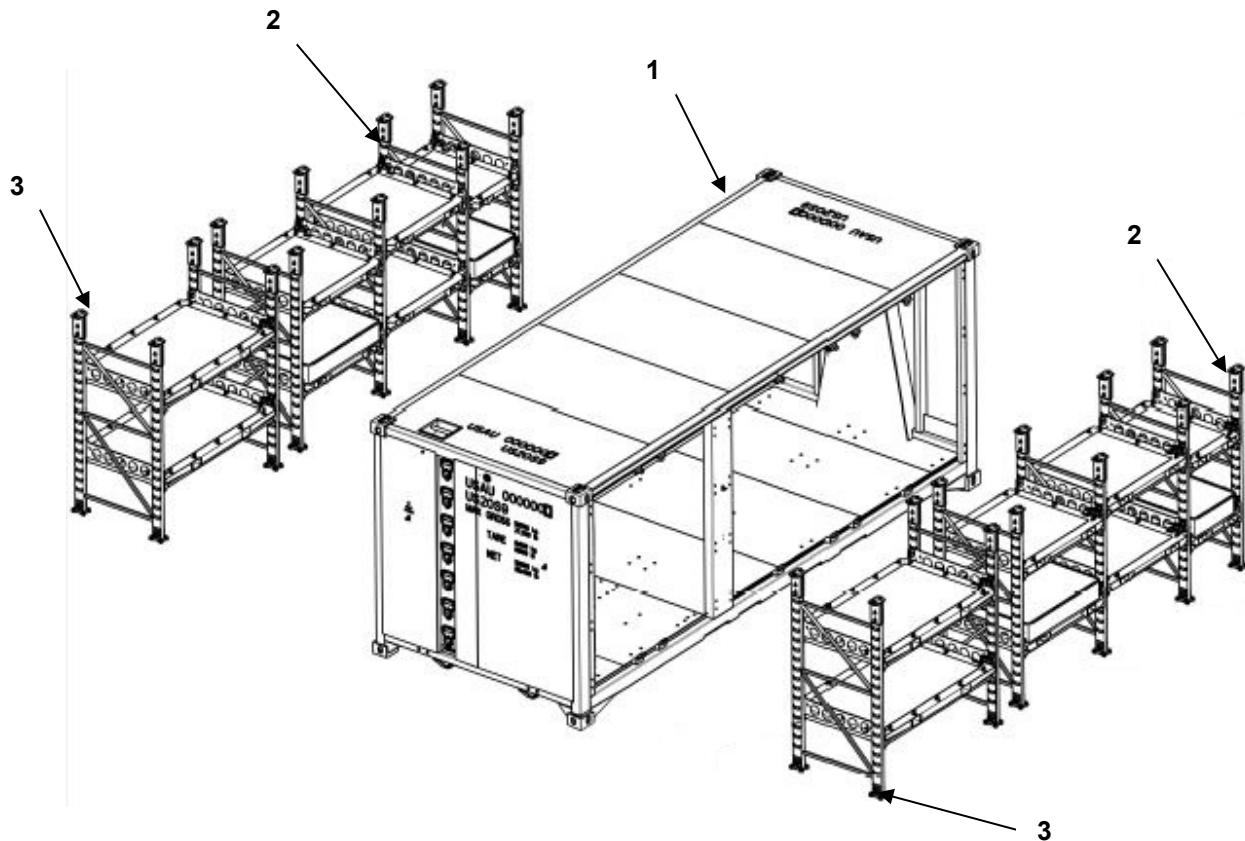ECASL CONFIGURATION #2 PARTS

Note: Doors removed for clarity

FIGURE 2B ECASL CONFIGURATION #2 PARTS


(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0102 FIGURE 2B ECASL CONFIGURATION #2 PARTS	
NA	8145-01-654-0588	1NSG3	75000002-001	.ECASL #2 GREEN UOC: FAA	1
1	8150-01-598-3304	1NSG3	15002003-001	..FPU-20-3 GREEN UOC: FAA	1
2	8145-01-524-0244	1NSG3	15310022-001	..1/2 BULK STORAGE AID GREEN UOC: FAA	2
3	8145-01-598-3337	1NSG3	15310034-001	..1/2 BULK STORAGE AID (REAR) GREEN UOC: FAA	2
NA	8145-01-654-0593	1NSG3	75000002-002	.ECASL #2 TAN UOC: FAB	1
1	8150-01-598-3223	1NSG3	15002003-002	..FPU-20-3 TAN UOC: FAB	1
2	8145-01-524-0244	1NSG3	15310022-002	..1/2 BULK STORAGE AID TAN UOC: FAB	2
3	8145-01-598-3332	1NSG3	15310034-002	..1/2 BULK STORAGE AID (REAR) TAN UOC: FAB	2
END OF FIGURE 2B					

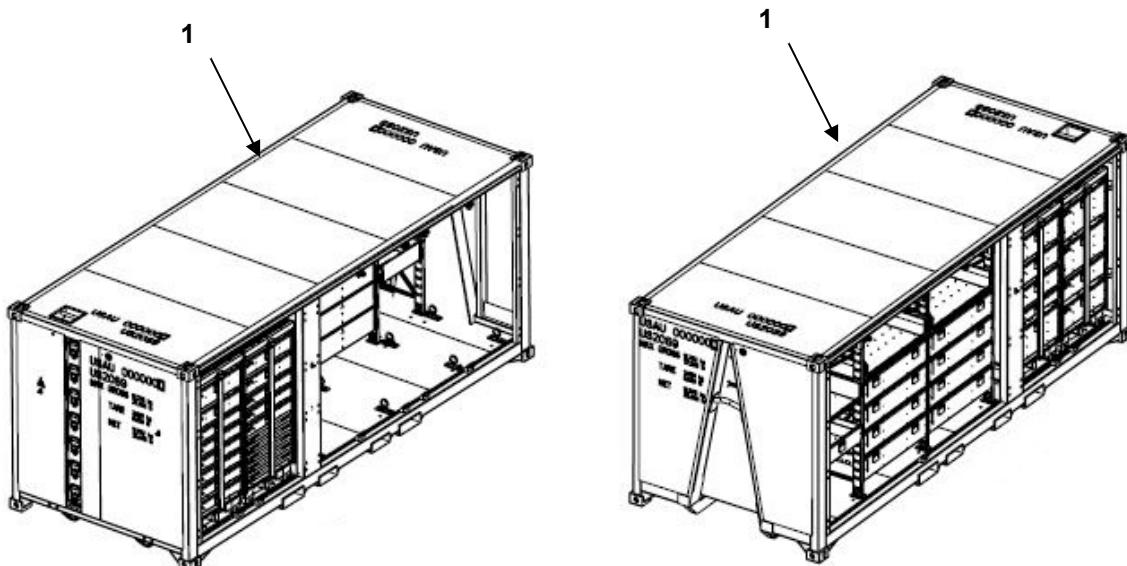ECASL CONFIGURATION #3

Note: Doors removed for clarity

FIGURE 3A ECASL CONFIGURATION #3


(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0103 FIGURE 3A ECASL CONFIGURATION #3	
1	8145-01-654-0914	1NSG3	75000003-001	.ECASL #3 GREEN UOC: FAA	1
1	8145-01-654-0919	1NSG3	75000003-002	.ECASL #3 TAN UOC: FAB	1
END OF FIGURE 3A					

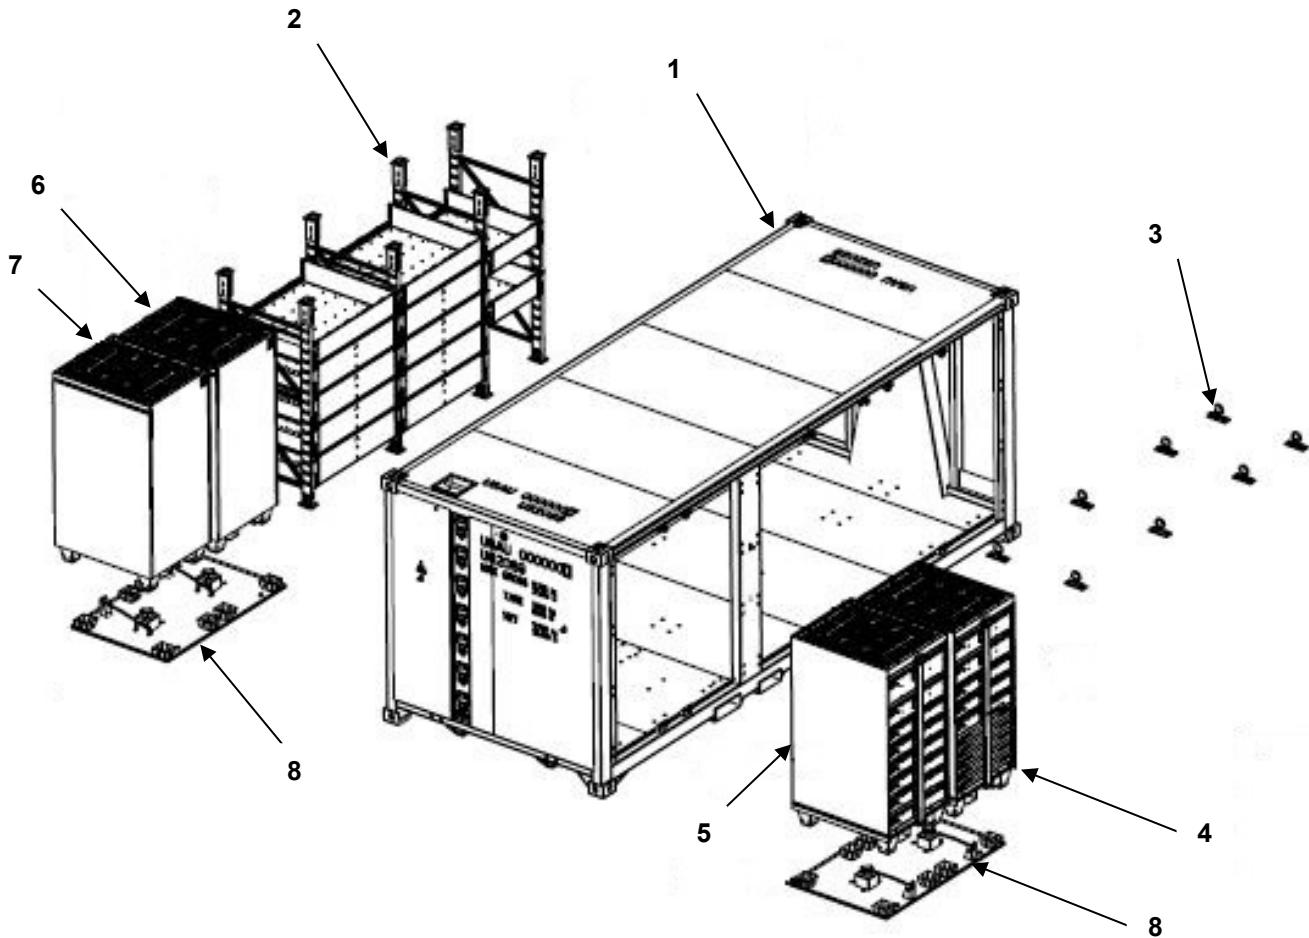ECASL CONFIGURATION #3 PARTS

Note: Doors removed for clarity

FIGURE 3B ECASL CONFIGURATION #3 PARTS


(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0103 FIGURE 3B ECASL CONFIGURATION #3 PARTS	
NA	8145-01-654-0914	1NSG3	75000003-001	.ECASL #3 GREEN UOC: FAA	1
1	8150-01-598-3304	1NSG3	15002003-001	..FPU-20-3 GREEN UOC: FAA	1
2	8145-01-524-0249	1NSG3	15310023-001	..1/2 PARTS STORAGE AID GREEN UOC: FAA	1
3	8145-01-513-6262	1NSG3	16509501-001	..TIE-DOWN RINGS GREEN UOC: FAA	8
4	8145-01-502-2494	1NSG3	15700021-001	..MODULE #21 GREEN UOC: FAA	1
5	8145-01-523-4040	1NSG3	15700022-001	..MODULE #22 GREEN UOC: FAA	1
6	8145-01-523-4011	1NSG3	15700023-001	..MODULE #23 GREEN UOC: FAA	1
7	8145-01-501-0900	1NSG3	15700026-001	..MODULE #26 GREEN UOC: FAA	1
8	8145-01-598-3344	1NSG3	15530122-001	..REMOVABLE CRADLE GREEN UOC: FAA	2
NA	8145-01-523-4068	1NSG3	15524001	..4" DRAWER DIVIDER	4
NA	8145-01-523-4149	1NSG3	15524004	..6" DRAWER DIVIDER	2
NA	8145-01-523-4145	1NSG3	15524005	..8" DRAWER DIVIDER	1
NA	8145-01-523-4142	1NSG3	15524006	..10" DRAWER DIVIDER	2
NA	8145-01-523-4140	1NSG3	15524007	..12" DRAWER DIVIDER	1
NA	8145-01-523-4138	1NSG3	15524008	..16" DRAWER DIVIDER	2
NA	8145-01-654-0919	1NSG3	75000003-002	.ECASL #3 TAN UOC: FAB	1
1	8150-01-598-3223	1NSG3	15002003-002	..FPU-20-3 TAN UOC: FAB	1
2	8145-01-524-0249	1NSG3	15310023-002	..1/2 PARTS STORAGE AID TAN UOC: FAB	1
3	8145-01-513-6262	1NSG3	16509501-002	..TIE-DOWN RINGS TAN UOC: FAB, FAB	8
4	8145-01-502-2494	1NSG3	15700021-002	..MODULE #21 TAN UOC: FAB	1
5	8145-01-523-4040	1NSG3	15700022-002	..MODULE #22 TAN UOC: FAB	1
6	8145-01-523-4011	1NSG3	15700023-002	..MODULE #23 TAN UOC: FAB	1
7	8145-01-501-0900	1NSG3	15700026-002	..MODULE #26 TAN UOC: FAB	1
8	8145-01-598-3354	1NSG3	15530122-002	..REMOVABLE CRADLE TAN UOC: FAB	2
NA	8145-01-523-4068	1NSG3	15524001	..4" DRAWER DIVIDER	4
NA	8145-01-523-4149	1NSG3	15524004	..6" DRAWER DIVIDER	2
NA	8145-01-523-4145	1NSG3	15524005	..8" DRAWER DIVIDER	1
NA	8145-01-523-4142	1NSG3	15524006	..10" DRAWER DIVIDER	2
NA	8145-01-523-4140	1NSG3	15524007	..12" DRAWER DIVIDER	1
NA	8145-01-523-4138	1NSG3	15524008	..16" DRAWER DIVIDER	2
END OF FIGURE 3B					

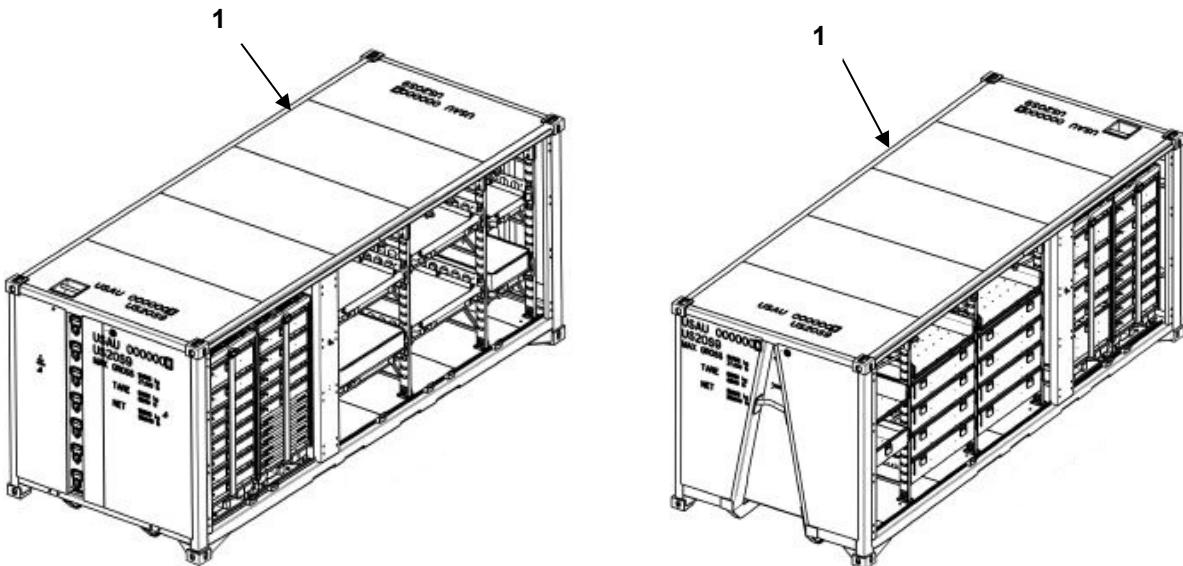ECASL CONFIGURATION #4

Note: Doors removed for clarity

FIGURE 4A ECASL CONFIGURATION #4


(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0104 FIGURE 4A ECASL CONFIGURATION #4	
1	8145-01-654-0942	1NSG3	75000004-001	.ECASL #4 GREEN UOC: FAA	1
1	8145-01-654-0943	1NSG3	75000004-002	.ECASL #4 TAN UOC: FAB	1
END OF FIGURE 4A					

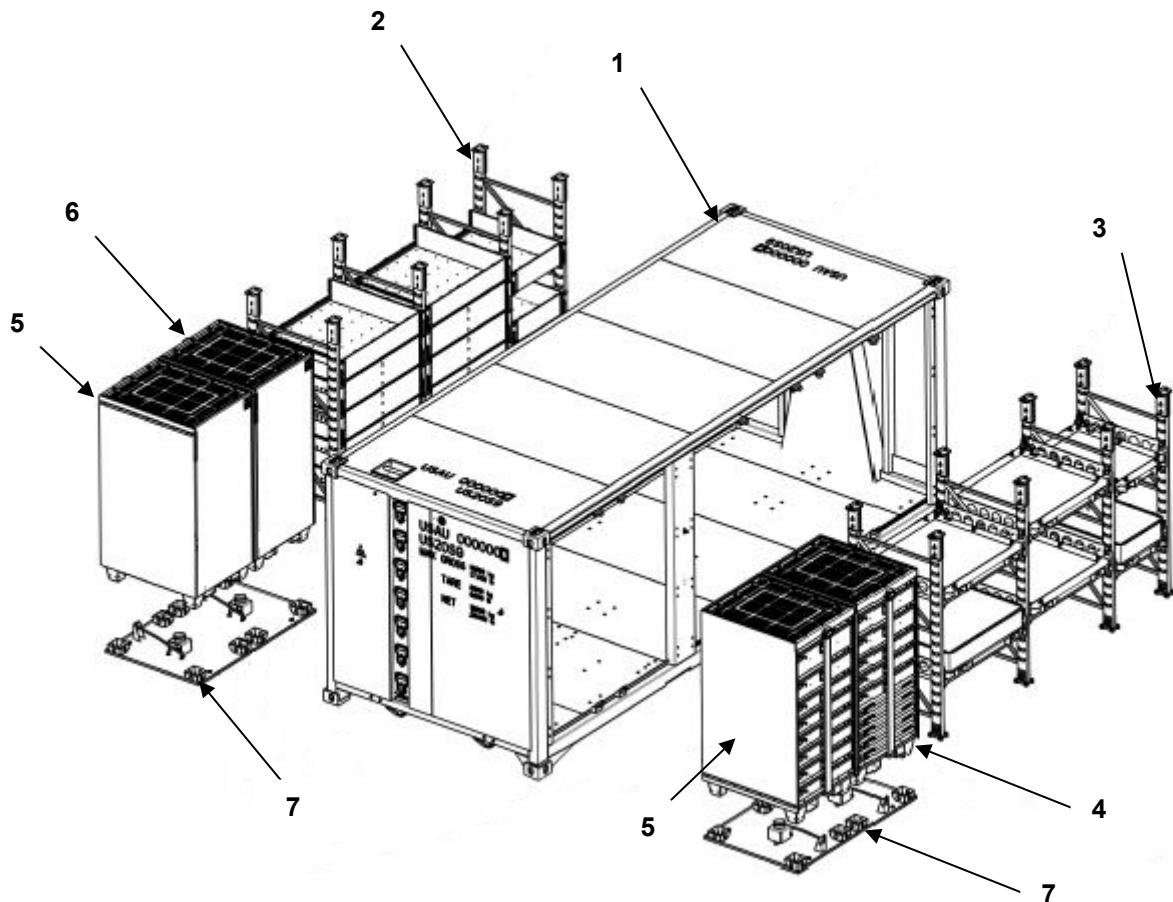ECASL CONFIGURATION #4 PARTS

Note: Doors removed for clarity

FIGURE 4B ECASL CONFIGURATION #4 PARTS


(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0104 FIGURE 4B ECASL CONFIGURATION #4 PARTS	
NA	8145-01-654-0942	1NSG3	75000004-001	.ECASL #4 GREEN UOC: FAA	1
1	8150-01-598-3304	1NSG3	15002003-001	..FPU-20-3 GREEN UOC: FAA	1
2	8145-01-524-0249	1NSG3	15310023-001	..1/2 PARTS STORAGE AID GREEN UOC: FAA	1
3	8145-01-524-0244	1NSG3	15310022-001	..1/2 BULK STORAGE AID GREEN UOC: FAA	1
4	8145-01-502-2494	1NSG3	15700021-001	..MODULE #21 GREEN UOC: FAA	1
5	8145-01-523-4040	1NSG3	15700022-001	..MODULE #22 GREEN UOC: FAA	2
6	8145-01-523-4011	1NSG3	15700023-001	..MODULE #23 GREEN UOC: FAA	1
7	8145-01-598-3344	1NSG3	15530122-001	..REMOVABLE CRADLE GREEN UOC: FAA	2
NA	8145-01-523-4068	1NSG3	15524001	.4" DRAWER DIVIDER	2
NA	8145-01-523-4149	1NSG3	15524004	.6" DRAWER DIVIDER	4
NA	8145-01-523-4145	1NSG3	15524005	.8" DRAWER DIVIDER	2
NA	8145-01-523-4142	1NSG3	15524006	.10" DRAWER DIVIDER	4
NA	8145-01-523-4140	1NSG3	15524007	.12" DRAWER DIVIDER	1
NA	8145-01-523-4138	1NSG3	15524008	.16" DRAWER DIVIDER	1
NA	8145-01-654-0943	1NSG3	75000004-002	.ECASL #4 TAN UOC: FAB	1
1	8150-01-598-3223	1NSG3	15002003-002	..FPU-20-3 TAN UOC: FAB	1
2	8145-01-524-0249	1NSG3	15310023-002	..1/2 PARTS STORAGE AID TAN UOC: FAB	1
3	8145-01-524-0244	1NSG3	15310022-002	..1/2 BULK STORAGE AID TAN UOC: FAA	1
4	8145-01-502-2494	1NSG3	15700021-002	..MODULE #21 TAN UOC: FAB	1
5	8145-01-523-4040	1NSG3	15700022-002	..MODULE #22 TAN UOC: FAB	2
6	8145-01-523-4011	1NSG3	15700023-002	..MODULE #23 TAN UOC: FAB	1
7	8145-01-598-3354	1NSG3	15530122-002	..REMOVABLE CRADLE TAN UOC: FAB	2
NA	8145-01-523-4068	1NSG3	15524001	.4" DRAWER DIVIDER	2
NA	8145-01-523-4149	1NSG3	15524004	.6" DRAWER DIVIDER	4
NA	8145-01-523-4145	1NSG3	15524005	.8" DRAWER DIVIDER	2
NA	8145-01-523-4142	1NSG3	15524006	.10" DRAWER DIVIDER	4
NA	8145-01-523-4140	1NSG3	15524007	.12" DRAWER DIVIDER	1
NA	8145-01-523-4138	1NSG3	15524008	.16" DRAWER DIVIDER	1
END OF FIGURE 4B					

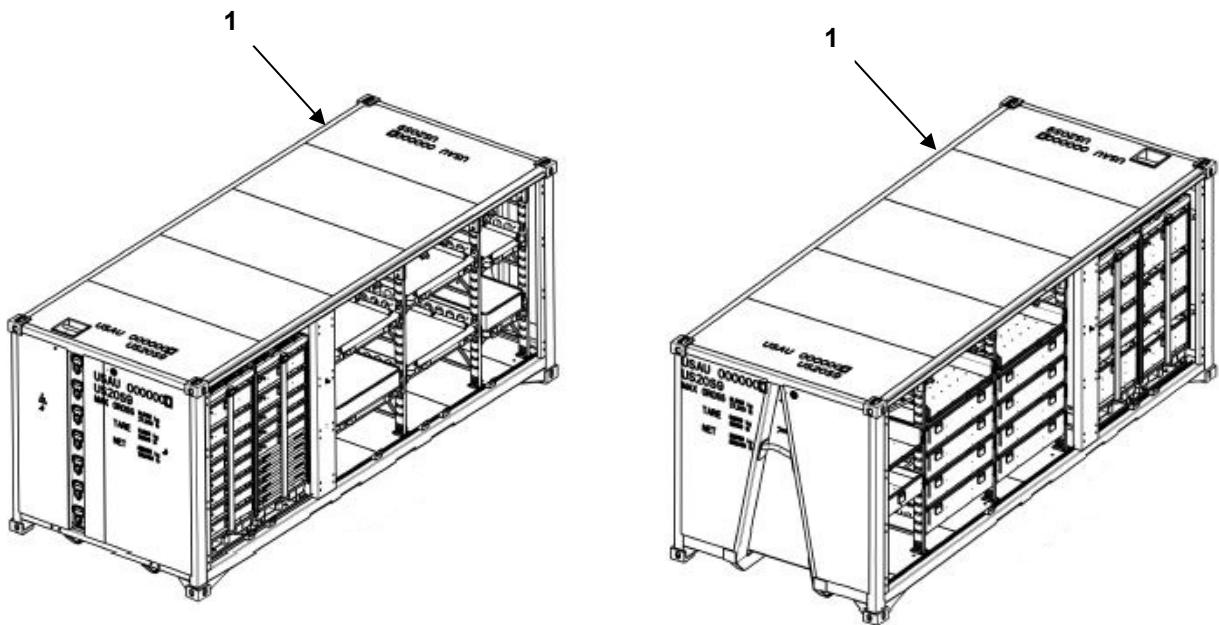ECASL CONFIGURATION #5

Note: Doors removed for clarity

FIGURE 5A ECASL CONFIGURATION #5

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0105 FIGURE 5A ECASL CONFIGURATION #5	
1	8145-01-654-0963	1NSG3	75000005-001	.ECASL #5 GREEN UOC: FAA	1
1	8145-01-654-0968	1NSG3	75000005-002	.ECASL #5 TAN UOC: FAB	1
END OF FIGURE 5A					

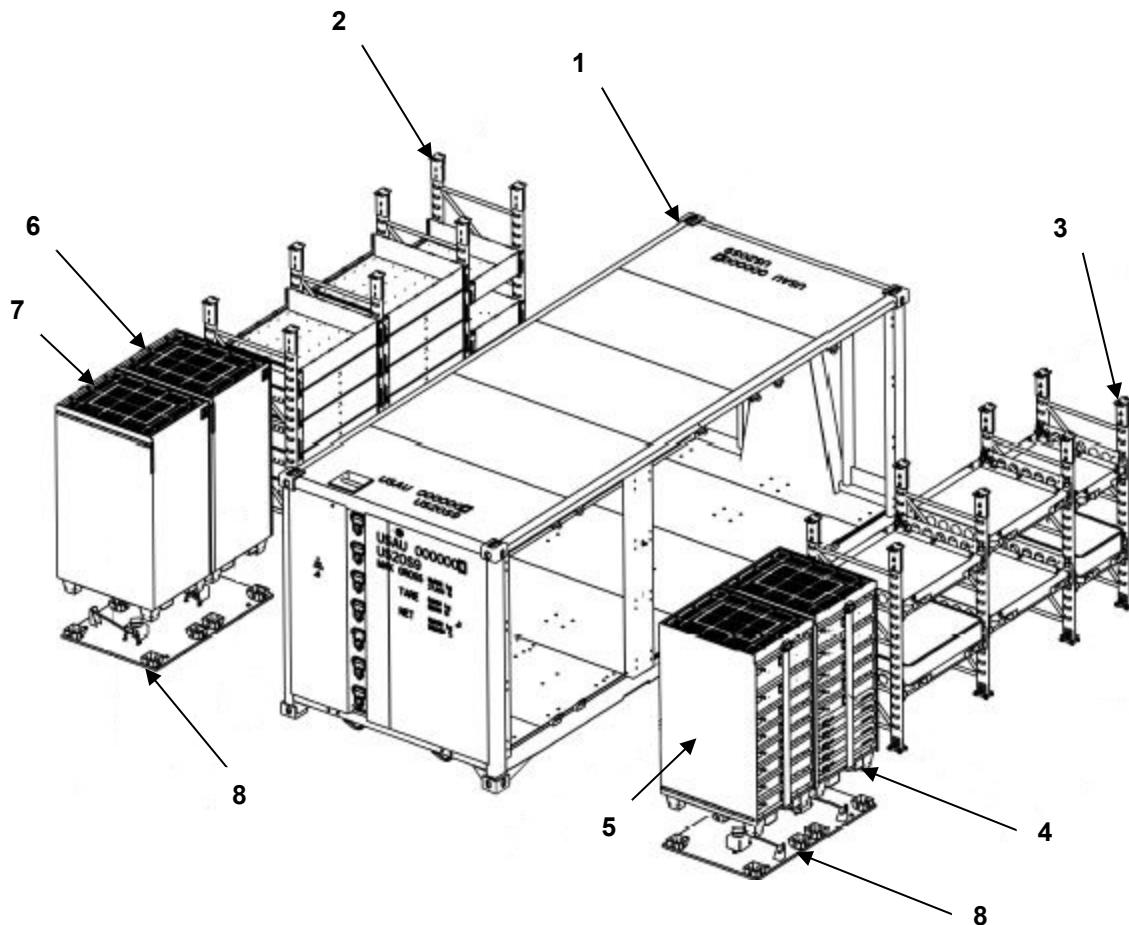ECASL CONFIGURATION #5 PARTS

Note: Doors removed for clarity

FIGURE 5B ECASL CONFIGURATION #5 PARTS

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0105 FIGURE 5B ECASL CONFIGURATION #5 PARTS	
NA	8145-01-654-0963	1NSG3	75000005-001	.ECASL #5 GREEN UOC: FAA	1
1	8150-01-598-3304	1NSG3	15002003-001	..FPU-20-3 GREEN UOC: FAA	1
2	8145-01-524-0249	1NSG3	15310023-001	..1/2 PARTS STORAGE AID GREEN UOC: FAA	1
3	8145-01-524-0244	1NSG3	15310022-001	..1/2 BULK STORAGE AID GREEN UOC: FAA	1
4	8145-01-502-2494	1NSG3	15700021-001	..MODULE #21 GREEN UOC: FAA	1
5	8145-01-523-4040	1NSG3	15700022-001	..MODULE #22 GREEN UOC: FAA	1
6	8145-01-523-4011	1NSG3	15700023-001	..MODULE #23 GREEN UOC: FAA	1
7	8145-01-501-0900	1NSG3	15700026-001	..MODULE #26 GREEN UOC: FAA	1
8	8145-01-598-3344	1NSG3	15530122-001	..REMOVABLE CRADLE GREEN UOC: FAA	2
NA	8145-01-523-4068	1NSG3	15524001	..4" DRAWER DIVIDER	4
NA	8145-01-523-4149	1NSG3	15524004	..6" DRAWER DIVIDER	2
NA	8145-01-523-4145	1NSG3	15524005	..8" DRAWER DIVIDER	1
NA	8145-01-523-4142	1NSG3	15524006	..10" DRAWER DIVIDER	2
NA	8145-01-523-4140	1NSG3	15524007	..12" DRAWER DIVIDER	1
NA	8145-01-523-4138	1NSG3	15524008	..16" DRAWER DIVIDER	2
NA	8145-01-654-0968	1NSG3	75000005-002	.ECASL #5 TAN UOC: FAB	1
1	8150-01-598-3223	1NSG3	15002003-002	..FPU-20-3 TAN UOC: FAB	1
2	8145-01-524-0249	1NSG3	15310023-002	..1/2 PARTS STORAGE AID TAN UOC: FAB	1
3	8145-01-524-0244	1NSG3	15310022-002	..1/2 BULK STORAGE AID TAN UOC: FAA	1
4	8145-01-502-2494	1NSG3	15700021-002	..MODULE #21 TAN UOC: FAB	1
5	8145-01-523-4040	1NSG3	15700022-002	..MODULE #22 TAN UOC: FAB	1
6	8145-01-523-4011	1NSG3	15700023-002	..MODULE #23 TAN UOC: FAB	1
7	8145-01-501-0900	1NSG3	15700026-002	..MODULE #26 TAN UOC: FAB	1
8	8145-01-598-3354	1NSG3	15530122-002	..REMOVABLE CRADLE TAN UOC: FAB	2
NA	8145-01-523-4068	1NSG3	15524001	..4" DRAWER DIVIDER	4
NA	8145-01-523-4149	1NSG3	15524004	..6" DRAWER DIVIDER	2
NA	8145-01-523-4145	1NSG3	15524005	..8" DRAWER DIVIDER	1
NA	8145-01-523-4142	1NSG3	15524006	..10" DRAWER DIVIDER	2
NA	8145-01-523-4140	1NSG3	15524007	..12" DRAWER DIVIDER	1
NA	8145-01-523-4138	1NSG3	15524008	..16" DRAWER DIVIDER	2
END OF FIGURE 5B					

END OF WORK PACKAGE

This page was intentionally left blank


PARTS SUPPORTING INFORMATION

FPU® SYSTEMS OPERATION MANUAL
(INCLUDING REPAIR PARTS)

EXPEDITIONARY CONTAINERIZED AUTHORIZED STOCKAGE LIST (ECASL)
BOH FPU Field Pack-up Units

REPAIR PARTS LIST FPU-20-3

FPU-20-3 CARGO CONTAINER

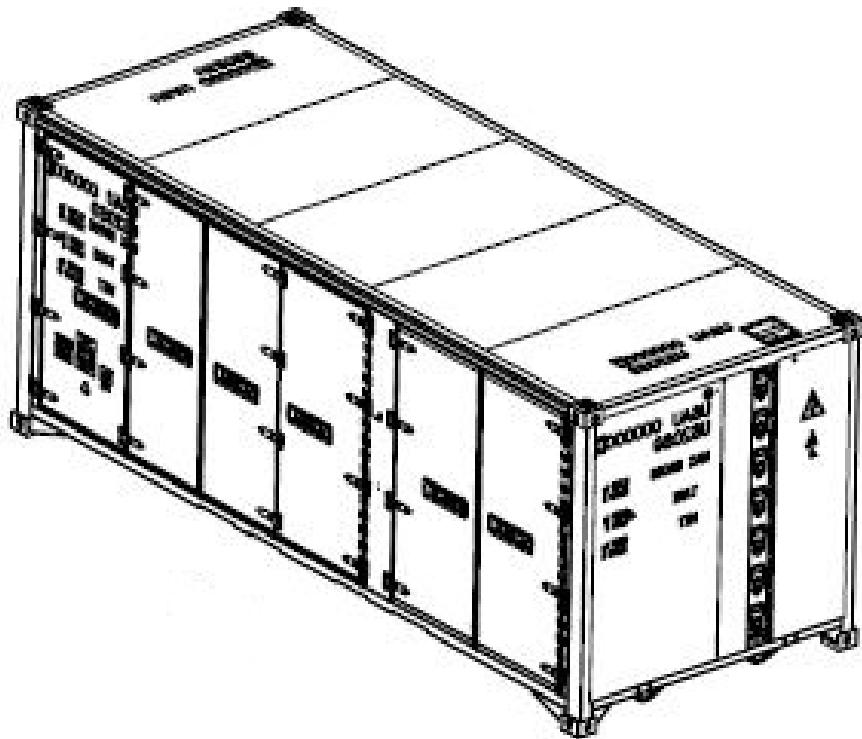

FIGURES #6 through #27

FPU-20-3 CONTAINER


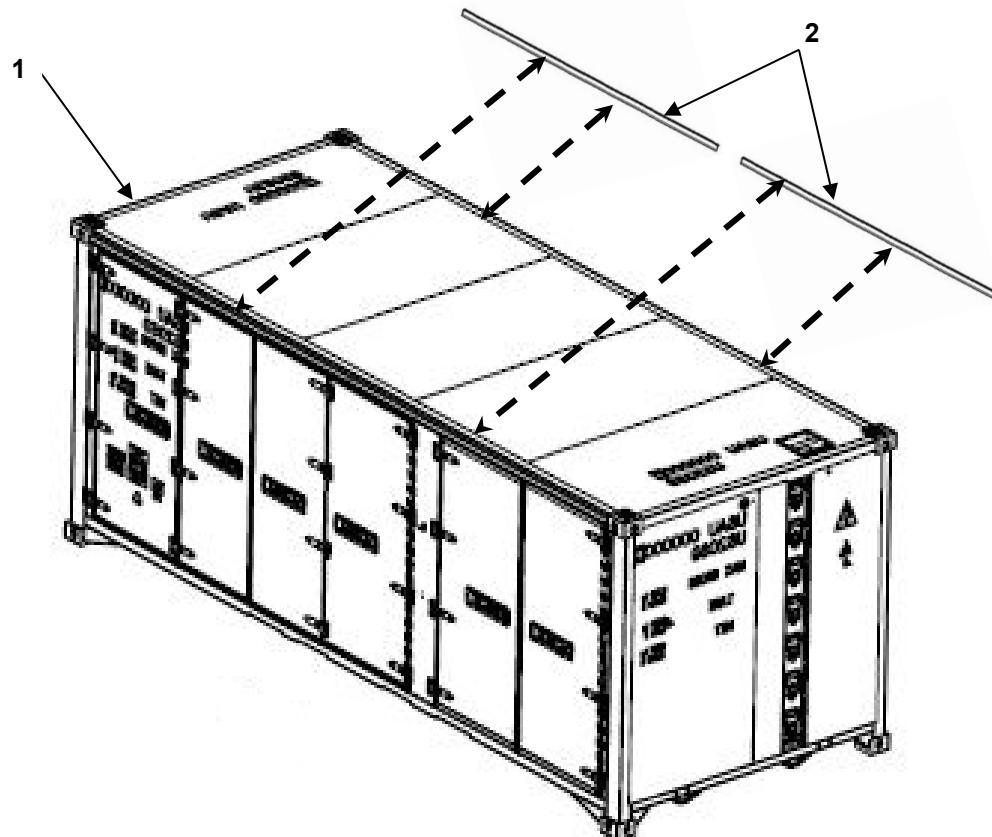


FIGURE 6 FPU-20-3 CONTAINER

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 02 FIGURE 6 FPU-20-3 CONTAINER	
1	8150-01-598-3304	1NSG3	15002003-001	.FPU-20-3 GREEN UOC : FAA	1
1	8150-01-598-3223	1NSG3	15002003-002	.FPU-20-3 TAN UOC : FAB	1
2	Not Assigned	1NSG3	16230074-001	..DRIP EDGE GREEN UOC: FAA	4
2	Not Assigned	1NSG3	16230074-002	..DRIP EDGE TAN UOC: FAB	4
END OF FIGURE 6					


FPU-20-3 DOOR ASSEMBLIES # 1 THROUGH #6 STREET SIDE
NOTE: APPLICABLE ONLY TO THE FPU 20-3

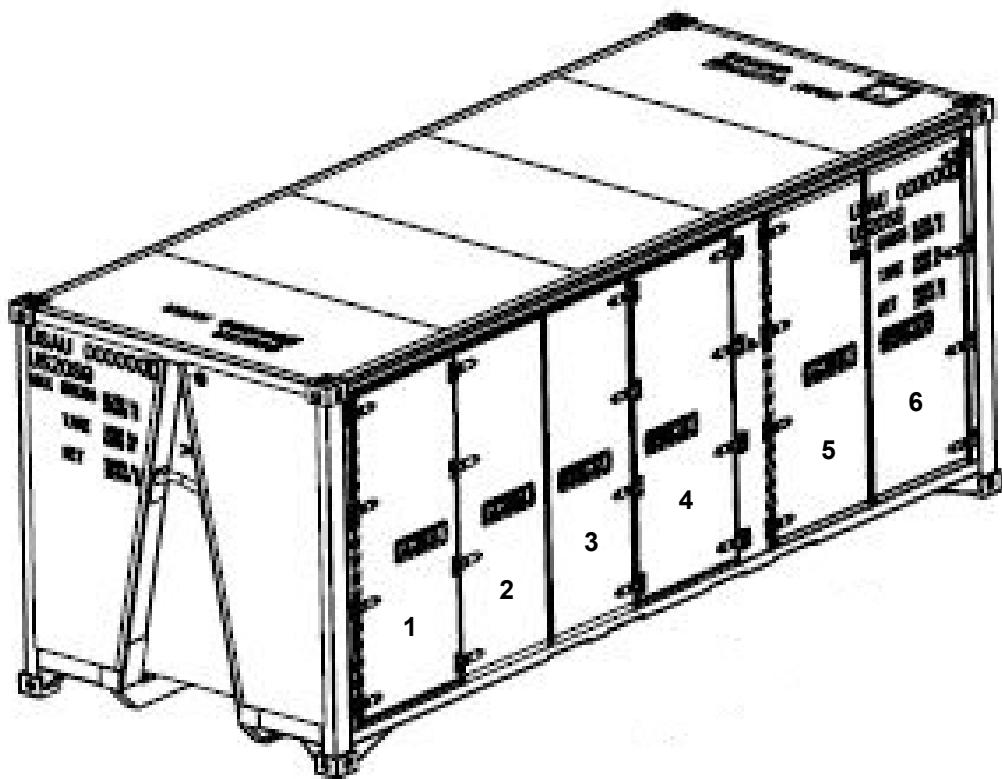

**FIGURE 7A FPU-20-3 DOOR ASSEMBLIES #1 THROUGH #6
STREET SIDE**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0201 FIGURE 7A FPU 20-3 DOOR ASSEMBLIES STREET SIDE	
1	Not Assigned	1NSG3	15981521-001	.DOOR COMPLETE #1 GREEN	1
1	Not Assigned	1NSG3	15981521-002	.DOOR COMPLETE #1 TAN	1
2	Not Assigned	1NSG3	15981522-001	.DOOR COMPLETE #2 GREEN	1
2	Not Assigned	1NSG3	15981522-002	.DOOR COMPLETE #2 TAN	1
3	Not Assigned	1NSG3	15981523-001	.DOOR COMPLETE #3 GREEN	1
3	Not Assigned	1NSG3	15981523-002	.DOOR COMPLETE #3 TAN	1
4	Not Assigned	1NSG3	15981524-001	.DOOR COMPLETE #4 GREEN	1
4	Not Assigned	1NSG3	15981524-002	.DOOR COMPLETE #4 TAN	1
5	Not Assigned	1NSG3	15981525-001	.DOOR COMPLETE #5 GREEN	1
5	Not Assigned	1NSG3	15981525-002	.DOOR COMPLETE #5 TAN	1
6	Not Assigned	1NSG3	15981526-001	.DOOR COMPLETE #6 GREEN	1
6	Not Assigned	1NSG3	15981526-002	.DOOR COMPLETE #6 TAN	1
END OF FIGURE 7A					

FPU-20-3 DOOR ASSEMBLIES #7 THROUGH #12 CURB
NOTE: APPLICABLE ONLY TO THE FPU 20-3

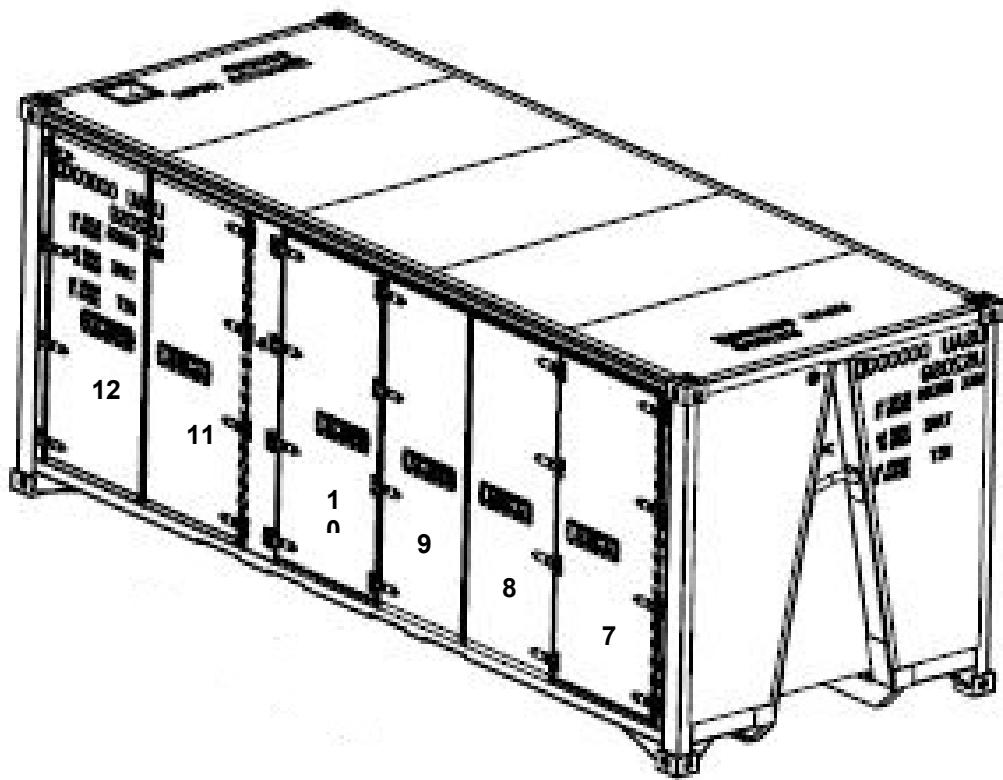

**FIGURE 7B FPU-20-3 DOOR ASSEMBLIES #7 THROUGH #12
CURB SIDE**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0201 FIGURE 7B FPU 20-3 DOOR ASSEMBLIES #7 THRU #12 CURB SIDE	
7	Not Assigned	1NSG3	16230151-001	.DOOR COMPLETE #7 GREEN	1
7	Not Assigned	1NSG3	16230151-002	.DOOR COMPLETE #7 TAN	1
8	Not Assigned	1NSG3	15981523-001	.DOOR COMPLETE #8 GREEN	1
8	Not Assigned	1NSG3	15981523-002	.DOOR COMPLETE #8 TAN	1
9	Not Assigned	1NSG3	15981522-001	.DOOR COMPLETE #9 GREEN	1
9	Not Assigned	1NSG3	15981522-002	.DOOR COMPLETE #9 TAN	1
10	Not Assigned	1NSG3	15981521-001	.DOOR COMPLETE #10 GREEN	1
10	Not Assigned	1NSG3	15981521-002	.DOOR COMPLETE #10 TAN	1
11	Not Assigned	1NSG3	15981526-001	.DOOR COMPLETE #11 GREEN	1
11	Not Assigned	1NSG3	15981526-002	.DOOR COMPLETE #11 TAN	1
12	Not Assigned	1NSG3	15981525-001	.DOOR COMPLETE #12 GREEN	1
12	Not Assigned	1NSG3	15981525-002	.DOOR COMPLETE #12 TAN	1
END OF FIGURE 7B					

DOOR ASSEMBLIES #1 AND #10
NOTE: APPLICABLE ONLY TO THE FPU 20-3

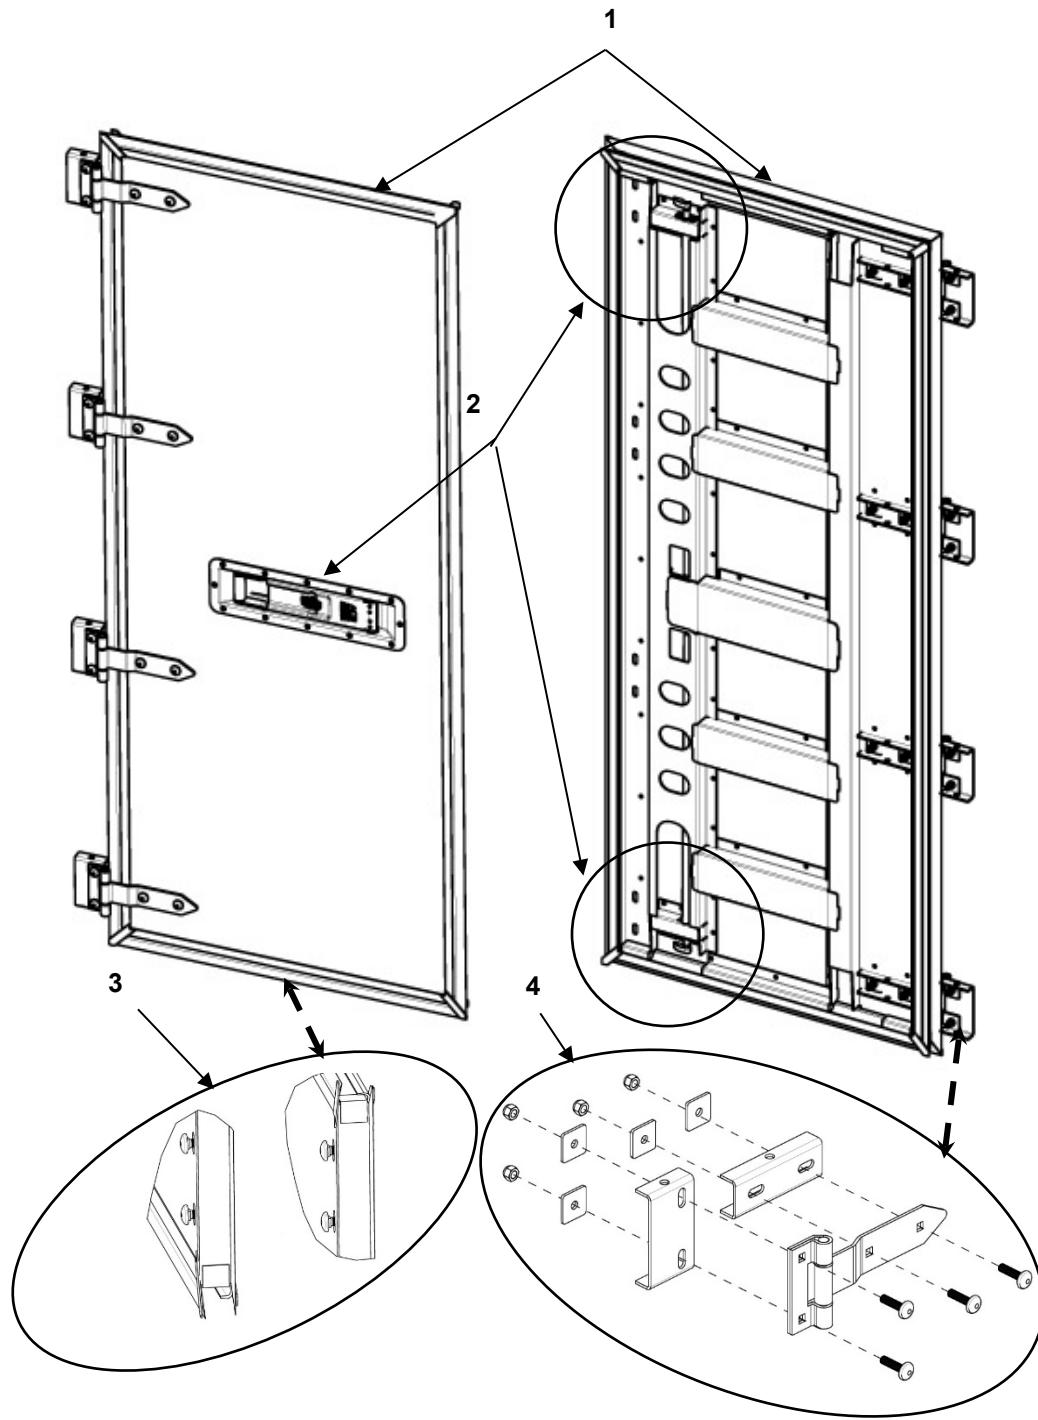


FIGURE 8 DOOR ASSEMBLIES #1 AND #10

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0201 FIGURE 8 FPU 20-3 DOOR ASSEMBLIES #1 AND #10	
1	Not Assigned	1NSG3	15981521-001	.DOOR COMPLETE #1 GREEN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/ HARDWARE	1
3	Not Assigned	1NSG3	15988515	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-001	..HINGE KIT W/HARDWARE GREEN	4
1	Not Assigned	1NSG3	15981521-002	.DOOR COMPLETE #1 TAN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/ HARDWARE	1
3	Not Assigned	1NSG3	15988515	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-002	..HINGE KIT W/HARDWARE TAN	4
1	Not Assigned	1NSG3	15981521-001	.DOOR COMPLETE #10 GREEN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/ HARDWARE	1
3	Not Assigned	1NSG3	15988515	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-001	..HINGE KIT W/HARDWARE GREEN	4
1	Not Assigned	1NSG3	15981521-002	.DOOR COMPLETE #10 TAN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/ HARDWARE	1
3	Not Assigned	1NSG3	15988515	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-002	..HINGE KIT W/HARDWARE TAN	4
END OF FIGURE 8					

DOOR ASSEMBLIES #2 AND #9
NOTE: APPLICABLE ONLY TO THE FPU 20-3

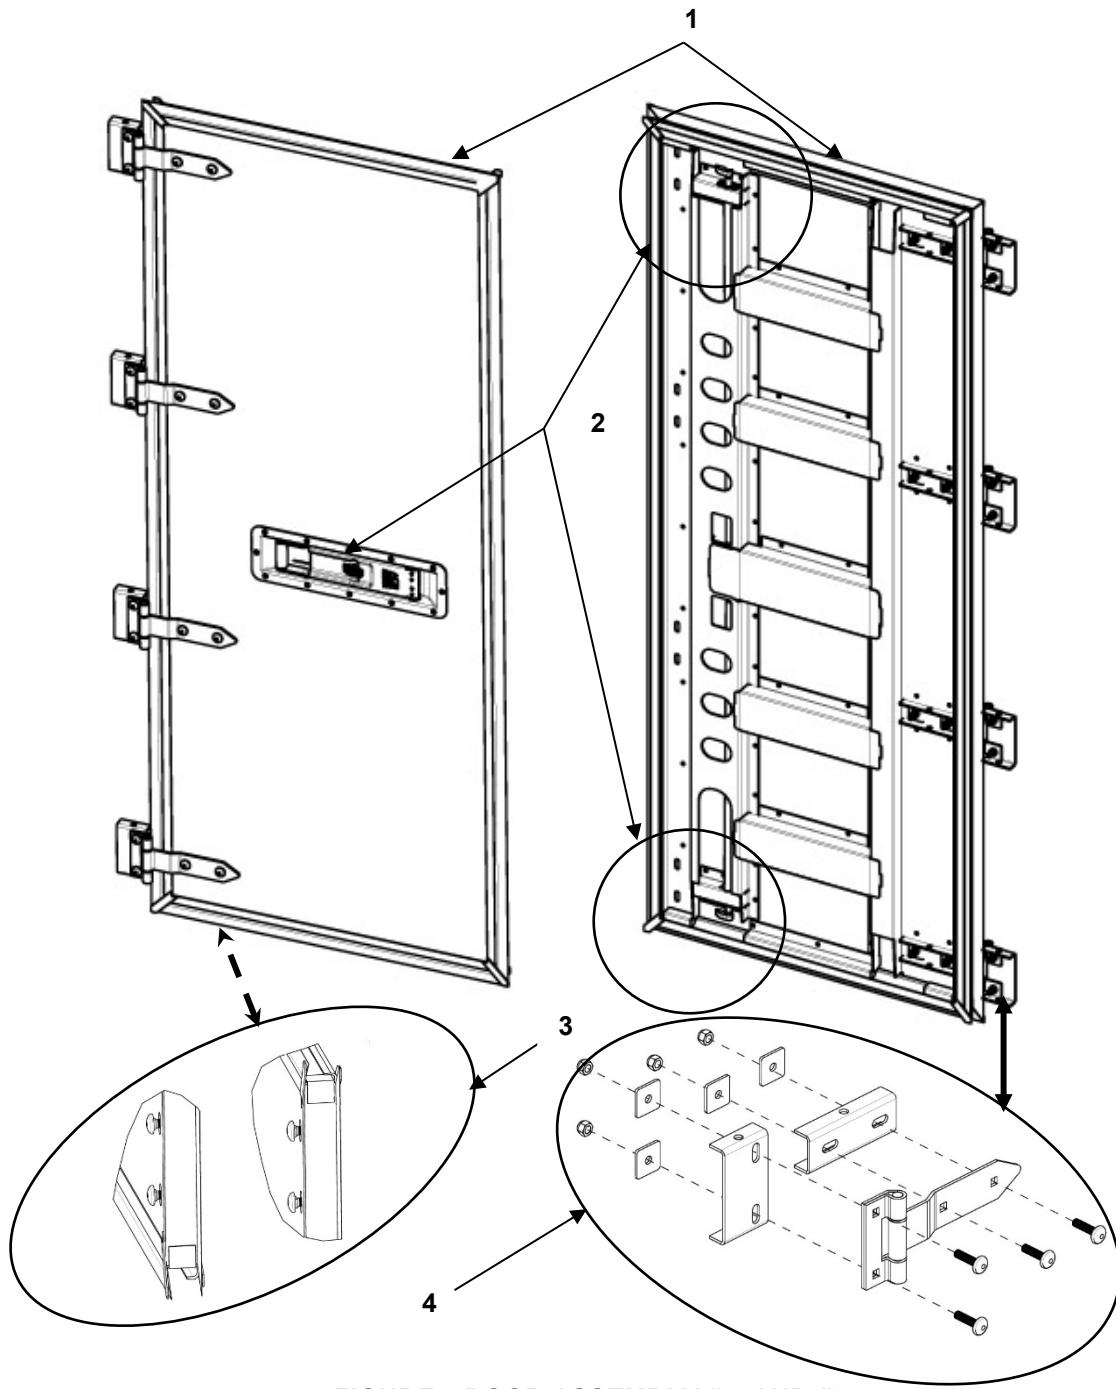


FIGURE 9 DOOR ASSEMBLY # 2 AND #9

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0201 FIGURE 9 FPU 20-3 DOOR ASSEMBLIES #2 AND #9	
1	Not Assigned	1NSG3	15981522-001	.DOOR COMPLETE #2 GREEN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988516	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-001	..HINGE KIT W/HARDWARE GREEN	4
1	Not Assigned	1NSG3	15981522-002	.DOOR COMPLETE # 2 TAN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988516	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-002	..HINGE KIT W/HARDWARE TAN	4
1	Not Assigned	1NSG3	15981522-001	.DOOR COMPLETE # 9 GREEN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988516	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-001	..HINGE KIT W/HARDWARE GREEN	4
1	Not Assigned	1NSG3	15981522-002	.DOOR COMPLETE # 9 TAN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988516	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-002	..HINGE KIT W/HARDWARE TAN	4
END OF FIGURE 9					

DOOR ASSEMBLIES #3 AND #8
NOTE: APPLICABLE ONLY TO THE FPU 20-3

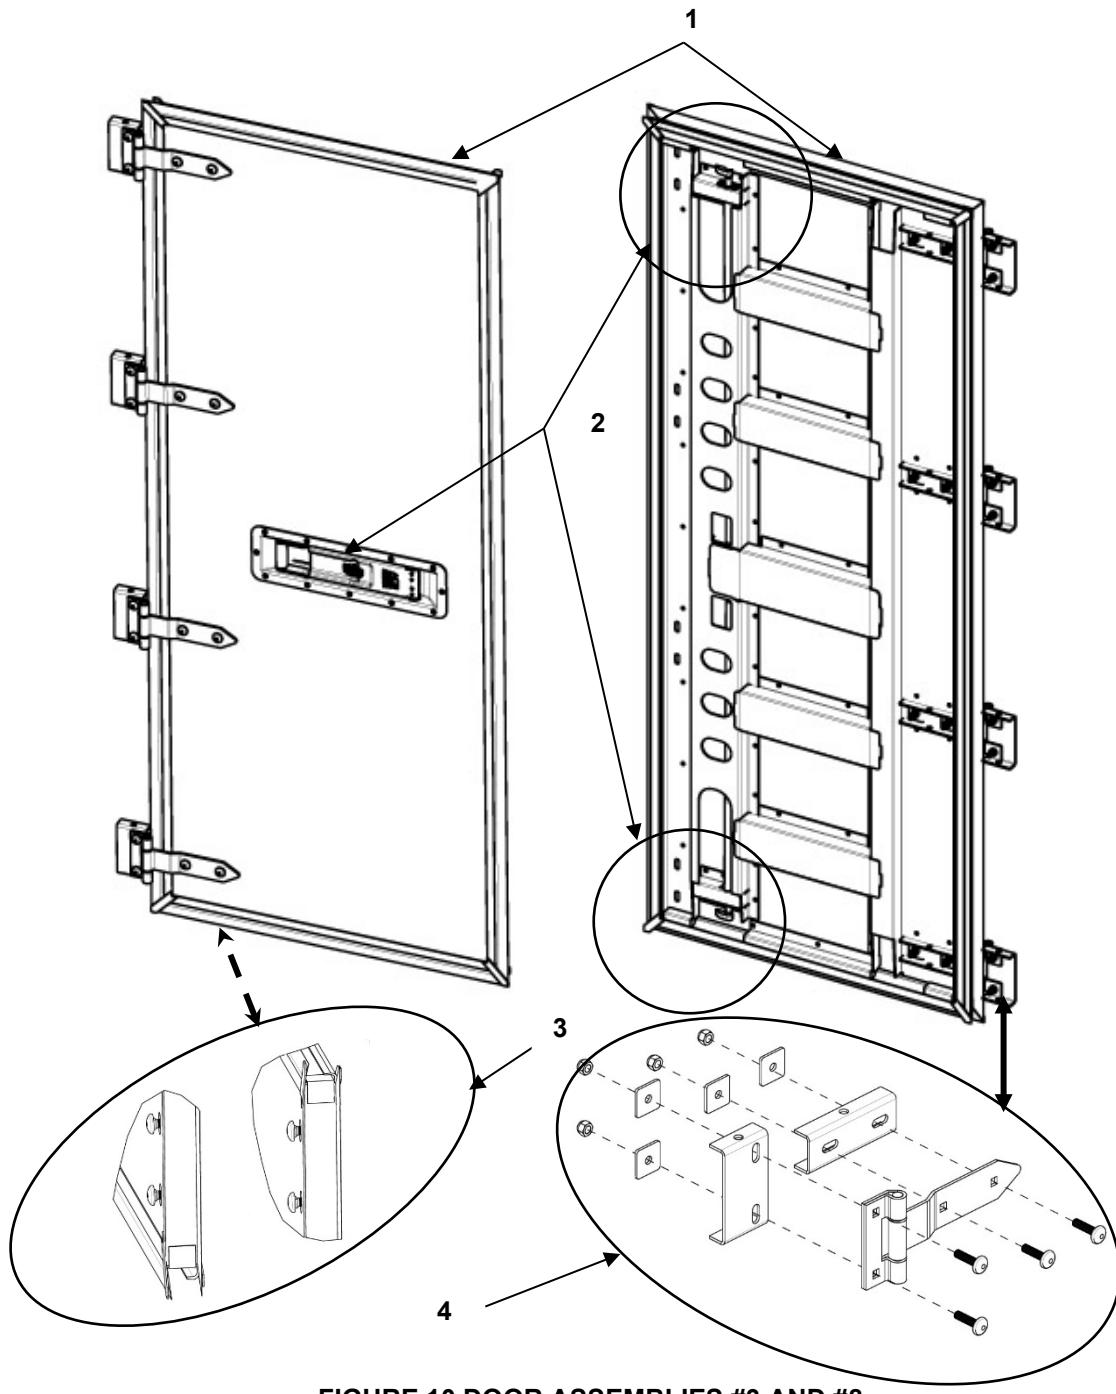


FIGURE 10 DOOR ASSEMBLIES #3 AND #8

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0201 FIGURE 10 FPU 20-3 DOOR ASSEMBLIES #3 AND #8	
1	Not Assigned	1NSG3	15981523-001	.DOOR COMPLETE #3 GREEN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988517	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-001	..HINGE KIT W/HARDWARE GREEN	4
1	Not Assigned	1NSG3	15981523-002	.DOOR COMPLETE #3 TAN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988517	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-002	..HINGE KIT W/HARDWARE TAN	4
1	Not Assigned	1NSG3	15981523-001	.DOOR COMPLETE #8 GREEN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988517	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-001	..HINGE KIT W/HARDWARE GREEN	4
1	Not Assigned	1NSG3	15981523-002	.DOOR COMPLETE #8 TAN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988517	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-002	..HINGE KIT W/HARDWARE TAN	4
END OF FIGURE 10					

DOOR ASSEMBLY #4
NOTE: APPLICABLE ONLY TO THE FPU 20-3

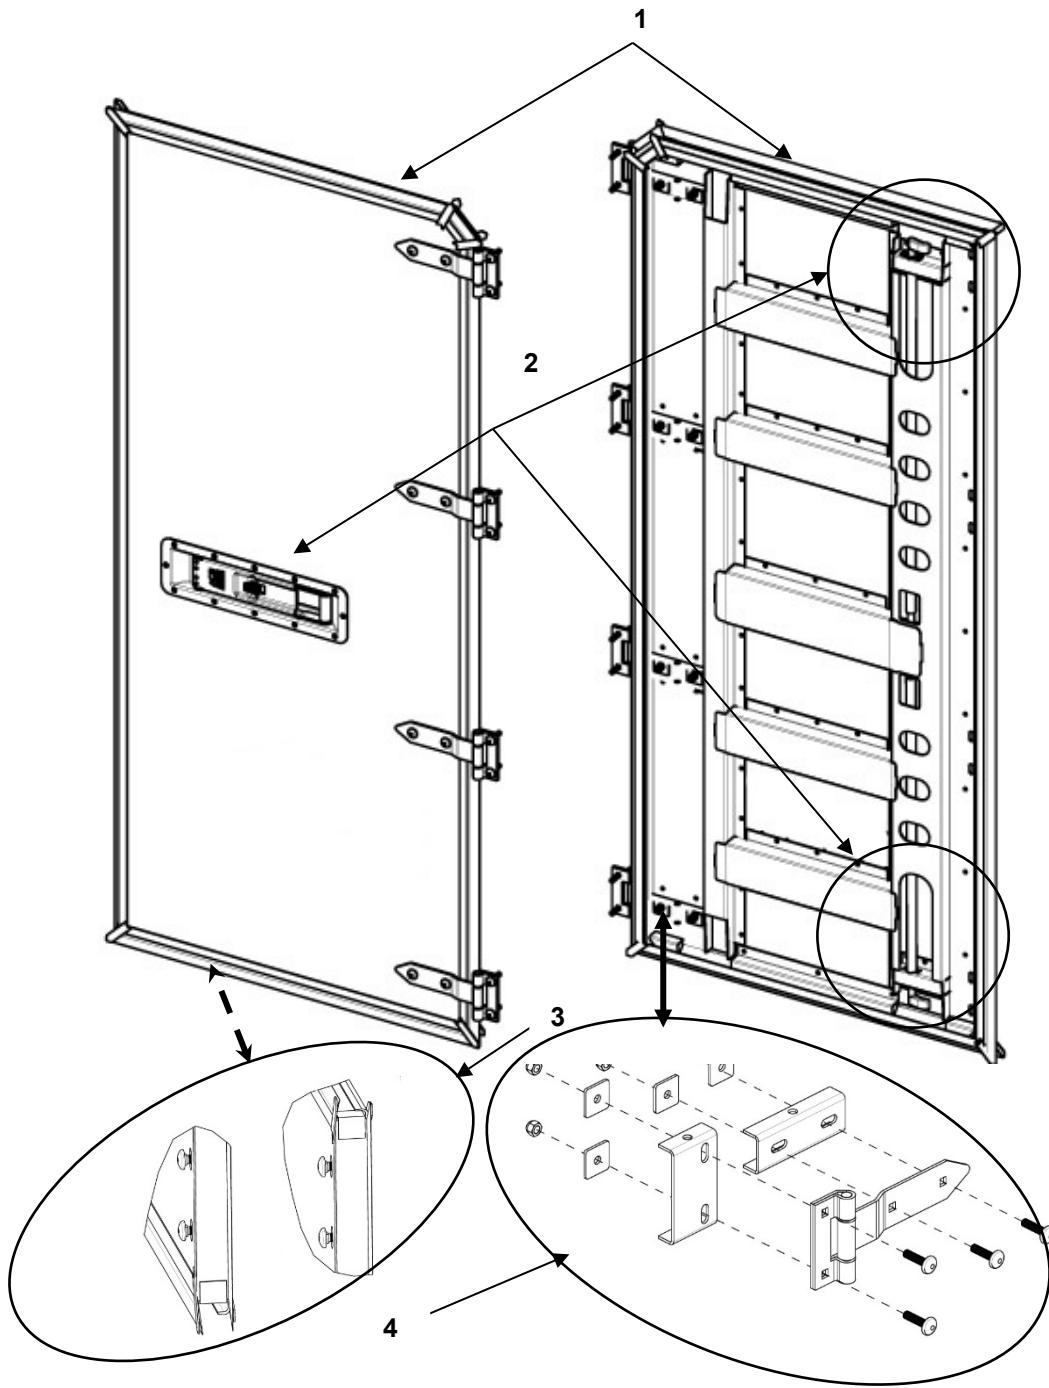


FIGURE 11 DOOR ASSEMBLY # 4

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0201 FIGURE 11 FPU 20-3 DOOR ASSEMBLY #4	
1	Not Assigned	1NSG3	15981524-001	.DOOR COMPLETE #4 GREEN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988518	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-001	..HINGE KIT W/HARDWARE GREEN	4
1	Not Assigned	1NSG3	15981524-002	.DOOR COMPLETE #4 TAN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988518	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-002	..HINGE KIT W/HARDWARE TAN	4
END OF FIGURE 11					

DOOR ASSEMBLIES #5 AND #12
NOTE: APPLICABLE ONLY TO THE FPU 20-3

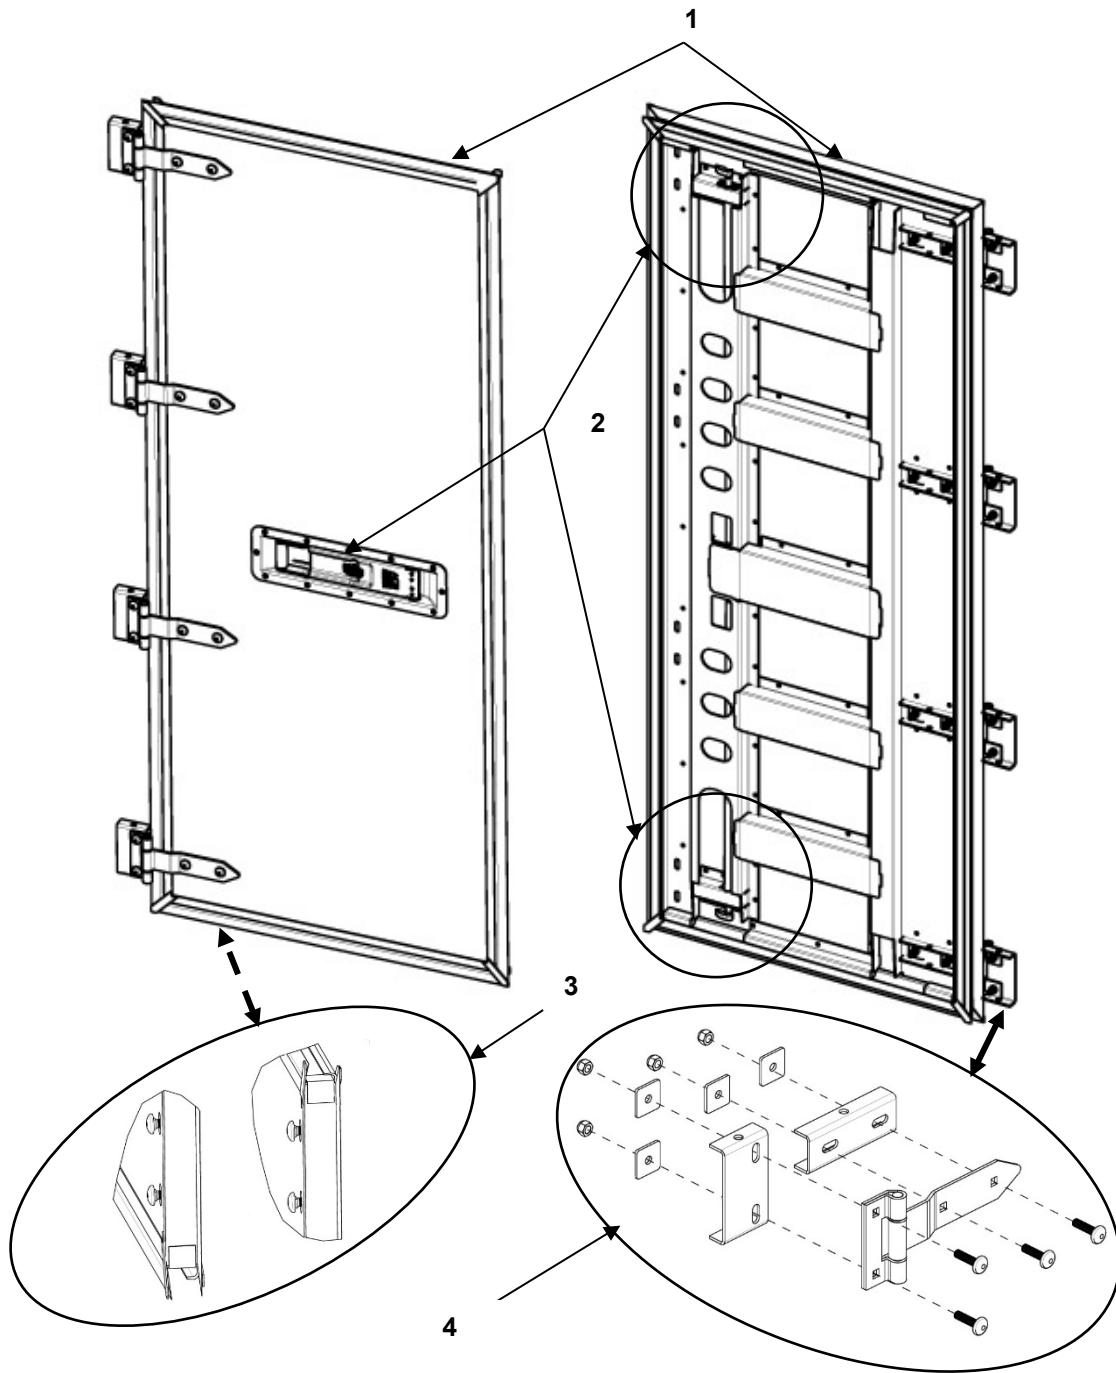


FIGURE 12 DOOR ASSEMBLIES #5 AND #12

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0201 FIGURE 12 FPU 20-3 FRONT DOOR ASSEMBLIES # 5 AND # 12	
1	Not Assigned	1NSG3	15981525-001	.DOOR COMPLETE #5 GREEN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988519	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-001	..HINGE KIT W/HARDWARE GREEN	4
1	Not Assigned	1NSG3	15981525-002	.DOOR COMPLETE # 5 TAN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988519	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-002	..HINGE KIT W/HARDWARE TAN	4
1	Not Assigned	1NSG3	15981525-001	.DOOR COMPLETE # 12 GREEN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988519	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-001	..HINGE KIT W/HARDWARE GREEN	4
1	Not Assigned	1NSG3	15981525-002	.DOOR COMPLETE # 12 TAN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988519	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-002	..HINGE KIT W/HARDWARE TAN	4
END OF FIGURE 12					

DOOR ASSEMBLIES #6 AND #11
NOTE: APPLICABLE ONLY TO THE FPU 20-3

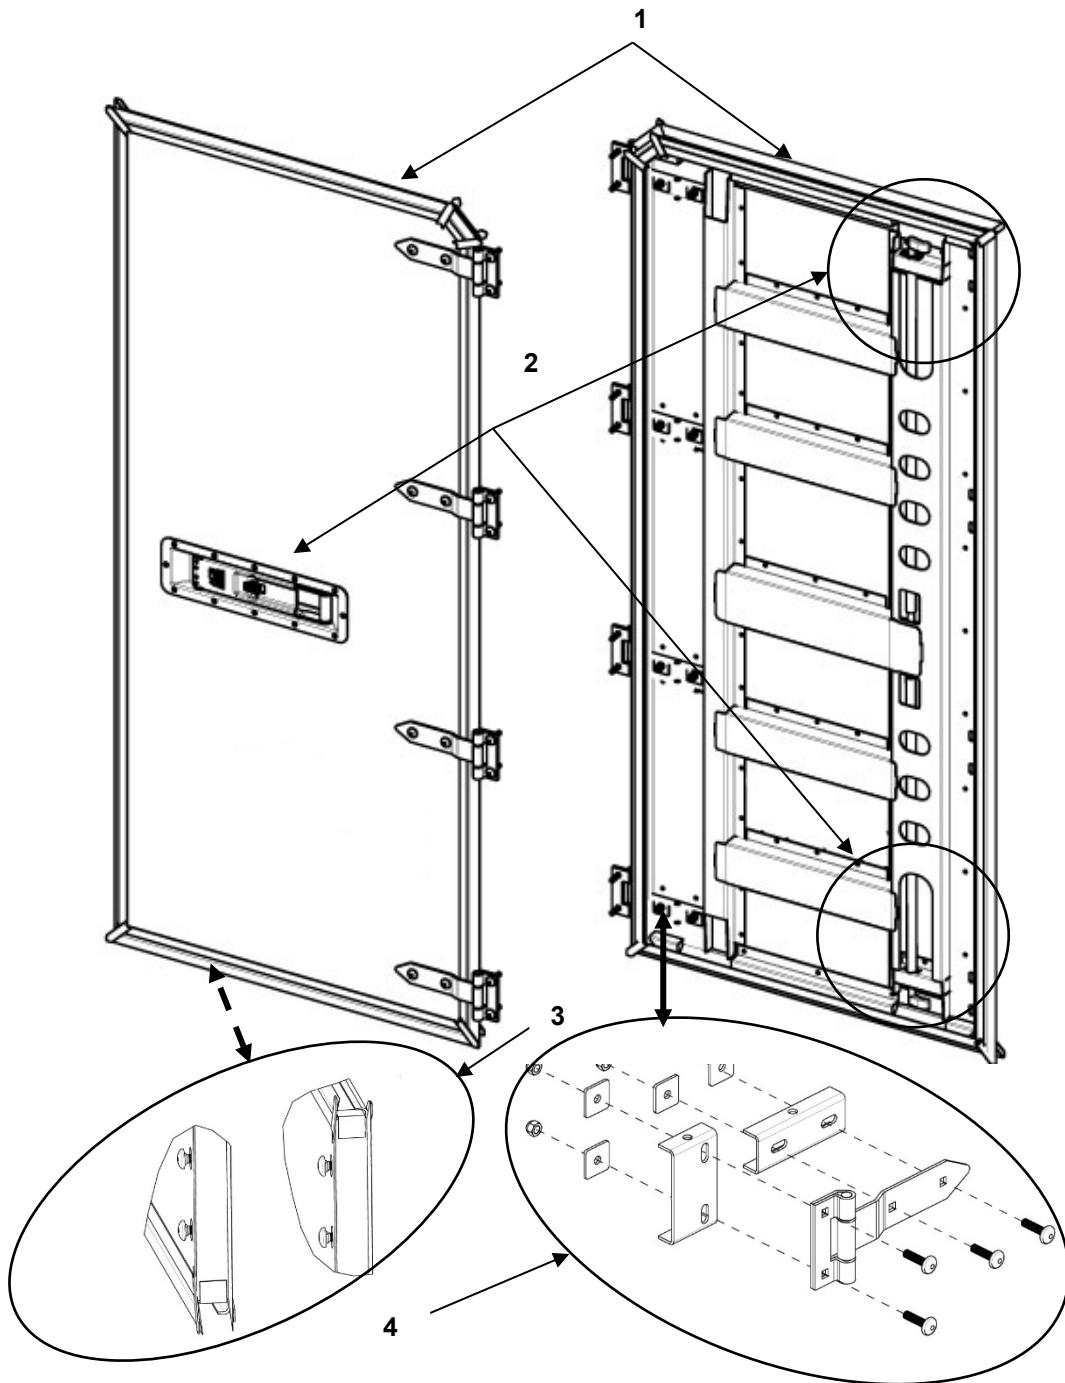


FIGURE 13 DOOR ASSEMBLIES #6 AND #11

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0201 FIGURE 13 FPU 20-3 DOOR ASSEMBLIES #6 AND #11	
1	Not Assigned	1NSG3	15981526-001	.DOOR COMPLETE #6 GREEN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988520	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-001	..HINGE KIT W/HARDWARE GREEN	4
1	Not Assigned	1NSG3	15981526-002	.DOOR COMPLETE #6 TAN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988520	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-002	..HINGE KIT W/HARDWARE TAN	4
1	Not Assigned	1NSG3	15981526-001	.DOOR COMPLETE #11 GREEN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988520	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-001	..HINGE KIT W/HARDWARE GREEN	4
1	Not Assigned	1NSG3	15981526-002	.DOOR COMPLETE #11 TAN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/HARDWARE	1
3	Not Assigned	1NSG3	15988520	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-002	..HINGE KIT W/HARDWARE TAN	4
END OF FIGURE 13					

DOOR ASSEMBLY #7
NOTE: APPLICABLE ONLY TO THE FPU 20-3

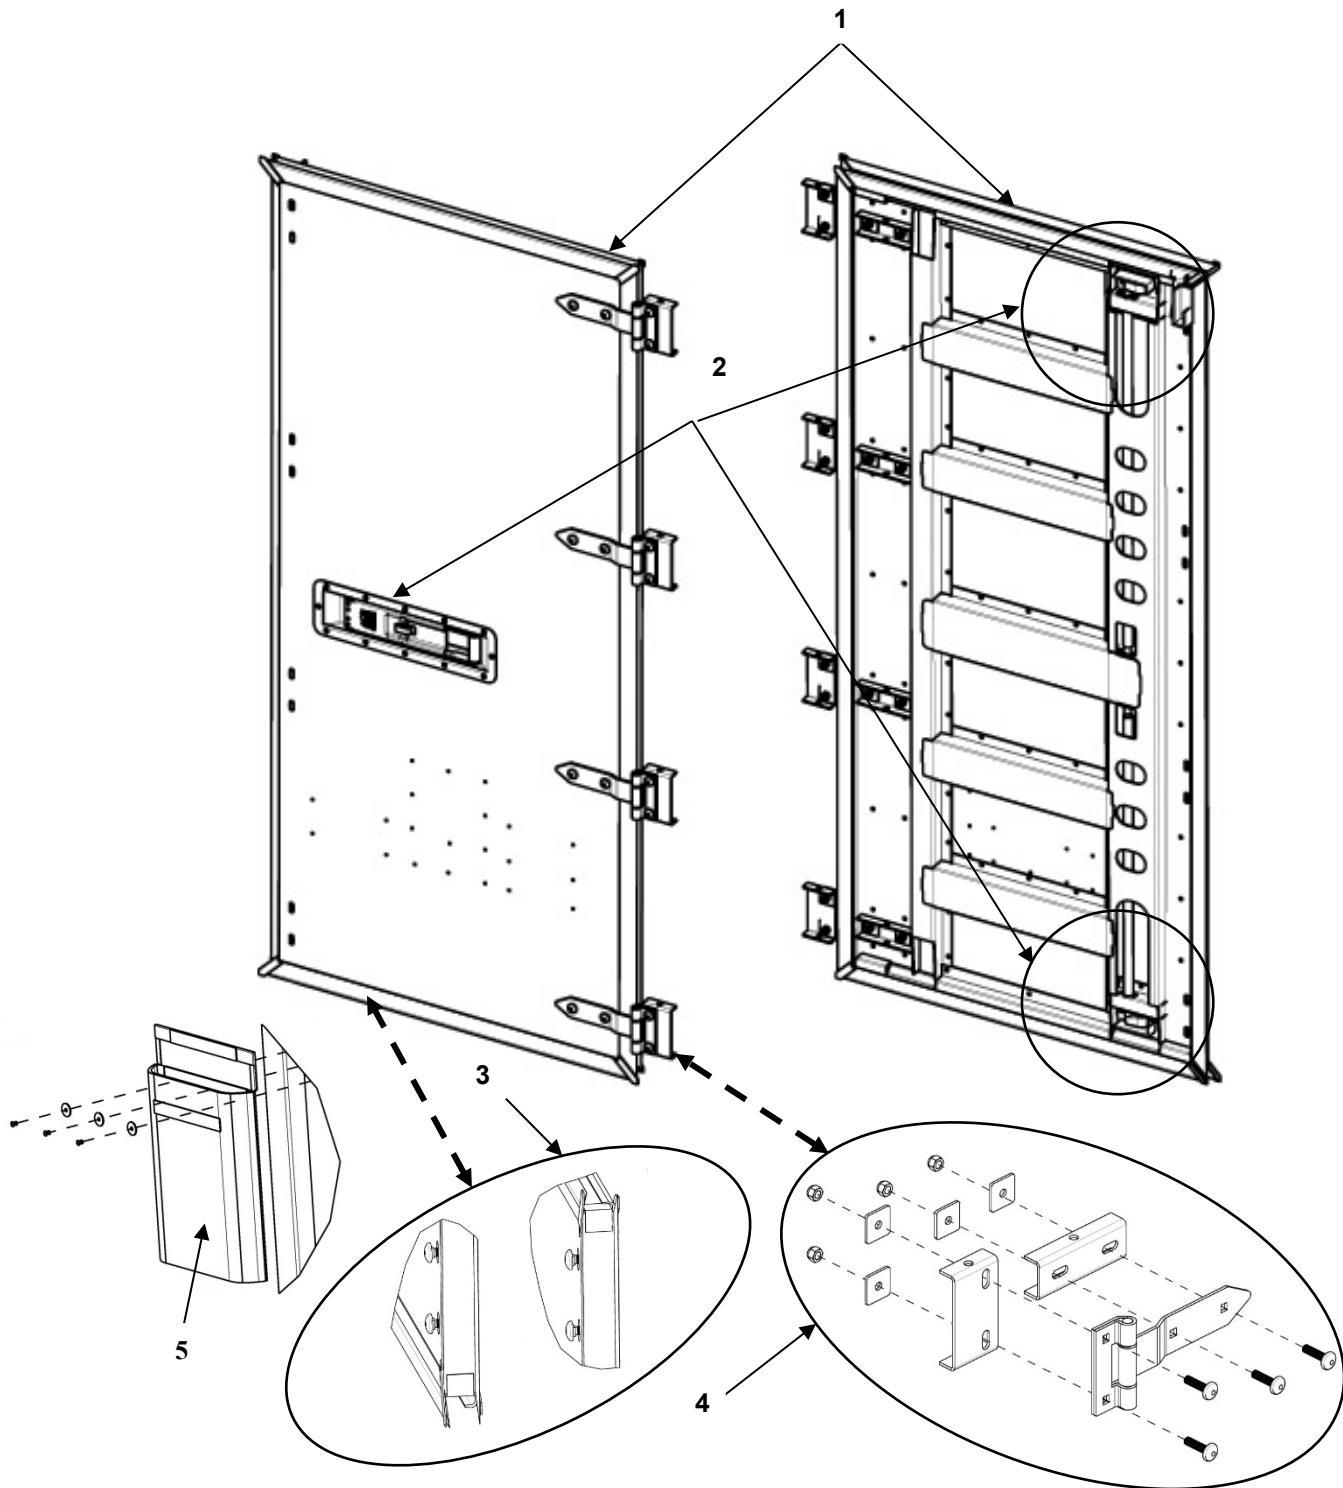
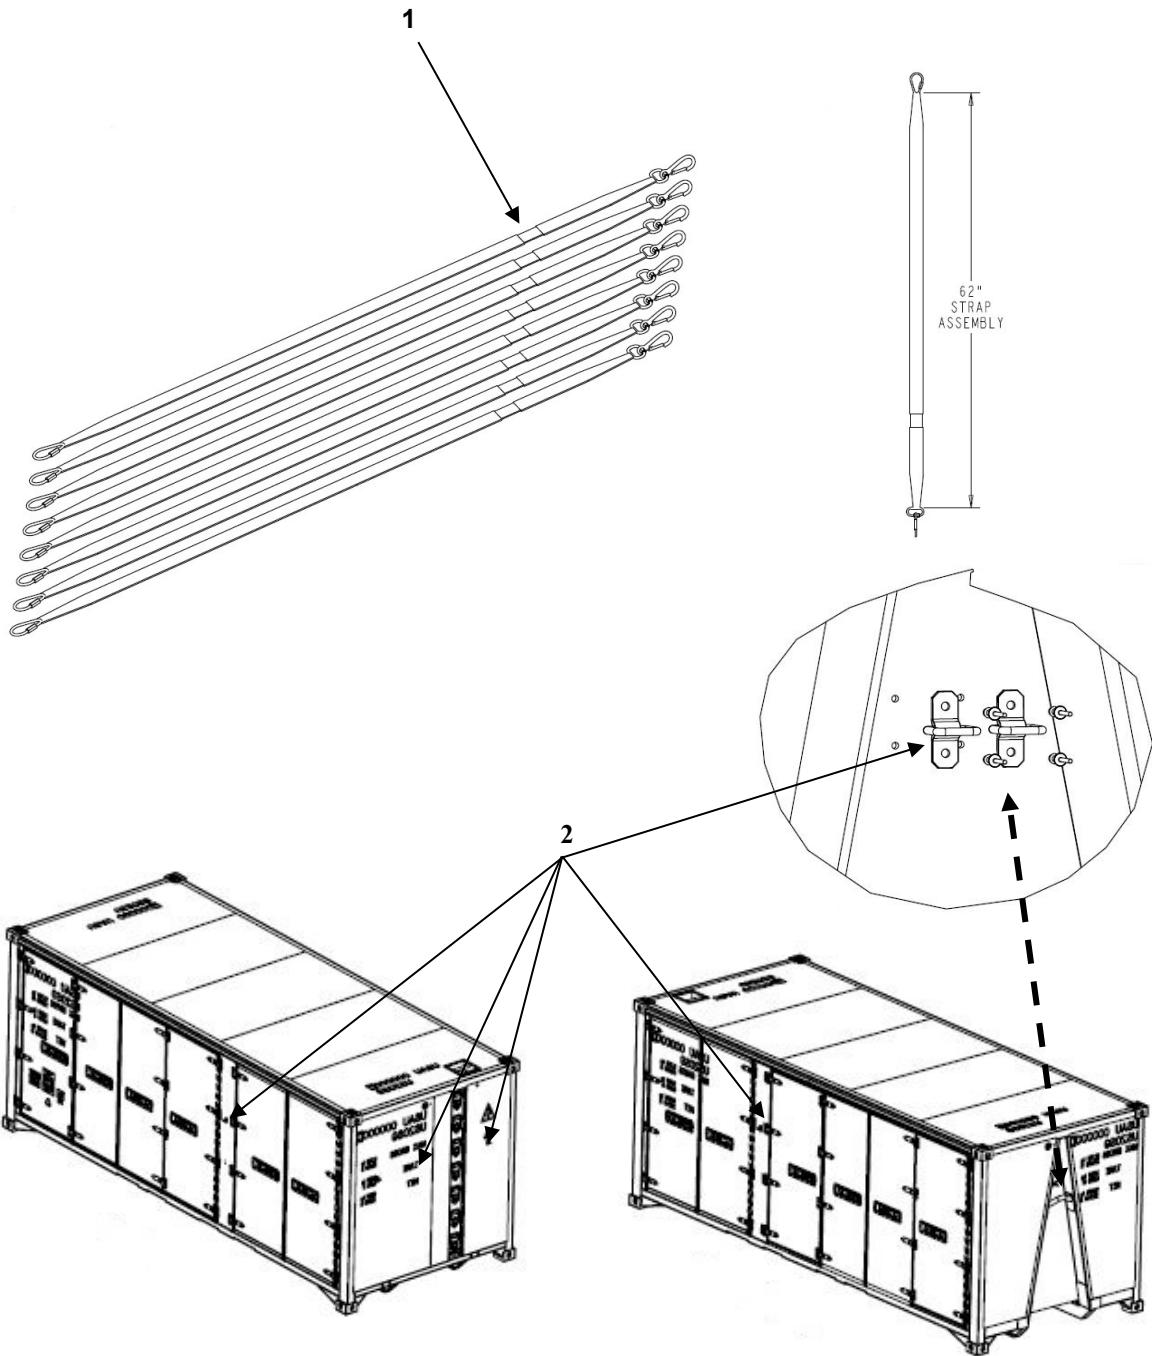
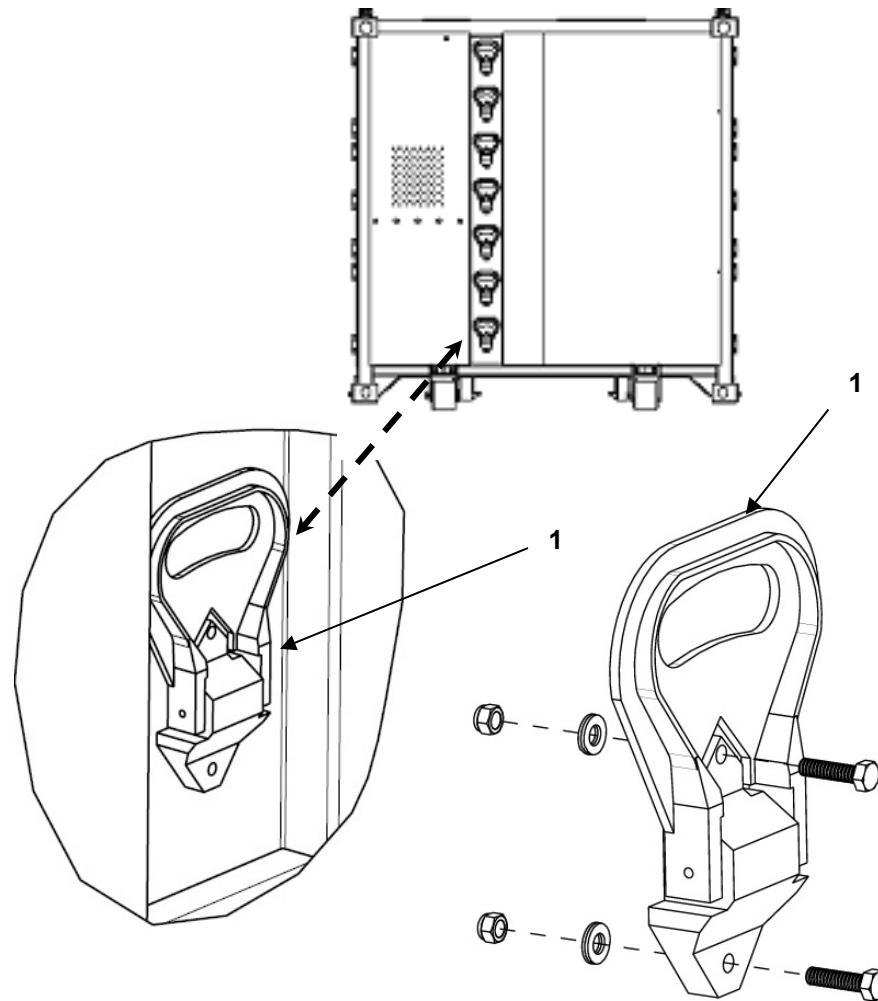


FIGURE 14 DOOR ASSEMBLY # 7

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0201 FIGURE 14 FPU 20-3 DOOR ASSEMBLY #7	
1	Not Assigned	1NSG3	16230151-001	.DOOR COMPLETE #7 GREEN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/ HARDWARE TAN	1
3	Not Assigned	1NSG3	15988518	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-001	..HINGE KIT W/ HARDWARE GREEN	4
5	Not Assigned	1NSG3	15982246	..DOCUMENT BAG KIT BLACK	1
1	Not Assigned	1NSG3	16230151-002	.DOOR COMPLETE #7 TAN	1
2	Not Assigned	1NSG3	15981513	..HANDLE KIT W/ HARDWARE TAN	1
3	Not Assigned	1NSG3	15988518	..DOOR SEAL KIT	1
4	Not Assigned	1NSG3	15988513-002	..HINGE KIT W/HARDWARE TAN	4
5	Not Assigned	1NSG3	15982246	..DOCUMENT BAG KIT BLACK	1
END OF FIGURE 14					

FPU 20-3 DOOR STRAPS**FIGURE 15 FPU 20-3 DOOR STRAPS**

(1) ITEM NO.	(2) NSN	(3) CAGE C	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0201 FIGURE 15 FPU 20-3 DOOR STRAPS	
1	Not Assigned	1NSG3	16230211	.STRAPS ASSEMBLY 62"	8
2	Not Assigned	1NSG3	15940110-001	.D-RING KIT GREEN	1
2	Not Assigned	1NSG3	15940110-002	.D-RING KIT TAN	1
3	Not Assigned	1NSG3	NA	..D-RING #700-ZN	1
4	Not Assigned	1NSG3	NA	..RIVET #SB68	2
NA	Not Assigned	1NSG3	NA	..SEALANT SIKA-FLEX 221	1
END OF FIGURE 15					

FOLDING STEPS**FIGURE 16 FOLDING STEPS**

(1) ITEM NO.	(2) NSN	(3) CAGE C	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0202 FIGURE 16 FOLDING STEPS	
1	Not Assigned	1NSG3	15988603-001	.FOOT STEP W/ MOUNTING HARDWARE GREEN	7
1	Not Assigned	1NSG3	15988603-002	.FOOT STEP W/ MOUNTING HARDWARE TAN	7
END OF FIGURE 16					

REAR ROLLER ASSEMBLY

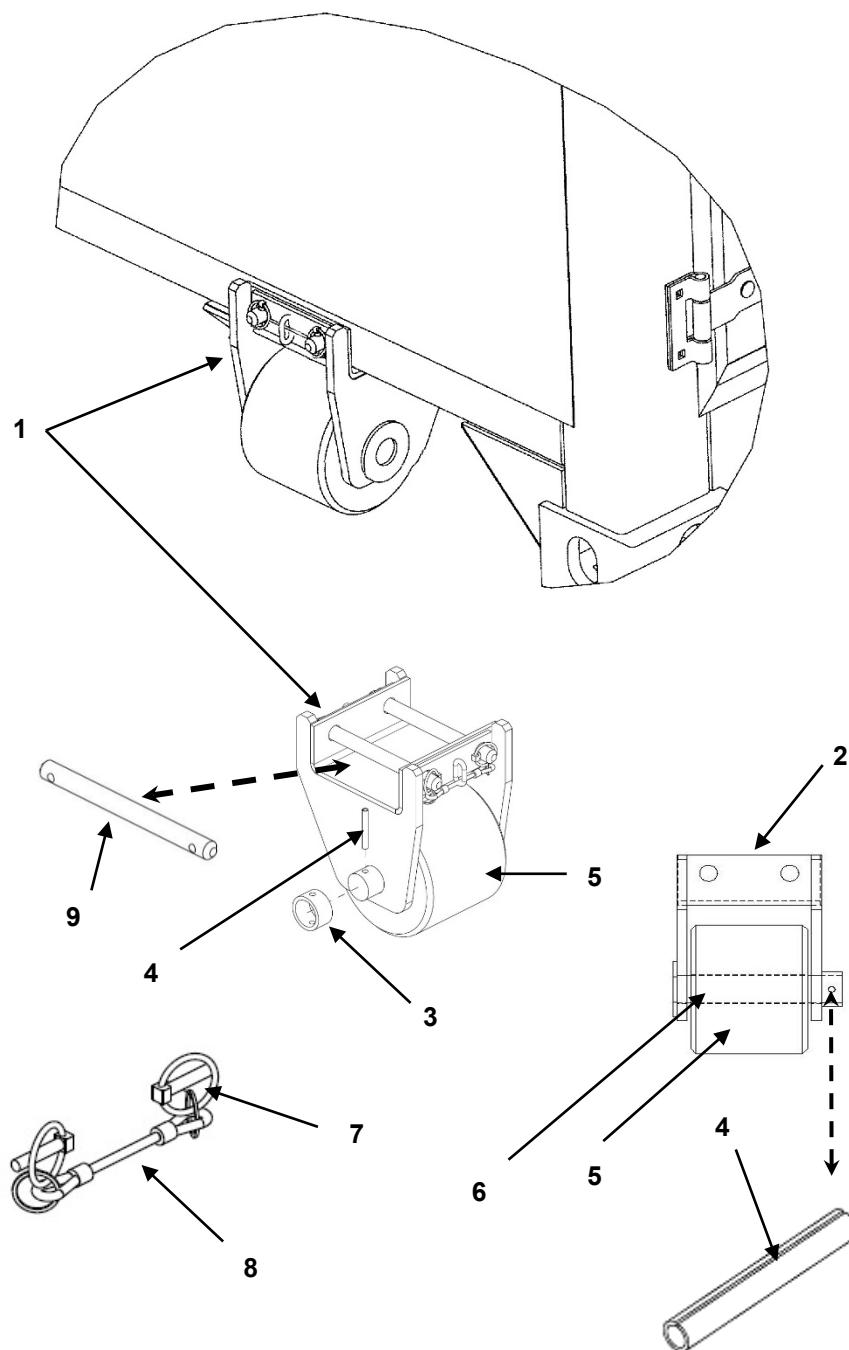
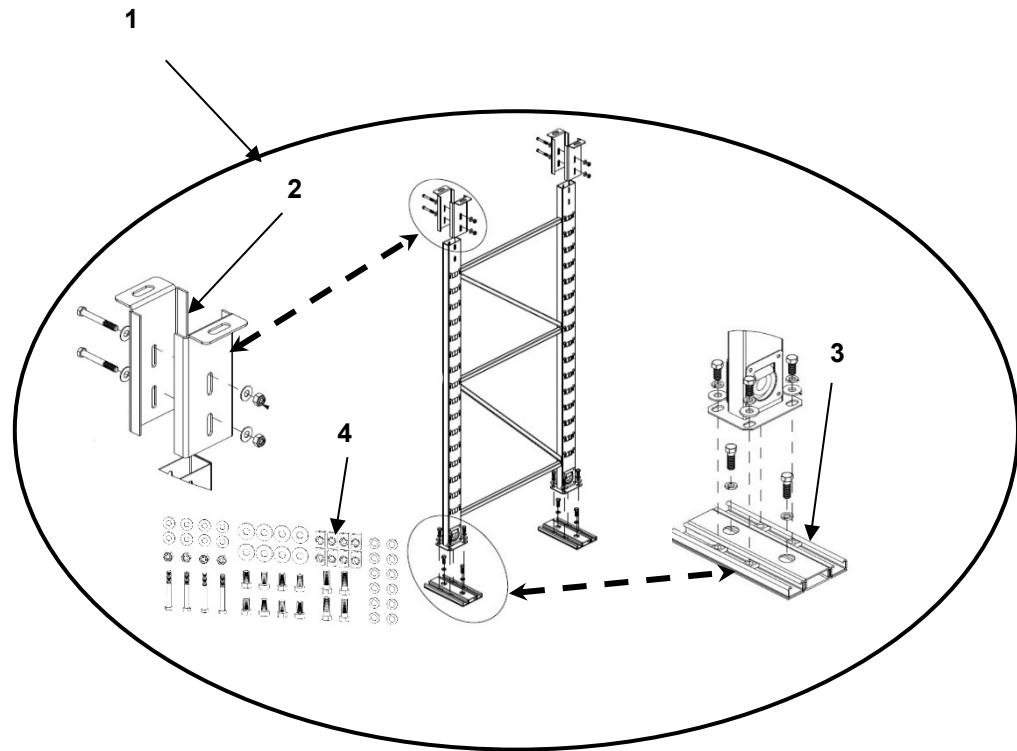
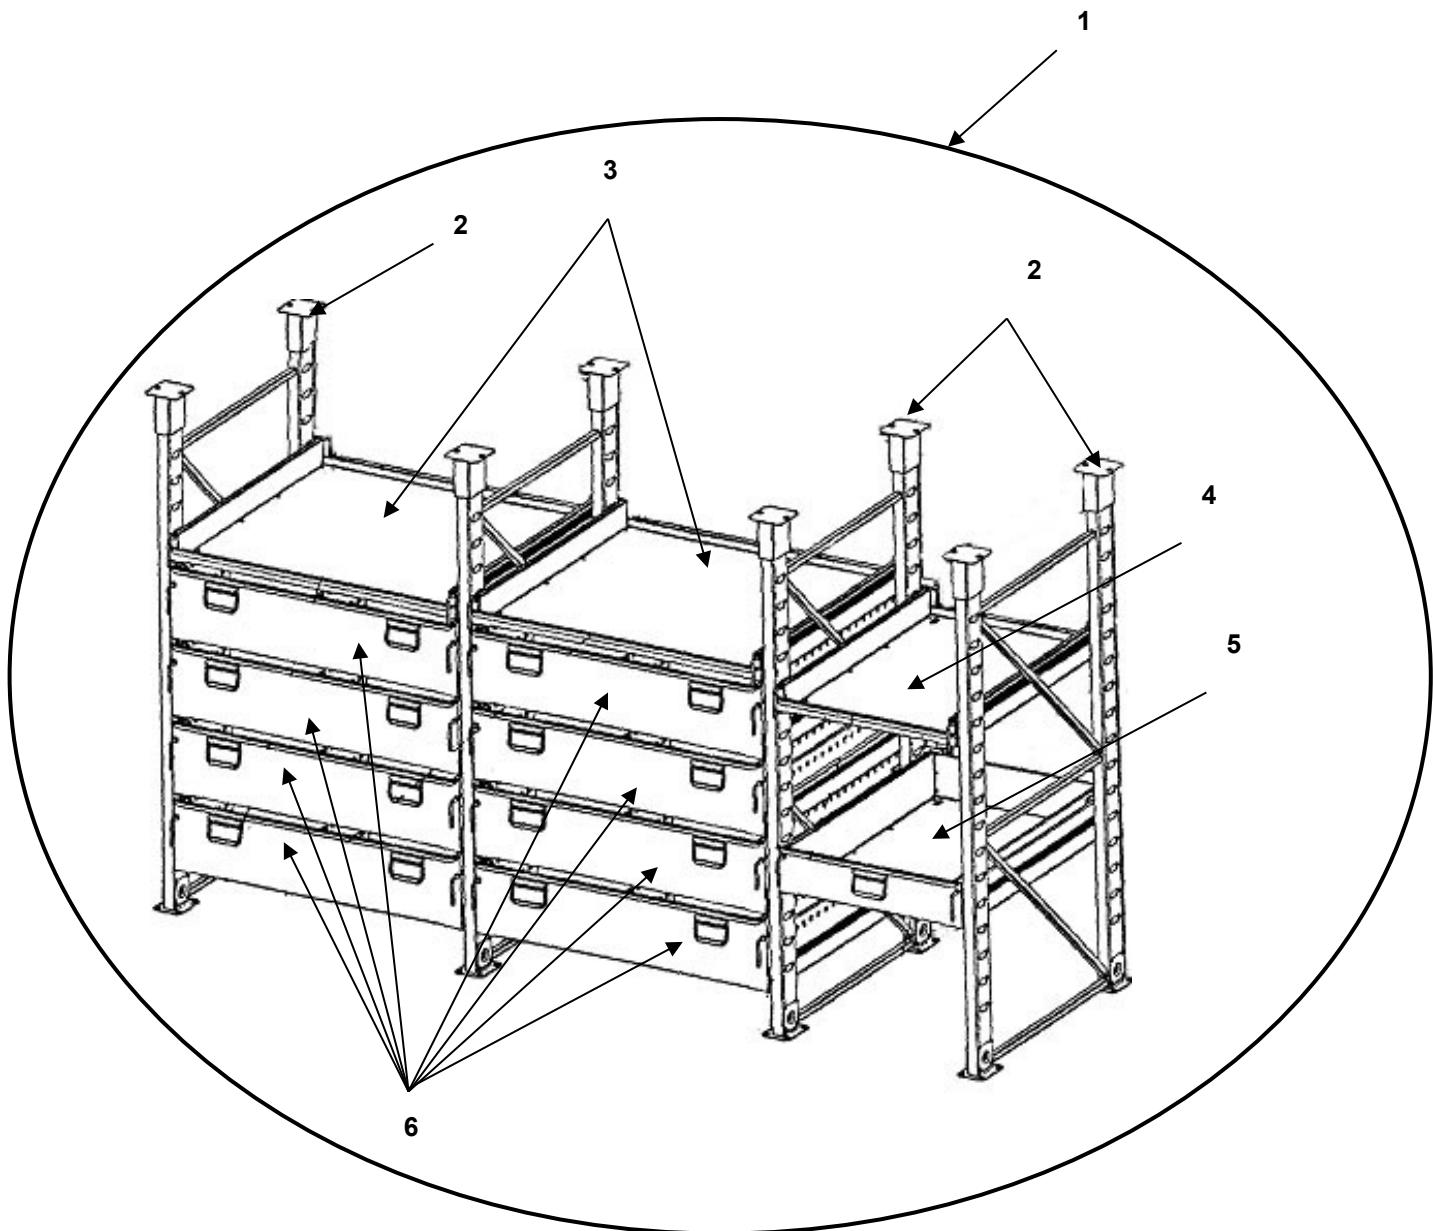


FIGURE 17 REAR ROLLER ASSEMBLY

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0203 FIGURE 17 REAR ROLLER ASSEMBLY	
1	Not Assigned	1NSG3	15310001-001	.ROLLER ASSY. GREEN	2
2	Not Assigned	1NSG3	16500954-001	..FRAME, ROLLER GREEN	1
3	Not Assigned	1NSG3	15312286	...COLLAR, SHAFT 1 ½" ID	1
4	Not Assigned	1NSG3	15312225	...PIN, ROLLED 5/16" x2 ¼"	1
5	Not Assigned	1NSG3	16500903	...ROLLER, BLACK	1
6	Not Assigned	1NSG3	16500950	...PIN, ROLLER	1
7	Not Assigned	1NSG3	15312262	...PIN, LINCH ¼"	2
8	Not Assigned	1NSG3	16500955	...PIN LANYARD ASSY	4
9	Not Assigned	1NSG3	16500905	...ROLLER ATTACHING PIN	2
1	Not Assigned	1NSG3	15310001-002	.ROLLER ASSY. TAN	2
2	Not Assigned	1NSG3	16500954-002	..FRAME, ROLLER TAN	1
3	Not Assigned	1NSG3	15312286	...COLLAR, SHAFT 1 ½" ID	1
4	Not Assigned	1NSG3	15312225	...PIN, ROLLED 5/16" x2 ¼"	1
5	Not Assigned	1NSG3	16500903	...ROLLER, BLACK	1
6	Not Assigned	1NSG3	16500950	...PIN, ROLLER	1
7	Not Assigned	1NSG3	15312262	...PIN, LINCH ¼"	2
8	Not Assigned	1NSG3	16500955	...PIN LANYARD ASSY	4
9	Not Assigned	1NSG3	16500905	...ROLLER ATTACHING PIN	2
END OF FIGURE 17					

VERTICAL RACK FRAME**FIGURE 18 VERTICAL RACK FRAME**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0204 FIGURE 18 VERTICAL RACK FRAME	
1	Not Assigned	1NSG3	15988565-001	.VERTICAL RACK ASSY W/HARDWARE GREEN	1
2	Not Assigned	INSG3	15988792-001	..UPRIGHT UPPER MOUNT ASSY W/HARDWARE GREEN	2
3	Not Assigned	INSG3	15988557-001	..UPRIGHT LOWER MOUNTING BASE ASSY W/HARDWARE GREEN	2
4	Not Assigned	INSG3	15981800	...UPRIGHT MOUNTING HARDWARE KIT	1
1	Not Assigned	1NSG3	15988565-002	.VERTICAL RACK ASSY W/HARDWARE TAN	1
2	Not Assigned	INSG3	15988792-002	..UPRIGHT UPPER MOUNT ASSY W/HARDWARE TAN	2
3	Not Assigned	INSG3	15988557-002	..UPRIGHT LOWER MOUNTING BASE ASSY W/HARDWARE TAN	2
4	Not Assigned	INSG3	15981800	...UPRIGHT MOUNTING HARDWARE KIT	1
END OF FIGURE 18					

PARTS STORAGE AIDS 12 FT COMPARTMENT**FIGURE 19 PARTS STORAGE AIDS 12 FT COMPARTMENT**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0205 FIGURE 19 PARTS STORAGE AIDS	
1	8145-01-524-0249	1NSG3	15310023-001	.PARTS STORAGE AIDS GREEN UOC: FAA	1
2	Not Assigned	1NSG3	15988565-001	..VERTICAL RACKS W/HARDWARE GREEN	4
3	Not Assigned	1NSG3	16502056-001	..DRAWER ASSY 2" x 48" GREEN	2
4	Not Assigned	1NSG3	16502050-001	..DRAWER ASSY 2" x 30" GREEN	1
5	Not Assigned	1NSG3	16503250-001	..DRAWER ASSY 8" x 30" GREEN.	1
6	Not Assigned	1NSG3	15988802-001	..DRAWER ASSY 12"x48" GREEN	8
1	8145-01-524-0249	1NSG3	15310023-002	.PARTS STORAGE AIDS TAN UOC: FAB	1
2	Not Assigned	1NSG3	15988565-002	..VERTICAL RACKS W/HARDWARE TAN	4
3	Not Assigned	1NSG3	16502056-002	..DRAWER ASSY 2" x 48" TAN	2
4	Not Assigned	1NSG3	16502050-002	..DRAWER ASSY 2" x 30" TAN	1
5	Not Assigned	1NSG3	16503250-002	..DRAWER ASSY 8" x 30" TAN.	1
6	Not Assigned	1NSG3	15988802-002	..DRAWER ASSY 12" x 48" TAN	8
END OF FIGURE 19					

DRAWER ASSEMBLIES

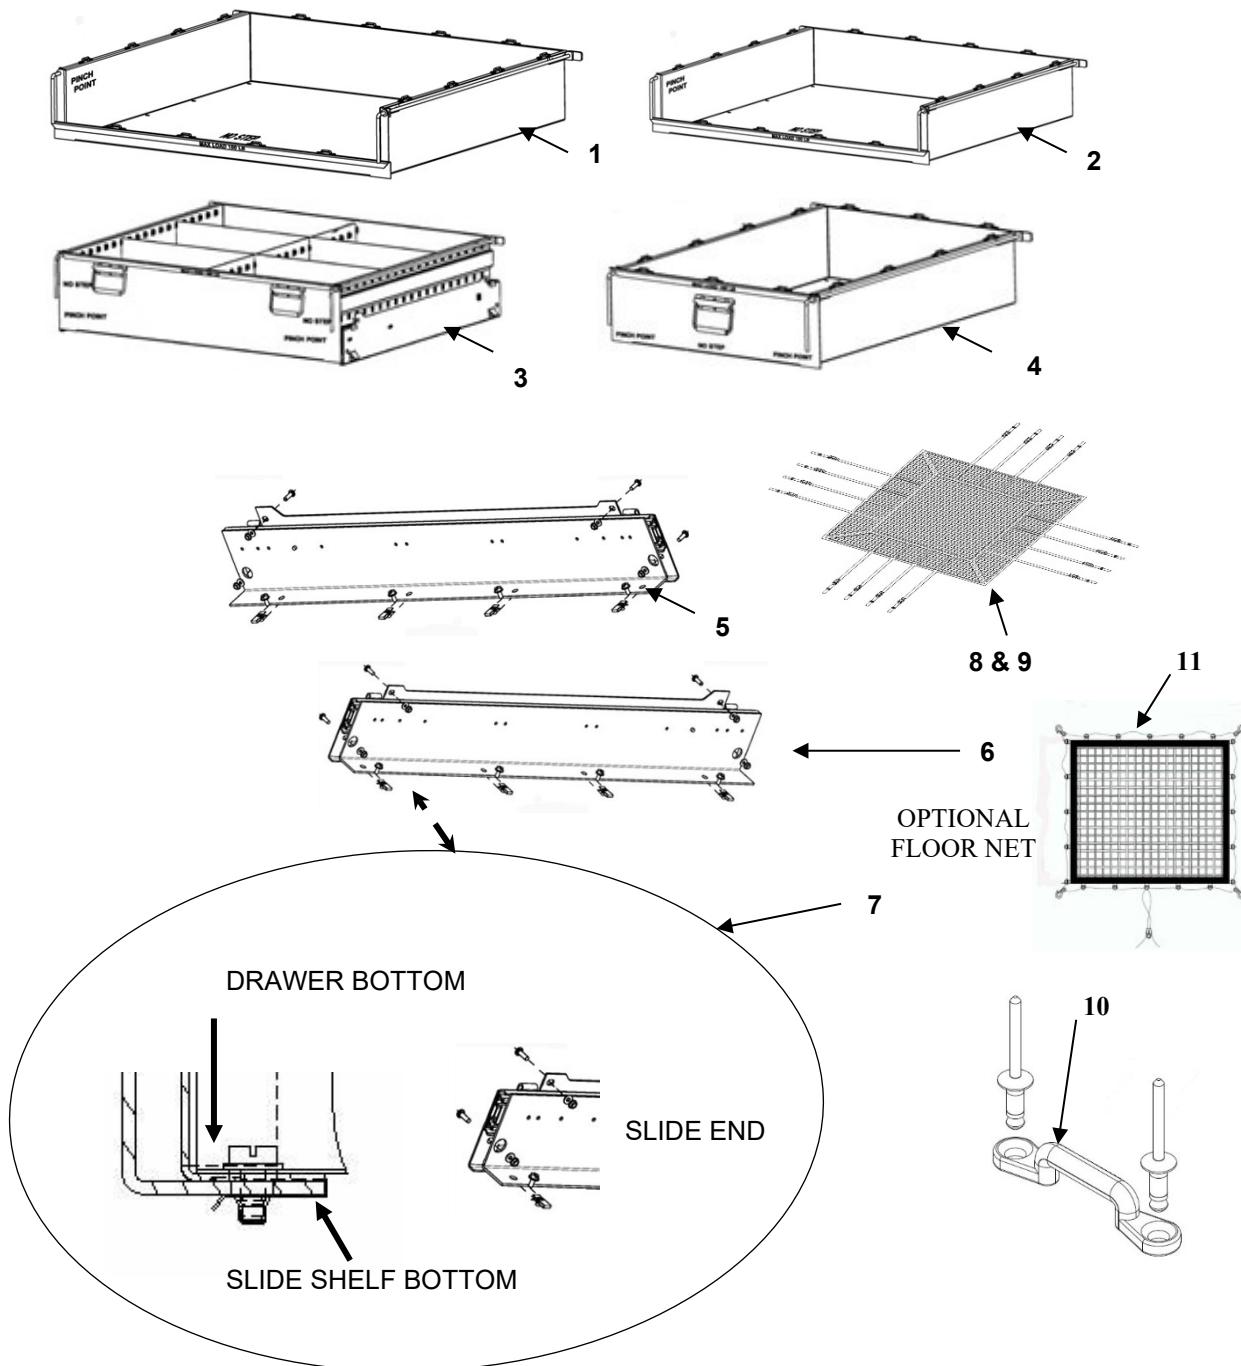
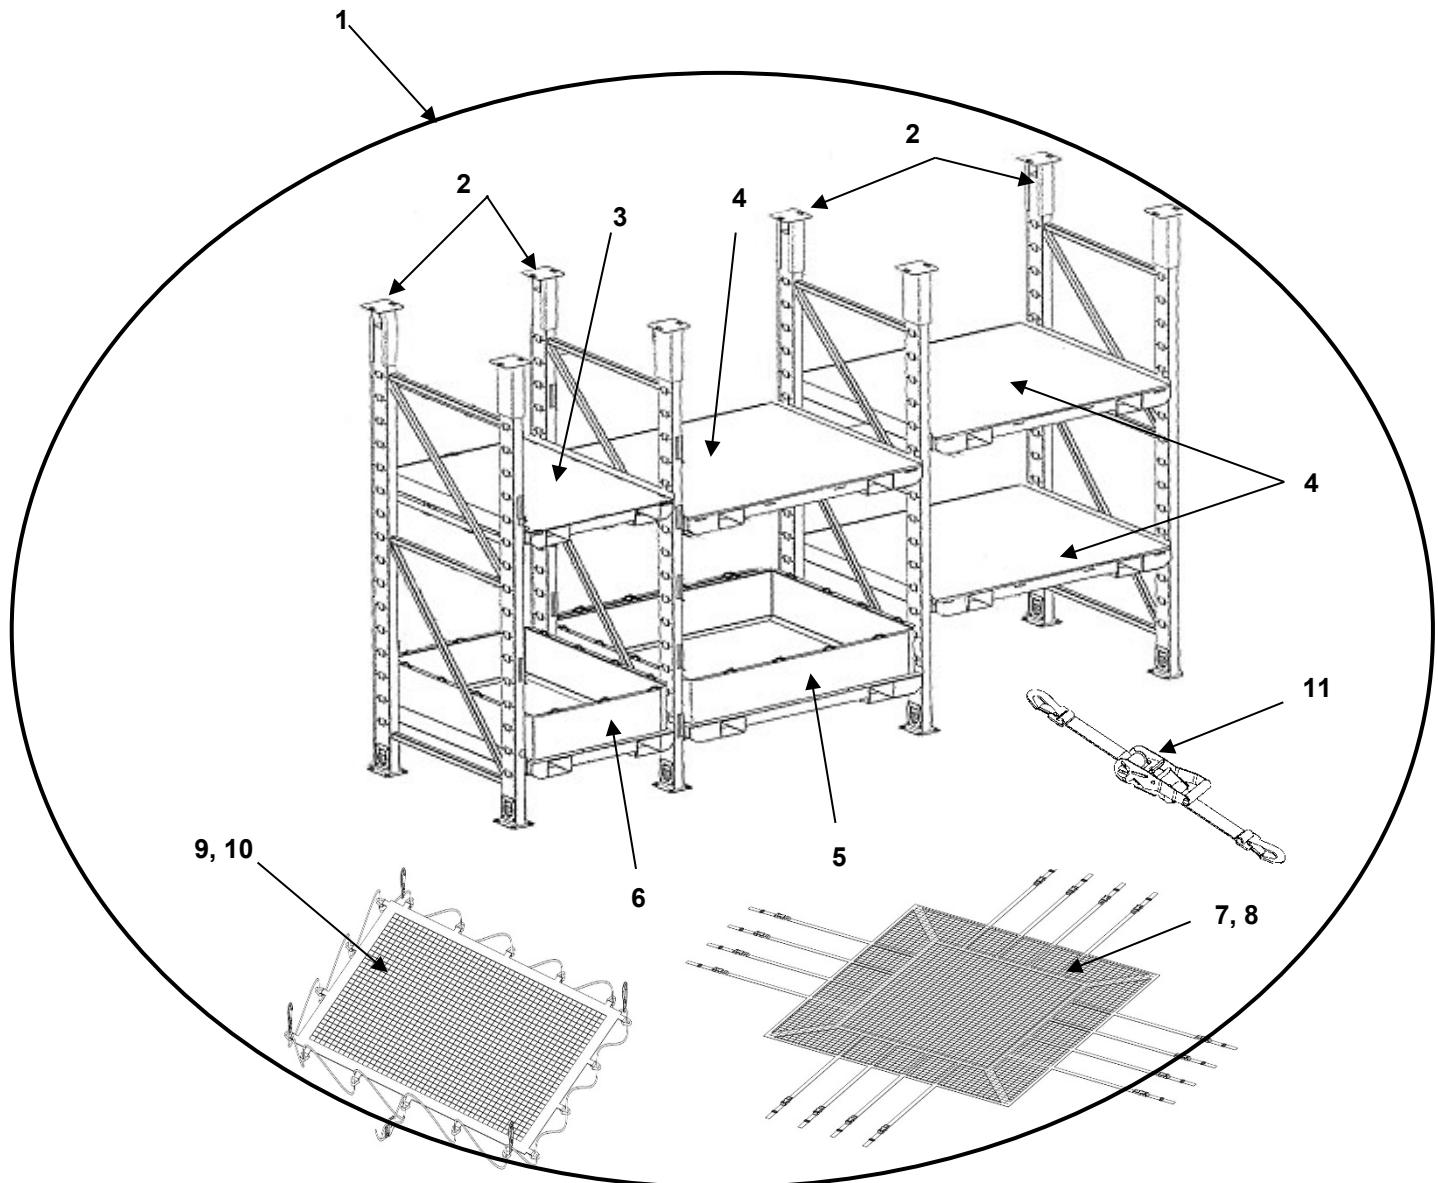


FIGURE 20 DRAWER ASSEMBLIES

(1) ITEM NO.	(2) NSN		(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 020501 FIGURE 20 DRAWER ASSEMBLY	
1	Not Assigned	1NSG3	16502056-001	.DRAWER ASSY 2" x 48" GREEN	2
1	Not Assigned	1NSG3	16502056-002	.DRAWER ASSY 2" x 48" TAN	2
5	Not Assigned	1NSG3	15988585	..DRAWER SLIDE LFT	1
6	Not Assigned	1NSG3	15988586	..DRAWER SLIDE RHT	1
7	Not Assigned	1NSG3	15981820	...MOUNTING HARDWARE KIT	2
8	Not Assigned	1NSG3	16501607	.NET, 48" DRAWER	2
2	Not Assigned	1NSG3	16502050-001	.DRAWER ASSY 2" x 30" GREEN	1
2	Not Assigned	1NSG3	16502050-002	.DRAWER ASSY 2" x 30" TAN	1
5	Not Assigned	1NSG3	15988585	..DRAWER SLIDE LFT	1
6	Not Assigned	1NSG3	15988586	..DRAWER SLIDE RHT	1
7	Not Assigned	1NSG3	15981820	...MOUNTING HARDWARE KIT	2
9	Not Assigned	1NSG3	16501606	.NET, 30" DRAWER	1
3	Not Assigned	1NSG3	15988802-001	.DRAWER ASSY 12" x 48" GREEN	8
3	Not Assigned	1NSG3	15988802-002	.DRAWER ASSY 12" x 48" TAN	8
5	Not Assigned	1NSG3	15988585	..DRAWER SLIDE LFT	1
6	Not Assigned	1NSG3	15988586	..DRAWER SLIDE RHT	1
7	Not Assigned	1NSG3	15981820	...MOUNTING HARDWARE KIT	2
4	Not Assigned	1NSG3	16503250-001	.DRAWER ASSY 8" x 30" GREEN	1
4	Not Assigned	1NSG3	16503250-002	.DRAWER ASSY 8" x 30" TAN	1
5	Not Assigned	1NSG3	15988585	..DRAWER SLIDE LFT	1
6	Not Assigned	1NSG3	15988586	..DRAWER SLIDE RHT	1
7	Not Assigned	1NSG3	15981820	...MOUNTING HARDWARE KIT	2
9	Not Assigned	1NSG3	16501606	.NET, 30" DRAWER	1
10	Not Assigned	1NSG3	15940113	.FOOTMAN LOOP KIT	1
11	Not Assigned	1NSG3	16501611	.NET, BULK CARGO, FLOOR 30" - *Not Included- OPTIONAL*	1

END OF FIGURE 20


BULK STORAGE AIDS 12 FT COMPARTMENT**FIGURE 21A BULK STORAGE AIDS 12 FT COMPARTMENT**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0206 FIGURE 21A BULK STORAGE AIDS 12FT (GREEN)	
1	8145-01-524-0244	1NSG3	15310022-001	.BULK STORAGE AIDS GREEN UOC: FAA	1
2	Not Assigned	1NSG3	15988565-001	..VERTICAL RACKS W/HARDWARE GREEN	4
3	Not Assigned	1NSG3	16503050-001	..PALLET, STORAGE 30 " GREEN	1
7	Not Assigned	1NSG3	16501604	...NET HAZMAT 30"	1
11	Not Assigned	1NSG3	15240152	...STRAPS	4
4	Not Assigned	1NSG3	16504850-001	..BULK STORAGE PALLET 48" GREEN	3
8	Not Assigned	1NSG3	16501605	...NET HAZMAT 48"	1
11	Not Assigned	1NSG3	15240152	...STRAPS	4
5	Not Assigned	1NSG3	16504950-001	..PALLET, HAZMAT 48 " GREEN	1
8	Not Assigned	1NSG3	16501605	...NET HAZMAT 48"	1
6	Not Assigned	1NSG3	16503150-001	..PALLET, HAZMAT 30 " GREEN	1
7	Not Assigned	1NSG3	16501604	...NET HAZMAT 30"	1
9	Not Assigned	1NSG3	16501611	..NET, BULK CARGO, FLOOR 30"	1
10	Not Assigned	1NSG3	16501610	..NET, BULK CARGO, FLOOR 48"	2

(1) ITEM NO.	(2) NSN	(3) CAGE C	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0206 FIGURE 21A BULK STORAGE AIDS 12FT (TAN)	
1	8145-01-524-0244	1NSG3	15310022-002	.BULK STORAGE AIDS TAN UOC: FAB	1
2	Not Assigned	1NSG3	15988565-002	..VERTICAL RACKS W/HARDWARE TAN	4
3	Not Assigned	1NSG3	16503050-002	..PALLET, STORAGE 30 " TAN	1
7	Not Assigned	1NSG3	16501604	...NET CARGO 30"	1
11	Not Assigned	1NSG3	15240152	...STRAPS	4
4	Not Assigned	1NSG3	16504850-002	..BULK STORAGE PALLET 48" TAN	3
8	Not Assigned	1NSG3	16501605	...NET HAZMAT 48"	1
11	Not Assigned	1NSG3	15240152	...STRAPS	4
5	Not Assigned	1NSG3	16504950-002	..PALLET, HAZMAT 48 " TAN	1
8	Not Assigned	1NSG3	16501605	...NET CARGO 48"	1
6	Not Assigned	1NSG3	16503150-002	..PALLET, HAZMAT 30 " TAN	1
7	Not Assigned	1NSG3	16501604	...NET HAZMAT 30"	1
9	Not Assigned	1NSG3	16501611	..NET, BULK CARGO, FLOOR 30"	1
10	Not Assigned	1NSG3	16501610	..NET, BULK CARGO, FLOOR 48"	2

END OF FIGURE 21A

This page was intentionally left blank

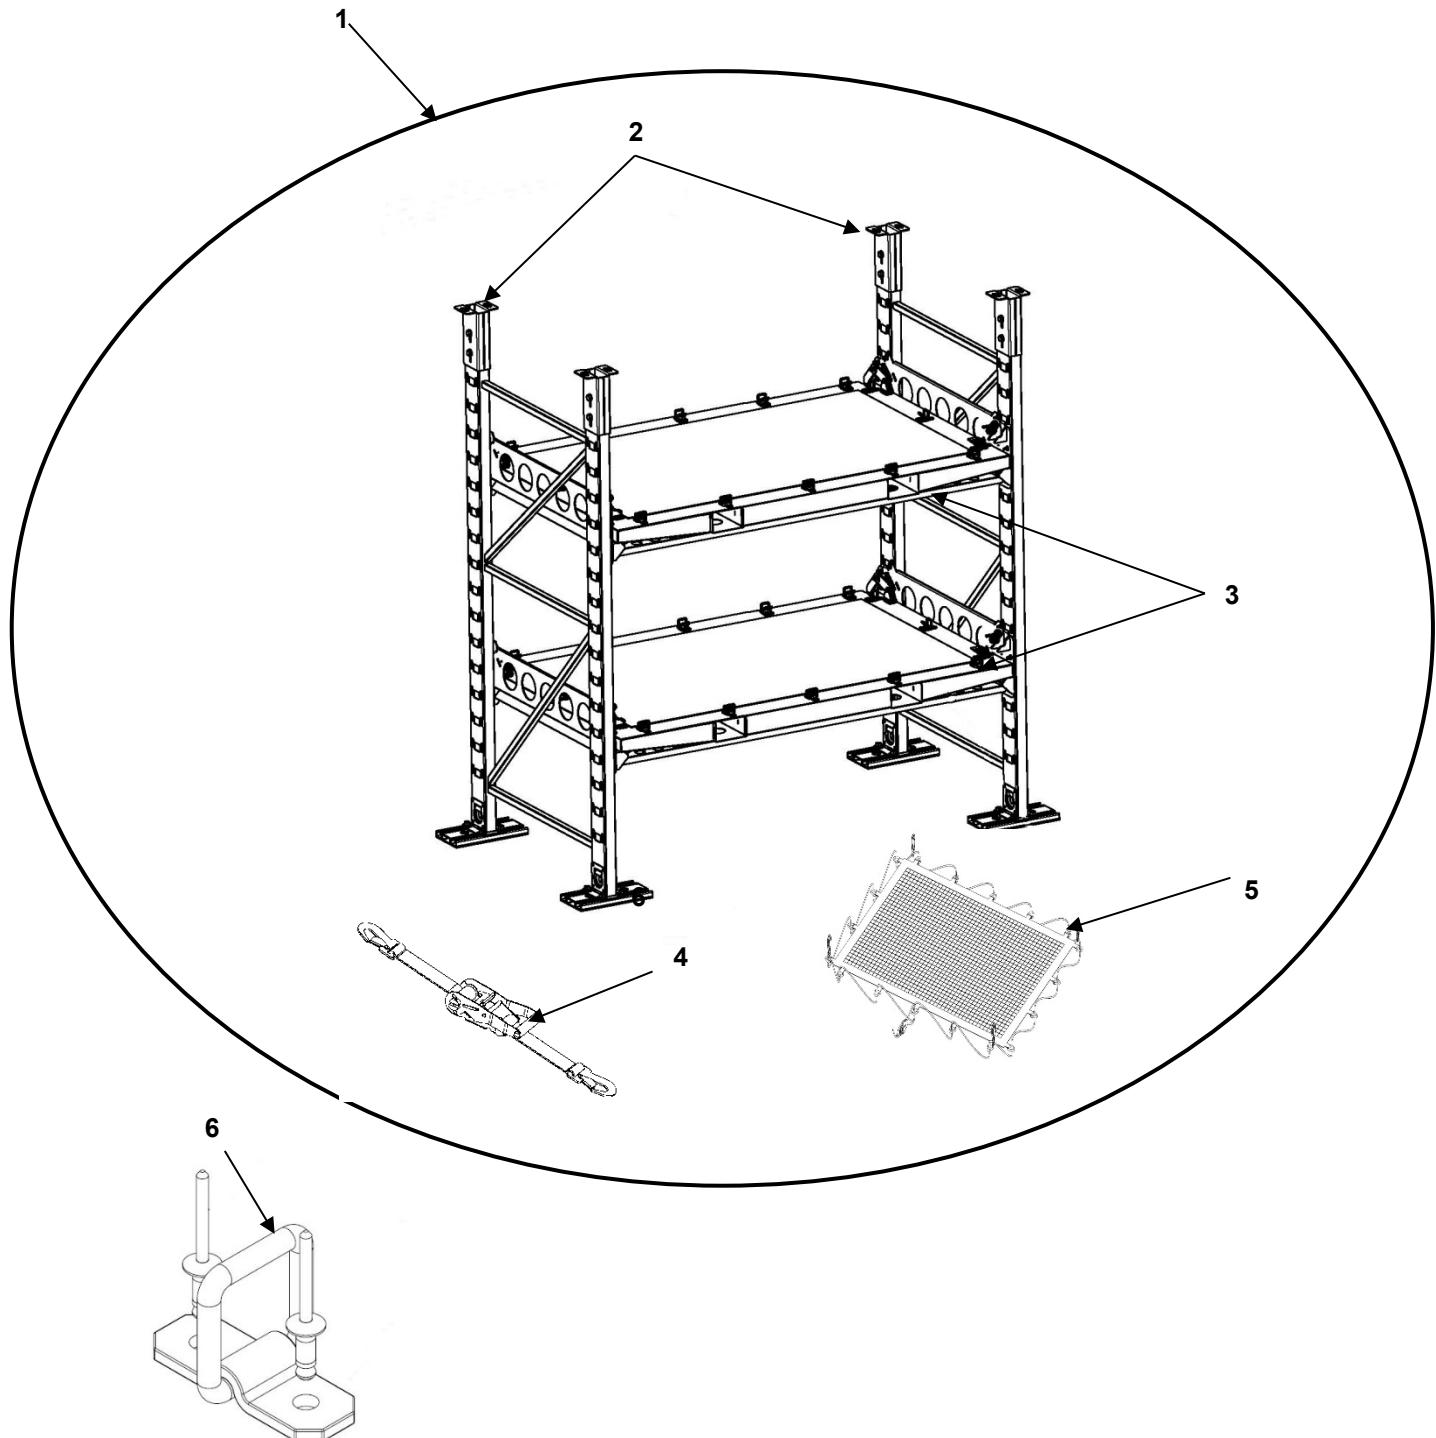BULK STORAGE AIDS 8 FT COMPARTMENT (REAR)**FIGURE 21B BULK STORAGE AIDS 8 FT COMPARTMENT (REAR)**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0206 FIGURE 21B BULK STORAGE AIDS 8FT (REAR)	
1	8145-01-598-3337	1NSG3	15310034-001	.BULK STORAGE AIDS GREEN UOC: FAA	1
2	Not Assigned	1NSG3	15988565-001	..VERTICAL RACKS W/HARDWARE GREEN UOC: FAA	2
3	Not Assigned	1NSG3	16506750-001	..PALLET, STORAGE 67 " GREEN UOC: FAA	2
4	Not Assigned	1NSG3	15240152	...STRAPS	4
5	Not Assigned	1NSG3	16501609	..NET CARGO 67"	1
6	Not Assigned	1NSG3	15940112	.D-RING KIT	1
1	8145-01-598-3332	1NSG3	15310034-002	.BULK STORAGE AIDS TAN UOC: FAB	1
2	Not Assigned	1NSG3	15988565-002	..VERTICAL RACKS W/HARDWARE TAN UOC: FAB	2
3	Not Assigned	1NSG3	16506750-002	..PALLET, STORAGE 67 " TAN UOC: FAB	2
4	Not Assigned	1NSG3	15240152	...STRAPS	4
5	Not Assigned	1NSG3	16501609	..NET CARGO 67"	1
6	Not Assigned	1NSG3	15940112	.D-RING KIT	1

END OF FIGURE 21B

PALLETS 12 FT COMPARTMENT

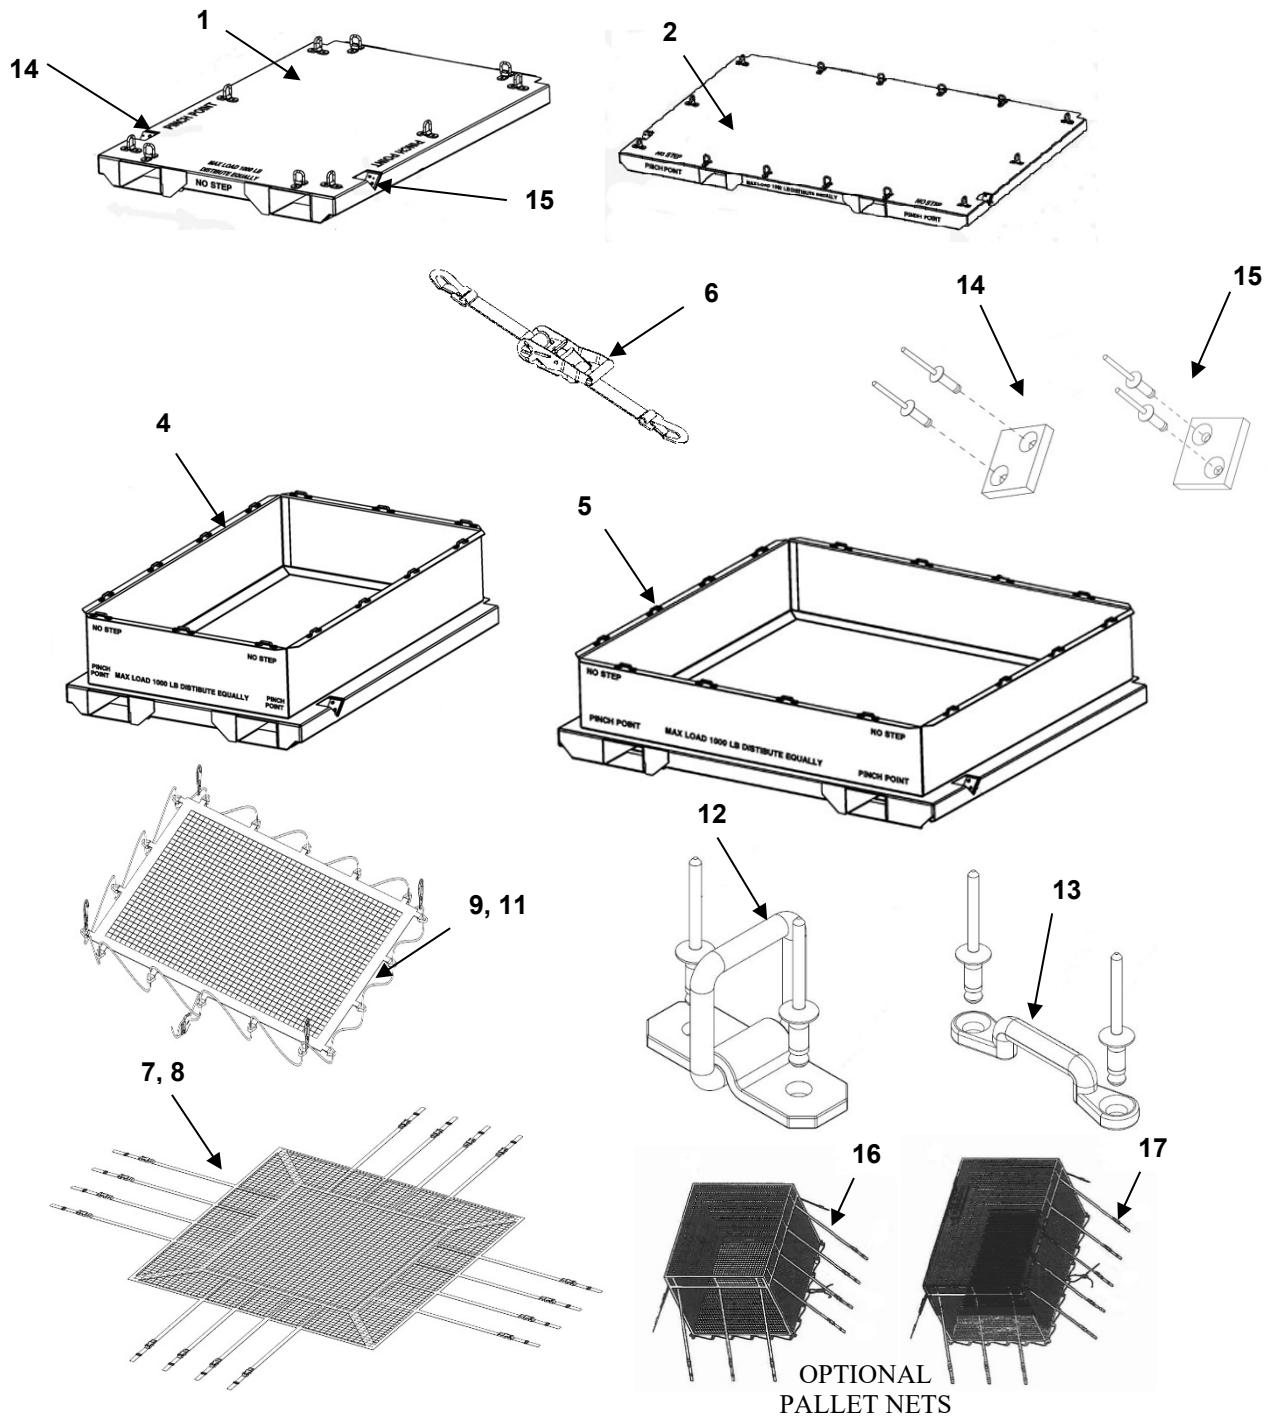


FIGURE 22 PALLETS 12 FT COMPARTMENT

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 020601 FIGURE 22 PALLETS 12 FT COMPARTMENT	
1	Not Assigned	1NSG3	16503050-001	.PALLET, BULK STORAGE 30 " GREEN	1
6	Not Assigned	1NSG3	15240152	..STRAPS	4
2	Not Assigned	1NSG3	16504850-001	.PALLET, BULK STORAGE 48" GREEN	1
6	Not Assigned	1NSG3	15240152	..STRAPS	4
4	Not Assigned	1NSG3	16503150-001	.PALLET, HAZMAT 30 " GREEN	1
7	Not Assigned	1NSG3	16501604	..NET, HAZMAT30"	1
5	Not Assigned	1NSG3	16504950-001	.PALLET, HAZMAT 48 " GREEN	1
8	Not Assigned	1NSG3	16501605	..NET, HAZMAT 48"	1
9	Not Assigned	1NSG3	16501610	.NET, CARGO FLOOR 48"	1
11	Not Assigned	1NSG3	16501611	.NET, CARGO FLOOR 30"	1
1	Not Assigned	1NSG3	16503050-002	.PALLET, BULK STORAGE 30 " TAN	1
6	Not Assigned	1NSG3	15240152	..STRAPS	4
2	Not Assigned	1NSG3	16504850-002	.PALLET, BULK STORAGE 48 " TAN	1
6	Not Assigned	1NSG3	15240152	..STRAPS	4
4	Not Assigned	1NSG3	16503150-002	.PALLET, HAZMAT 30 " TAN	1
7	Not Assigned	1NSG3	16501604	..NET, HAZMAT 30"	1
5	Not Assigned	1NSG3	16504950-002	.PALLET, HAZMAT 48 " TAN	1
8	Not Assigned	1NSG3	16501605	..NET HAZMAT 48"	1
9	Not Assigned	1NSG3	16501610	.NET, CARGO FLOOR 48"	1
11	Not Assigned	1NSG3	16501611	.NET, CARGO FLOOR 30"	1
12	Not Assigned	1NSG3	15940112	.D-RING KIT	1
13	Not Assigned	1NSG3	15940113	.FOOTMAN LOOP KIT	1
14	Not Assigned	1NSG3	15988559	.LOCK ROD PAD LEFT W/ HDW	1
15	Not Assigned	1NSG3	15988558	.LOCK ROD PAD RIGHT W/ HDW	1
16	Not Assigned	1NSG3	16501705	.NET, PALLET 48" - *Not Included-OPTIONAL*	1
17	Not Assigned	1NSG3	16501709	.NET, PALLET 67" - *Not Included-OPTIONAL*	1
END OF FIGURE 22					

PALLET LEDGE

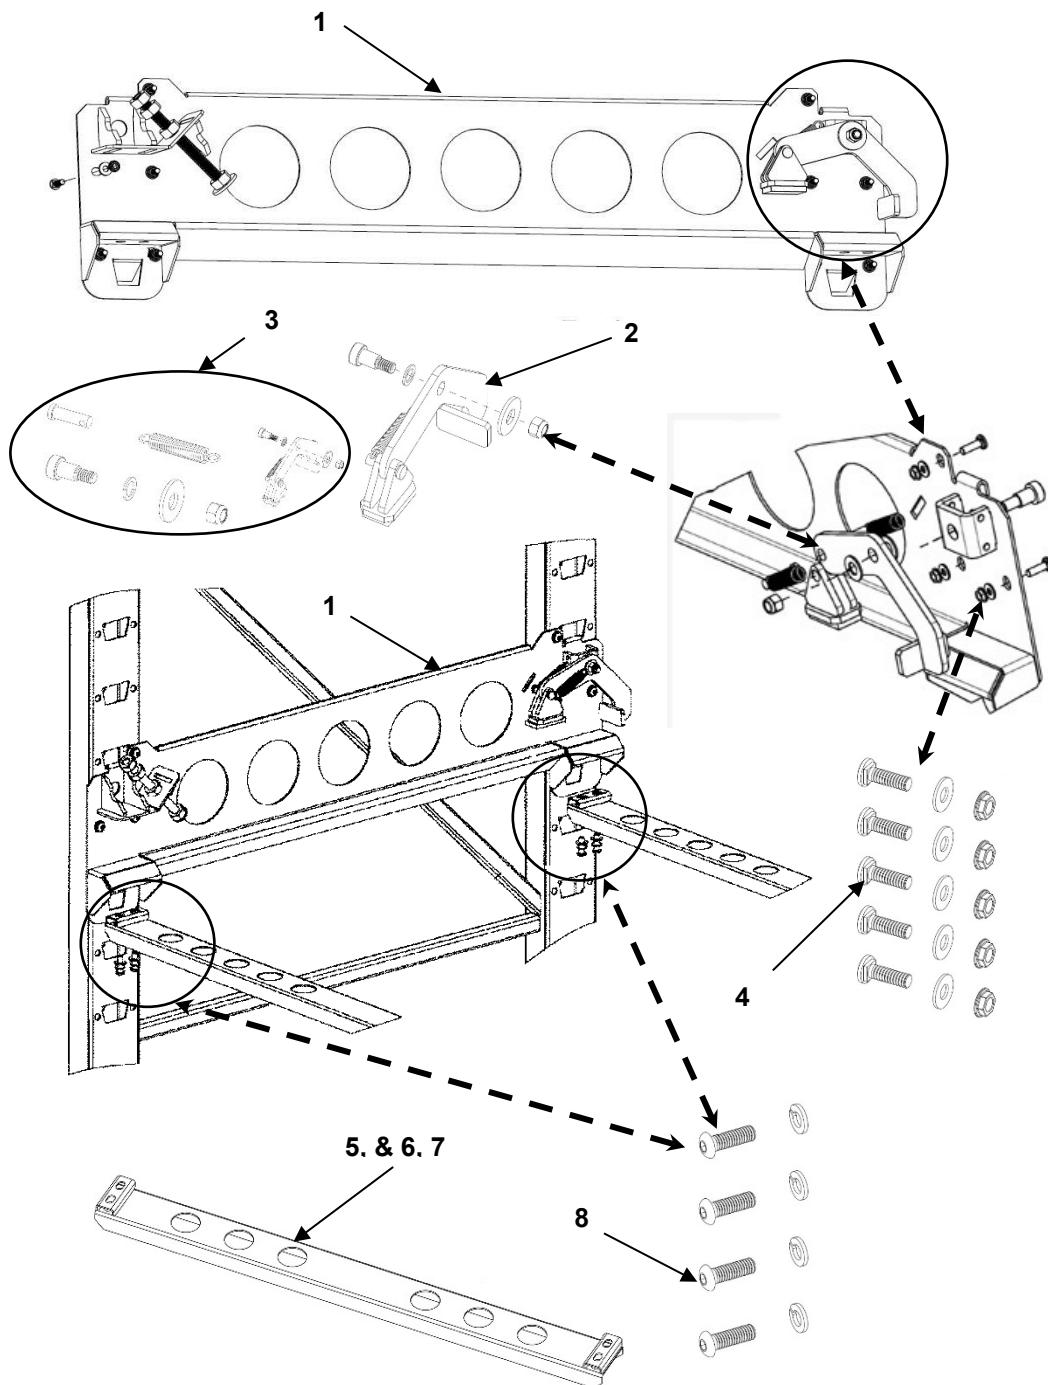


FIGURE 23 PALLET LEDGE

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) Q TY
				GROUP 020602 FIGURE 23 PALLET LEDGE	
1	Not Assigned	INSG3	15988564-001	.PALLET LEDGE LFT W/HARDWARE GREEN	12
1	Not Assigned	INSG3	15988563-001	.PALLET LEDGE RHT W/HARDWARE GREEN	12
2	Not Assigned	INSG3	15988562-001	.. CAM LOCK ASSY W/HARDWARE GREEN	1
3	Not Assigned	INSG3	15988798	... CAM LOCK HARDWARE KIT	1
4	Not Assigned	INSG3	15981810 PALLET LEDGE HARDWARE KIT	1
5	Not Assigned	INSG3	15988805-001	...RACK SUPPORT 30", W/HARDWARE GREEN	4
6	Not Assigned	INSG3	15988806-001	.. RACK SUPPORT 48", W/HARDWARE GREEN	8
7	Not Assigned	INSG3	15988807-001	.. RACK SUPPORT 67", W/HARDWARE GREEN	4
8	Not Assigned	INSG3	15988808	...RACK SUPPORT HARDWARE KIT	1
1	Not Assigned	INSG3	15988564-002	.PALLET LEDGE LFT W/HARDWARE TAN	12
1	Not Assigned	INSG3	15988563-002	.PALLET LEDGE RHT W/HARDWARE TAN	12
2	Not Assigned	INSG3	15988562-002	.. CAM LOCK ASSY W/HARDWARE TAN	1
3	Not Assigned	INSG3	15988798	... CAM LOCK HARDWARE KIT	1
4	Not Assigned	INSG3	15981810 PALLET LEDGE HARDWARE KIT	1
5	Not Assigned	INSG3	15988805-002	.. RACK SUPPORT 30" W/ HARDWARE TAN	4
6	Not Assigned	INSG3	15988806-002	.. RACK SUPPORT 48", W/HARDWARE TAN	8
7	Not Assigned	INSG3	15988807-002	.. RACK SUPPORT 67", W/HARDWARE TAN	4
8	Not Assigned	INSG3	15988808	...RACK SUPPORT HARDWARE KIT	1
END OF FIGURE 23					

REMOVABLE CRADLE 8 FT COMPARTMENT

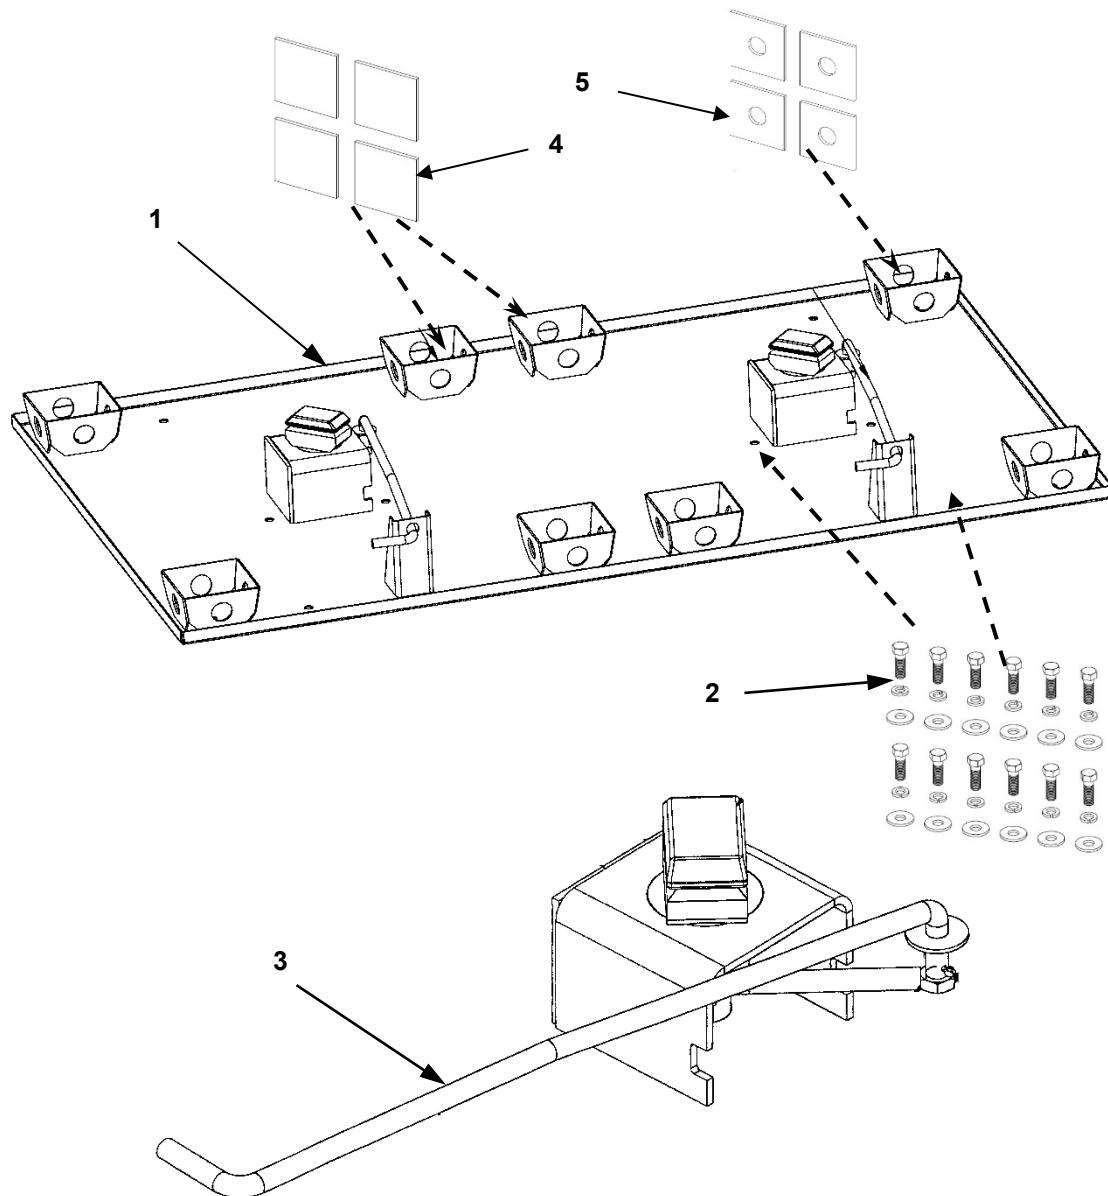


FIGURE 24 REMOVABLE CRADLE 8 FT COMPARTMENT

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0207 FIGURE 24 REMOVABLE CRADLE 8 FT COMPARTMENT	
1	Not Assigned	1NSG3	16501350-001	.REMOVABLE CRADLE GREEN UOC: FAA	1
2	Not Assigned	1NSG3	15981840	..REMOVABLE CRADLE MOUNTING HARDWARE KIT	1
3	Not Assigned	1NSG3	15988605-001	..HANDLE LOCKING W/HARDWARE GREEN	2
4	Not Assigned	1NSG3	15988627	.. CENTER RECEIVER PADS W/ADHESIVE	4
5	Not Assigned	1NSG3	15988628	.. END RECEIVER PADS W/CUTOUT AND ADHESIVE	4
1	Not Assigned	1NSG3	16501350-002	.REMOVABLE CRADLE TAN UOC: FAB	1
2	Not Assigned	1NSG3	15981840	..REMOVABLE CRADLE MOUNTING HARDWARE KIT	1
3	Not Assigned	1NSG3	15988605-002	..HANDLE LOCKING W/HARDWARE TAN	2
4	Not Assigned	1NSG3	15988627	.. CENTER RECEIVER PADS W/ADHESIVE	4
5	Not Assigned	1NSG3	15988628	.. END RECEIVER PADS W/CUTOUT AND ADHESIVE	4
END OF FIGURE 24					

TIE DOWN RING ASSEMBLY

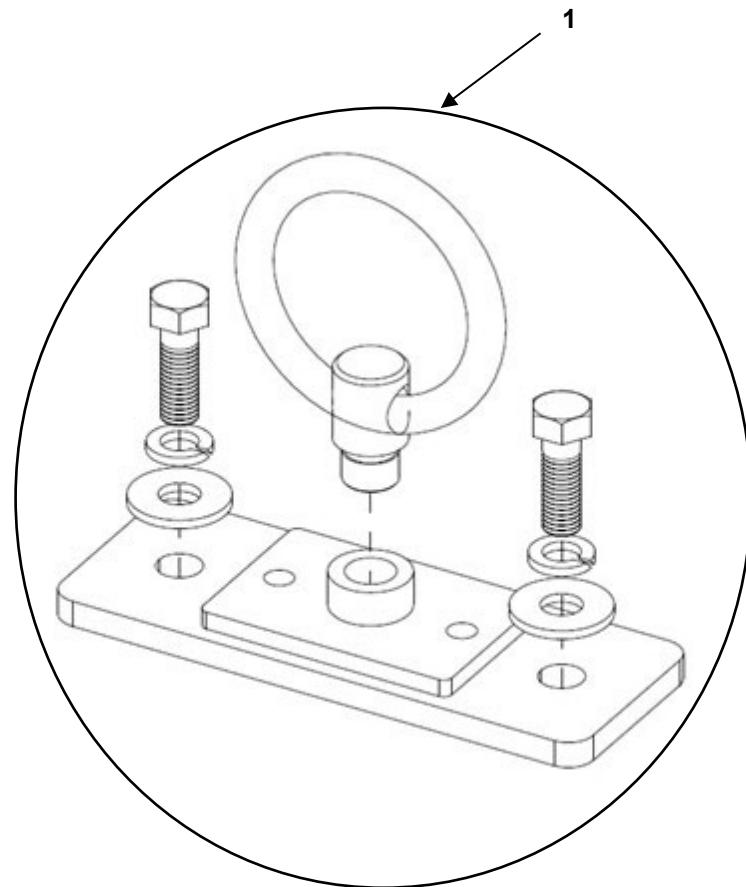
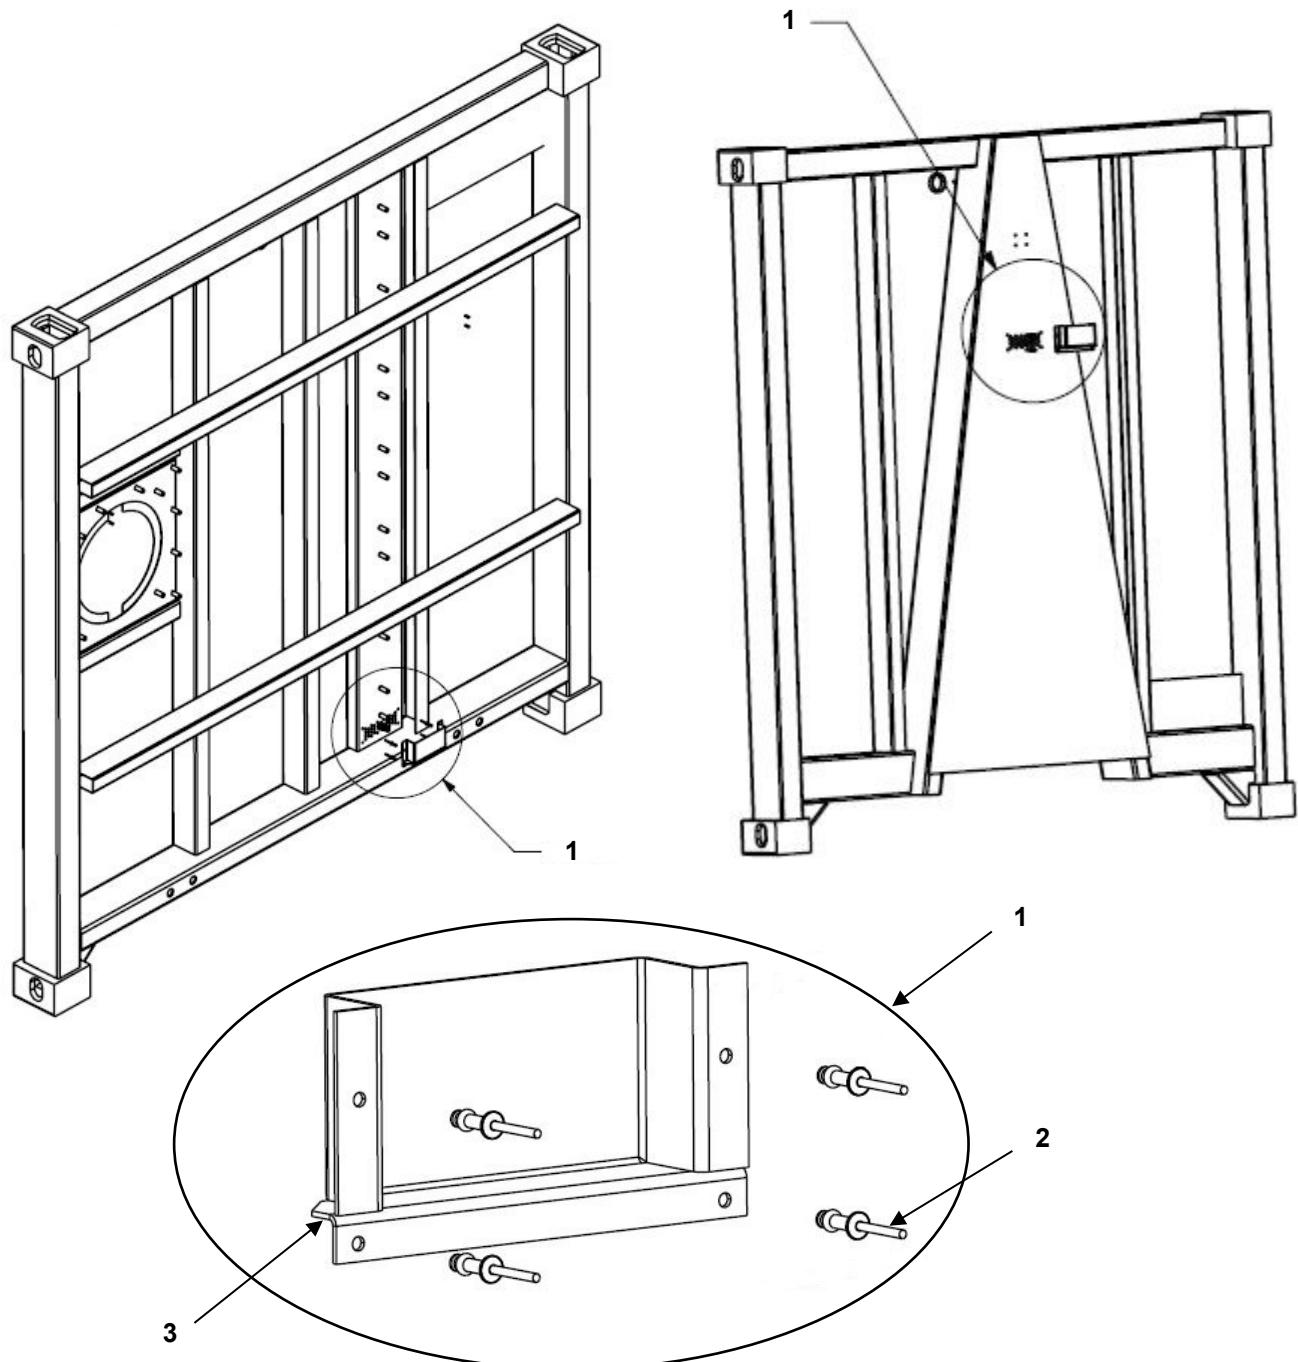
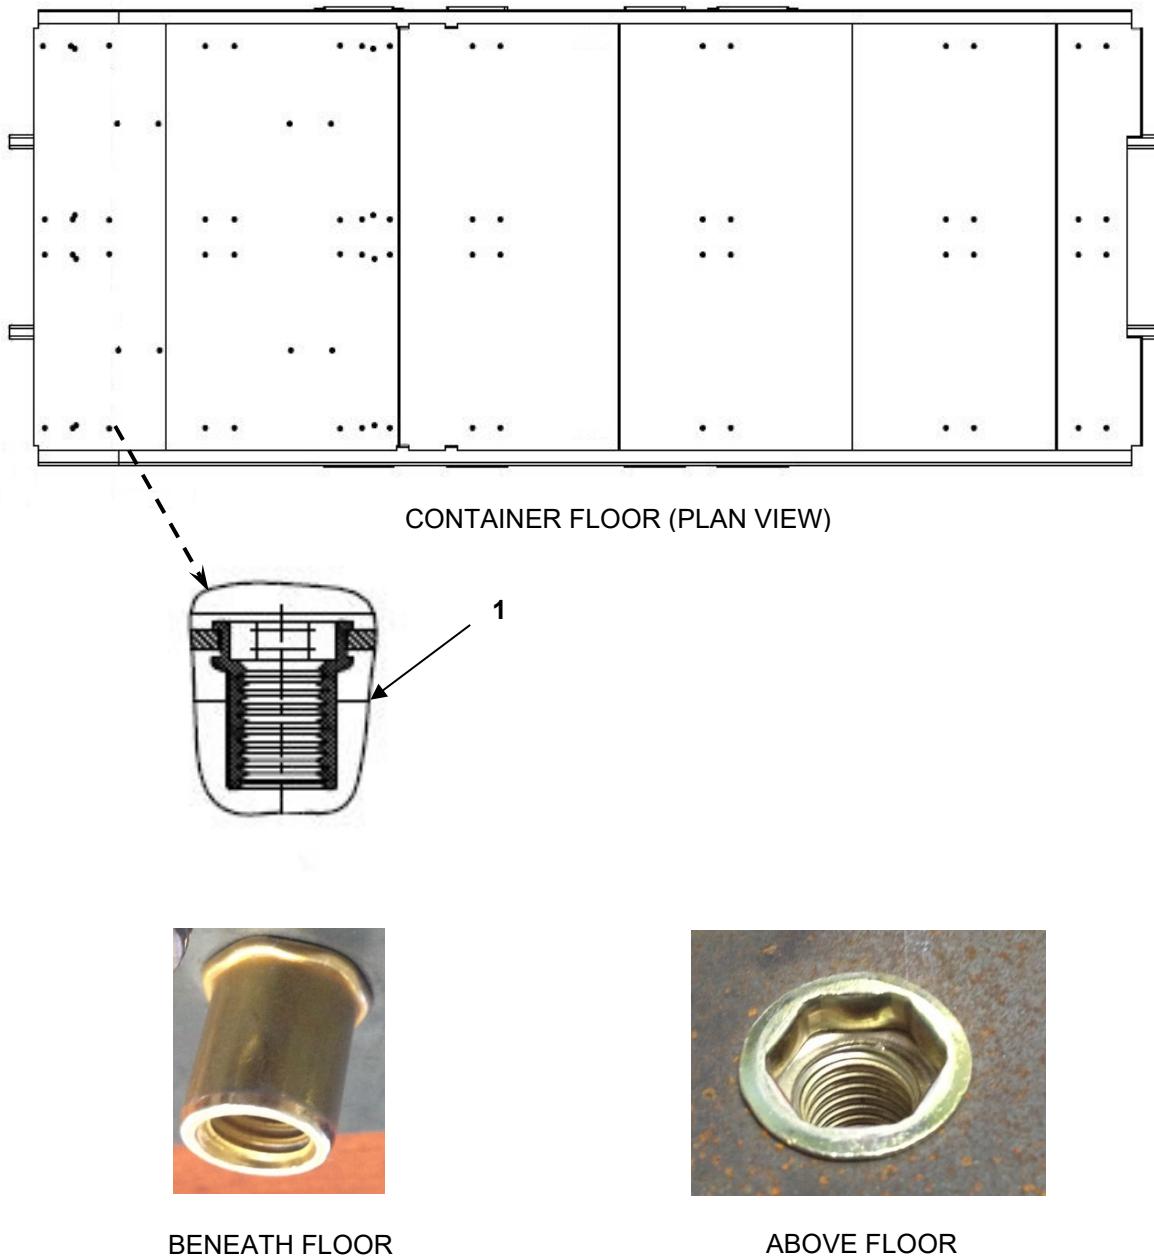


FIGURE 25 TIE DOWN RING ASSEMBLY

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0208 FIGURE 25 TIE DOWN RING ASSEMBLY	
1	8145-01-513-6262	1NSG3	16509501-001	.TIE DOWN RING ASSEMBLY W/HARDWARE GREEN UOC: FAA	1
1	8145-01-513-6262	1NSG3	16509501-002	.TIE DOWN RING ASSEMBLY W/HARDWARE TAN UOC: FAB	1
END OF FIGURE 25					

WALL VENT KIT**FIGURE 26 WALL VENT KIT**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0209 FIGURE 26 WALL VENT KIT	
1	Not Assigned	1NSG3	15940111-001	.WALL VENT KIT GREEN	1
1	Not Assigned	1NSG3	15940111-002	.WALL VENT KIT TAN	1
2	Not Assigned	1NSG3	NA	..VENT COVER	1
3	Not Assigned	1NSG3	NA	..RIVET 3/16X3/8" SB66CLD	4
NA	Not Assigned	1NSG3	NA	..SEALANT, SIKA-FLEX 221	1
END OF FIGURE 26					

FLOOR RIV-NUTS**FIGURE 27 FLOOR RIV-NUTS**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0210 FIGURE 27 RIV-NUT	
1	Not Assigned	1NSG3	16280029	.RIV-NUT	1
END OF FIGURE 27					

END OF WORK PACKAGE


This page was intentionally left blank

PARTS SUPPORTING INFORMATION

**FPU® SYSTEMS OPERATION MANUAL
(INCLUDING REPAIR PARTS)**


**EXPEDITIONARY CONTAINERIZED AUTHORIZED STOCKAGE LIST (ECASL)
BOH FPU Field Pack-up Units**

REPAIR PARTS LIST STANDARD MODULES

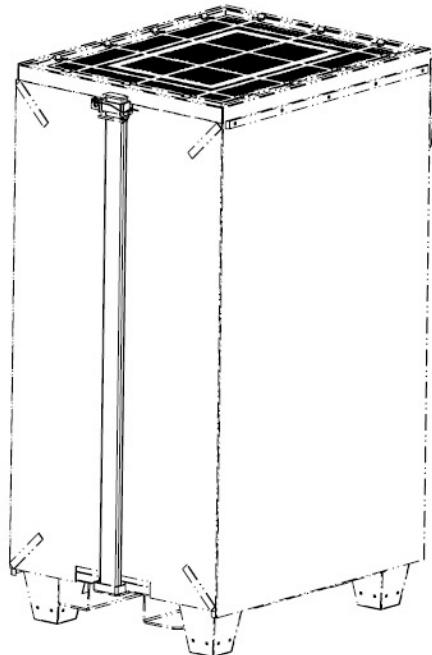

STANDARD MODULES PARTS

FIGURE #28 through #34

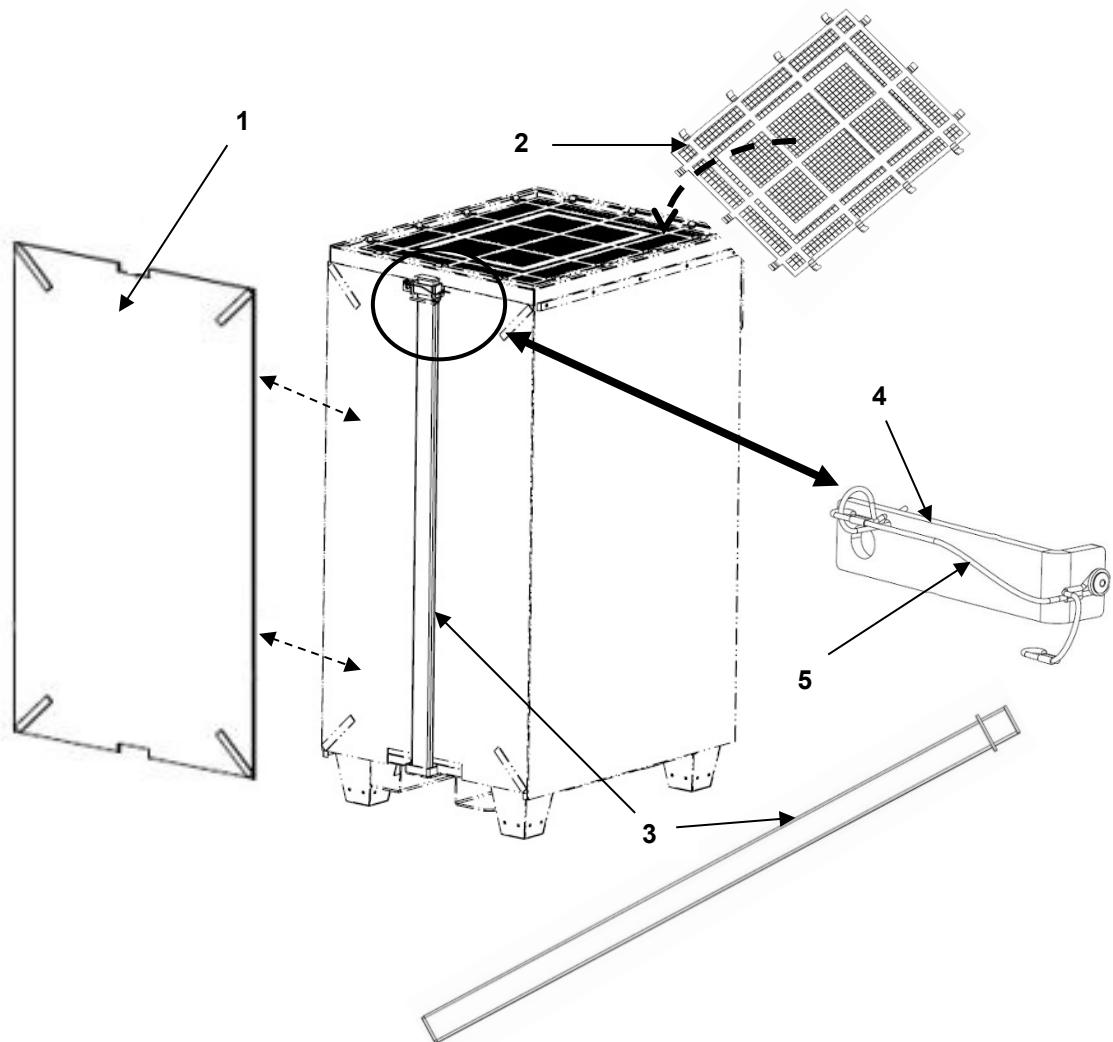STANDARD MODULES EXTERIOR PARTS**FIGURE 28 STANDARD MODULE EXTERIOR PARTS**

NOTE: THESE PARTS ARE PROVIDED ON ALL STANDARD MODULES

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 03 FIGURE 28 STANDARD MODULE EXTERIOR PARTS	
1	NOT ASSIGNED	1NSG3	15522002	. WEATHER COVER 4 1/2" CUTOUT BLACK	1
2	NOT ASSIGNED	1NSG3	15522021	.NET	1
3	8145-01-502-2630	1NSG3	16061017-001	.SECURITY 3G BAR GREEN	1
4	NOT ASSIGNED	1NSG3	15988248-001	..BAR LOCK W/HARDWARE GREEN	1
5	NOT ASSIGNED	1NSG3	15120662	...LANYARD W/HITCH PIN ASSY	1
1	NOT ASSIGNED	1NSG3	15522002	. WEATHER COVER 4 1/2" CUTOUT BLACK	1
2	NOT ASSIGNED	1NSG3	15522021	.NET	1
3	8145-01-502-2630	1NSG3	16061017-002	.SECURITY 3G BAR TAN	1
4	NOT ASSIGNED	1NSG3	15988248-002	..BAR LOCK W/HARDWARE TAN	1
5	NOT ASSIGNED	1NSG3	15120662	...LANYARD W/HITCH PIN ASSY	1
END OF FIGURE 28					

MODULE #26

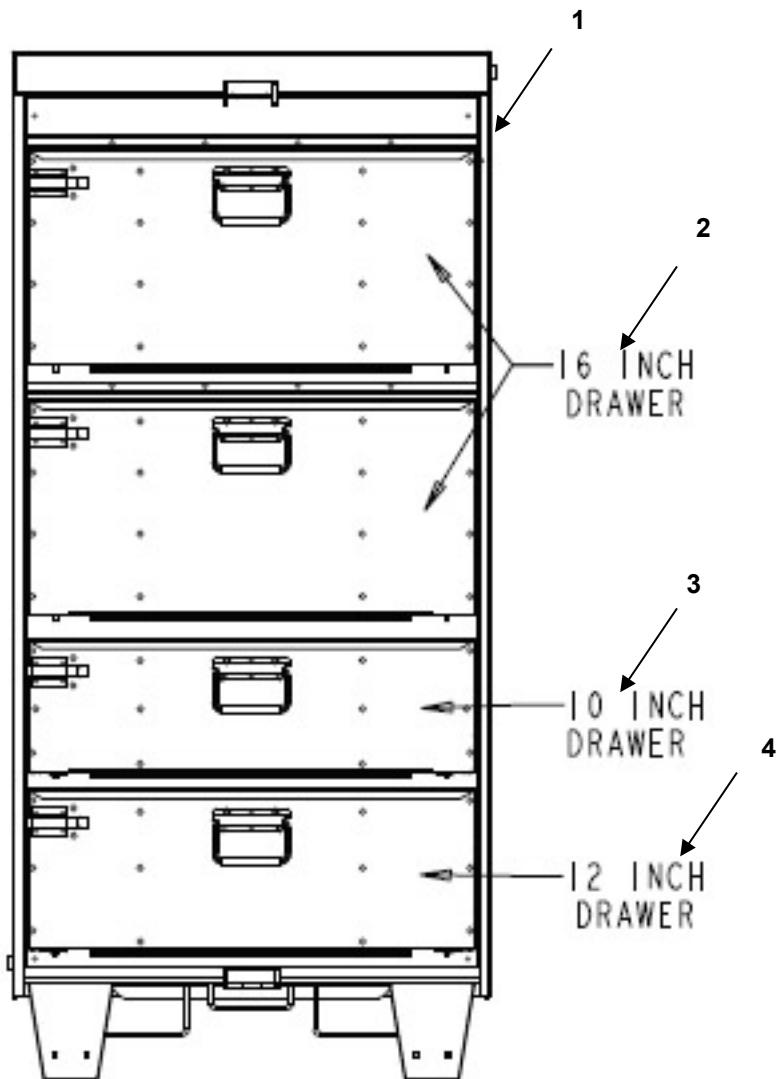


FIGURE 29 STANDARD MODULE #26

NOTE: COVER AND RETAINING BAR REMOVED FOR CLARITY

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0301 FIGURE 29 STANDARD MODULE #26	
1	8145-01-501-0900	1NSG3	15700026-001	.MODULE #26 GREEN UOC : FAA	1
2	8145-01-473-1527	1NSG3	15521600-001	..16" DRAWER GREEN with SLIDES and STD Dividers	2
3	8145-01-473-1351	1NSG3	15521000-001	..10" DRAWER GREEN with SLIDES and STD Dividers	1
4	8145-01-473-1275	1NSG3	15521200-001	..12" DRAWER GREEN with SLIDES and STD Dividers	1
1	8145-01-501-0900	1NSG3	15700026-002	.MODULE #26 TAN UOC : FAB	1
2	8145-01-473-1527	1NSG3	15521600-002	..16" DRAWER TAN with SLIDES and STD Dividers	2
3	8145-01-473-1351	1NSG3	15521000-002	..10" DRAWER TAN with SLIDES and STD Dividers	1
4	8145-01-473-1275	1NSG3	15521200-002	..12" DRAWER GREEN with SLIDES and STD Dividers	1
END OF FIGURE 29					

MODULE #23

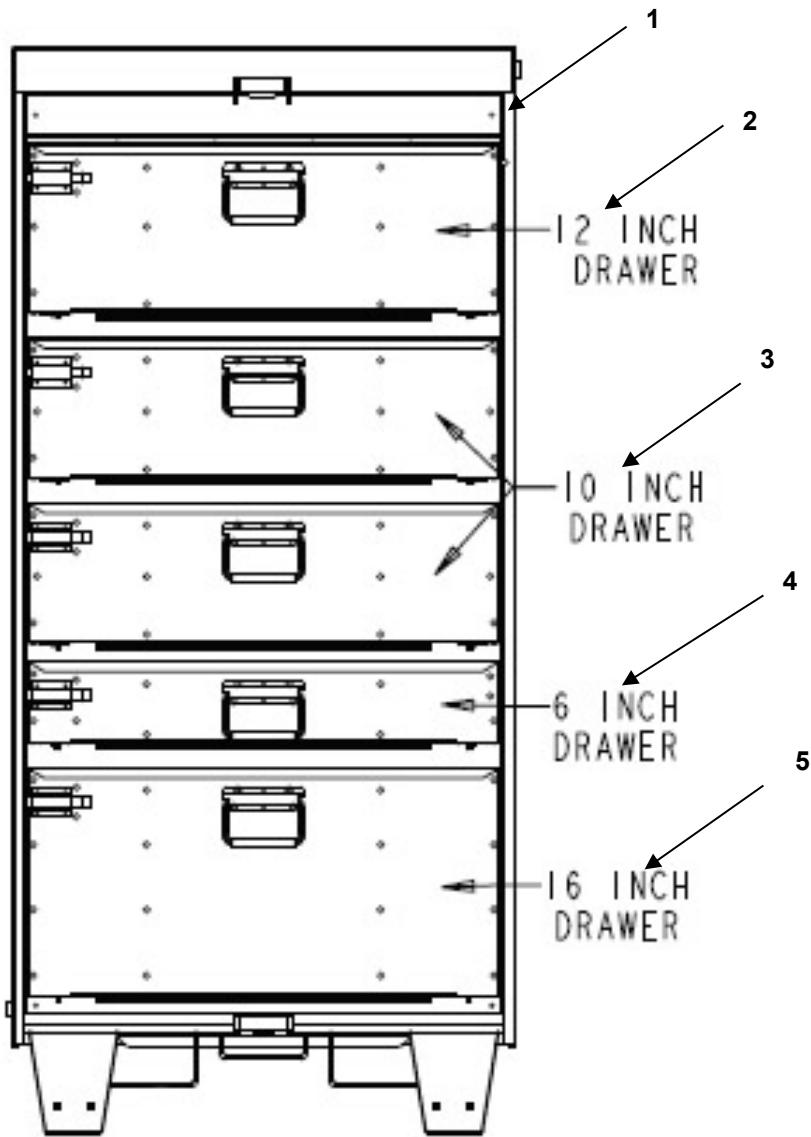


FIGURE 30 STANDARD MODULE #23

NOTE: COVER AND RETAINING BAR REMOVED FOR CLARITY

(1) ITEM NO.	(2) NSN	(3) CAGE C	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0302 FIGURE 30 STANDARD MODULE #23	
1	8145-01-523-4011	1NSG3	15700023-001	.MODULE #23 GREEN UOC : FAA	1
2	8145-01-473-1275	1NSG3	15521200-001	..12" DRAWER GREEN with SLIDES and STD Dividers	1
3	8145-01-473-1351	1NSG3	15521000-001	..10" DRAWER GREEN with SLIDES and STD Dividers	2
4	8145-01-473-1319	1NSG3	15520600-001	..6" DRAWER GREEN with SLIDES and STD Dividers	1
5	8145-01-473-1527	1NSG3	15521600-001	..16" DRAWER GREEN with SLIDES and STD Dividers	1
1	8145-01-523-4011	1NSG3	15700023-002	.MODULE #23 TAN UOC : FAB	1
2	8145-01-473-1275	1NSG3	15521200-002	..12" DRAWER TAN with SLIDES and STD Dividers	1
3	8145-01-473-1351	1NSG3	15521000-002	..10" DRAWER TAN with SLIDES and STD Dividers	2
4	8145-01-473-1319	1NSG3	15520600-002	..6" DRAWER TAN with SLIDES and STD Dividers	1
5	8145-01-473-1527	1NSG3	15521600-002	..16" DRAWER TAN with SLIDES and STD Dividers	1
END OF FIGURE 30					

MODULE #22

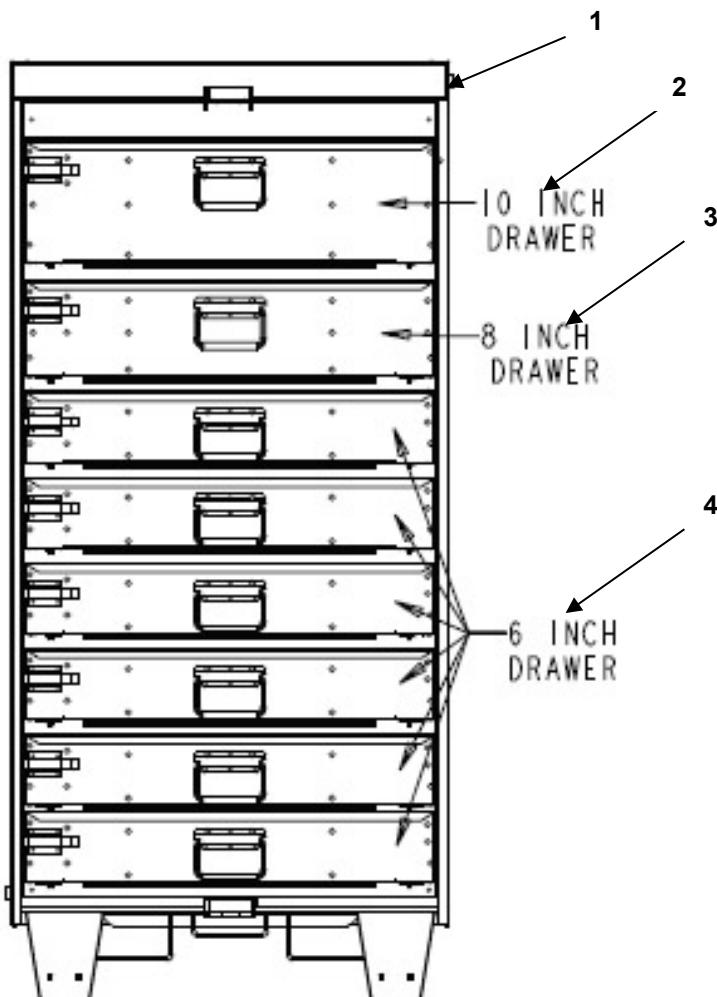


FIGURE 31 STANDARD MODULE #22

NOTE: COVER AND RETAINING BAR REMOVED FOR CLARITY

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0303 FIGURE 31 STANDARD MODULE #22	
1	8145-01-523-4040	1NSG3	15700022-001	.MODULE #22 GREEN UOC : FAA	1
2	8145-01-473-1351	1NSG3	15521000-001	..10" DRAWER GREEN with SLIDES and STD Dividers	1
3	8145-01-473-1226	1NSG3	15520800-001	..8" DRAWER GREEN with STD SLIDES and Dividers	1
4	8145-01-473-1319	1NSG3	15520600-001	..6" DRAWER GREEN with SLIDES and STD Dividers	6
1	8145-01-523-4040	1NSG3	15700022-002	.MODULE #22 TAN UOC : FAB	1
2	8145-01-473-1351	1NSG3	15521000-002	..10" DRAWER TAN with SLIDES and STD Dividers	1
3	8145-01-473-1226	1NSG3	15520800-002	..8" DRAWER TAN with STD SLIDES and Dividers	1
4	8145-01-473-1319	1NSG3	15520600-002	..6" DRAWER TAN with SLIDES and STD Dividers	6
END OF FIGURE 31					

MODULE #21

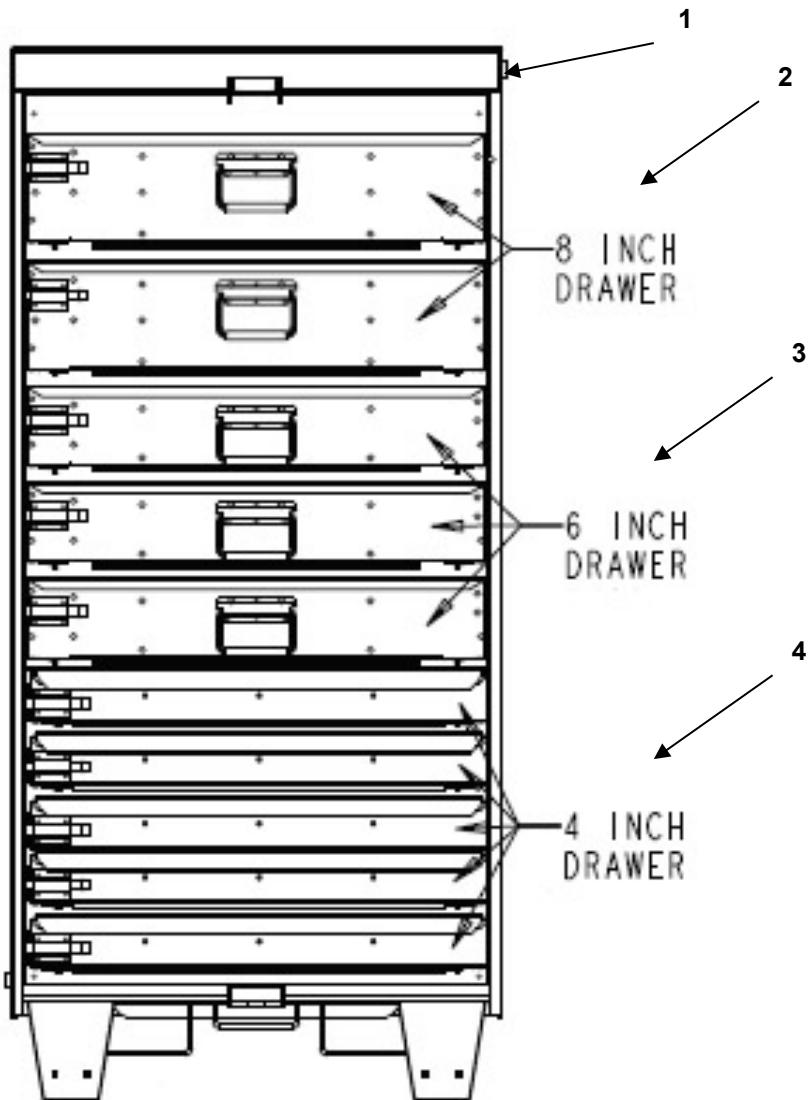
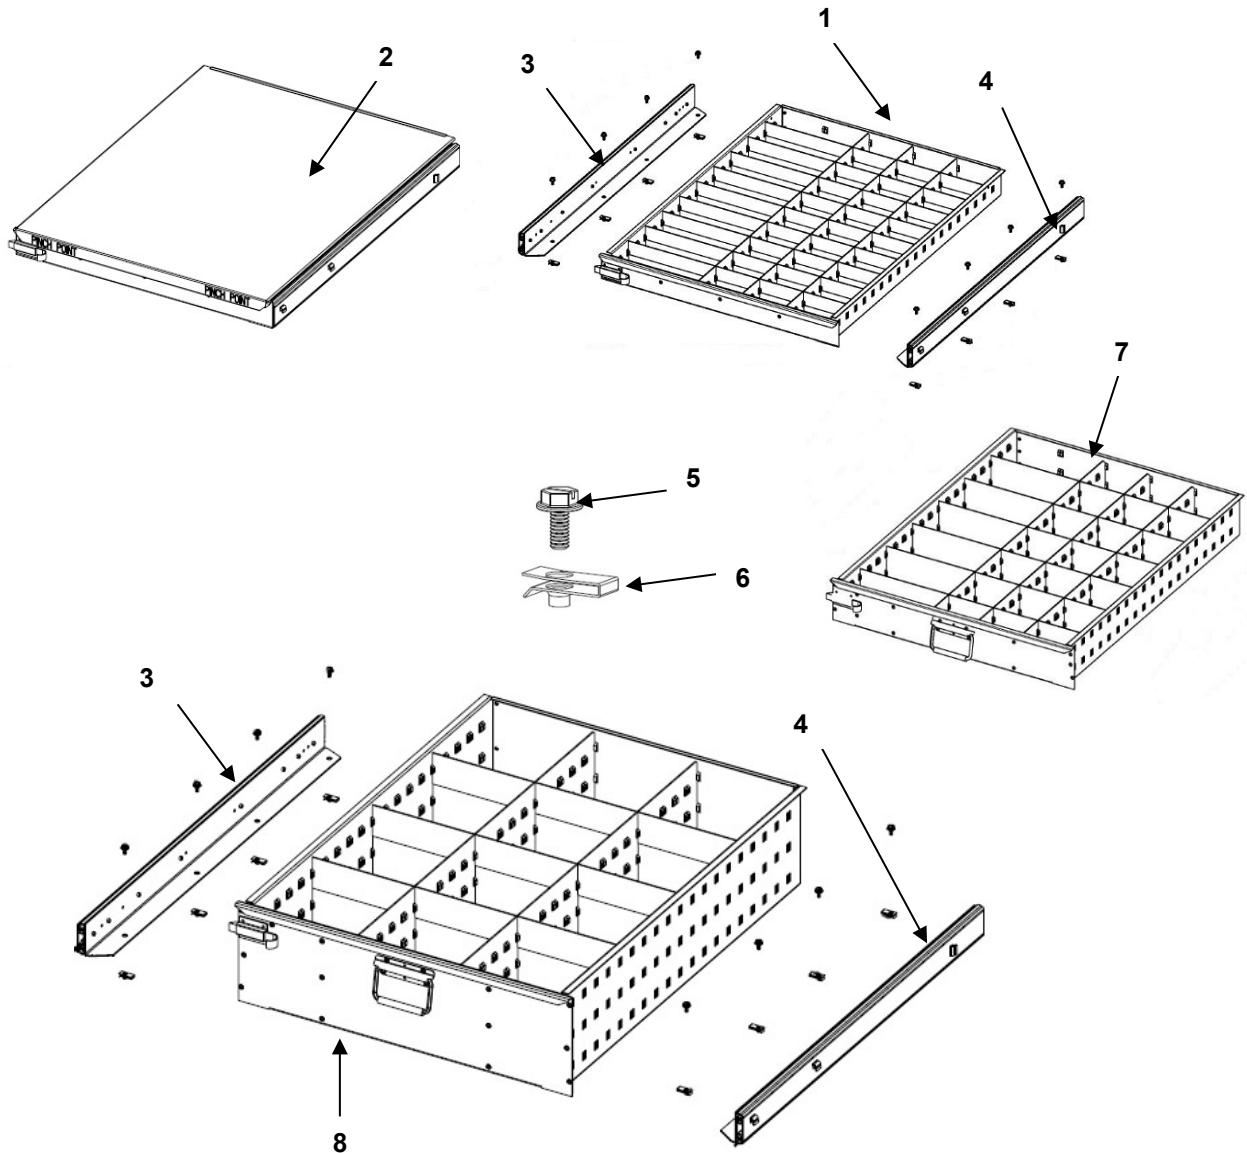



FIGURE 32 STANDARD MODULE #21

NOTE: COVER AND RETAINING BAR REMOVED FOR CLARITY

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0304 FIGURE 32 STANDARD MODULE #21	
1	8145-01-502-2494	1NSG3	15700021-001	.MODULE #21 GREEN UOC : FAA	1
2	8145-01-473-1226	1NSG3	15520800-001	.8" DRAWER GREEN with STD SLIDES and Dividers	2
3	8145-01-473-1319	1NSG3	15520600-001	.6" DRAWER GREEN with SLIDES and STD Dividers	3
4	8145-01-473-1218	1NSG3	15520400-001	.4" DRAWER GREEN with SLIDES and STD Dividers	5
1	8145-01-502-2494	1NSG3	15700021-002	.MODULE #21 TAN UOC : FAB	1
2	8145-01-473-1226	1NSG3	15520800-002	.8" DRAWER TAN with STD SLIDES and Dividers	2
3	8145-01-473-1319	1NSG3	15520600-002	.6" DRAWER TAN with SLIDES and STD Dividers	3
4	8145-01-473-1218	1NSG3	15520400-002	.4" DRAWER TAN with SLIDES and STD Dividers	5
END OF FIGURE 32					

STANDARD MODULE DRAWERS 4" thru 8"**FIGURE 33 STANDARD MODULE DRAWERS 4" THRU 8"**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0305 FIGURE 33 STANDARD MODULE DRAWERS 4" THRU 8"	
1	8145-01-473-1218	1NSG3	15520400-001	.4" DRAWER GREEN with SLIDES, STD Dividers and LID	1
1	8145-01-473-1218	1NSG3	15520400-002	.4" DRAWER TAN with SLIDE, STD Dividers and LID	1
2	NOT ASSIGNED	1NSG3	16502505	.4" DRAWER FLAT LID	1
3	NOT ASSIGNED	1NSG3	15981900	..SINGLE BEARING DRAWER SLIDE LEFT	1
4	NOT ASSIGNED	1NSG3	15981901	..SINGLE BEARING DRAWER SLIDE RIGHT	1
5	NOT ASSIGNED	1NSG3	15121054	...SCREW 1/4 -20 x 5/8" BH BL	8
6	NOT ASSIGNED	1NSG3	15121055	...THREADED CLIP	8
7	8145-01-473-1319	1NSG3	15520600-001	.6" DRAWER GREEN with SLIDES and STD Dividers	1
7	8145-01-473-1319	1NSG3	15520600-002	.6" DRAWER TAN with SLIDES and STD Dividers	1
3	NOT ASSIGNED	1NSG3	15981900	..SINGLE BEARING DRAWER SLIDE LEFT	1
4	NOT ASSIGNED	1NSG3	15981901	..SINGLE BEARING DRAWER SLIDE RIGHT	1
5	NOT ASSIGNED	1NSG3	15121054	...SCREW 1/4 -20 x 5/8" BH BL	8
6	NOT ASSIGNED	1NSG3	15121055	...THREADED CLIP	8
8	8145-01-473-1226	1NSG3	15520800-001	.8" DRAWER GREEN with SLIDES and STD Dividers	1
8	8145-01-473-1226	1NSG3	15520800-002	.8" DRAWER TAN with SLIDES and STD Dividers	1
3	NOT ASSIGNED	1NSG3	15981900	..SINGLE BEARING DRAWER SLIDE LEFT	1
4	NOT ASSIGNED	1NSG3	15981901	..SINGLE BEARING DRAWER SLIDE RIGHT	1
5	NOT ASSIGNED	1NSG3	15121054	...SCREW 1/4 -20 x 5/8" BH BL	8
6	NOT ASSIGNED	1NSG3	15121055	...THREADED CLIP	8
END OF FIGURE 33					

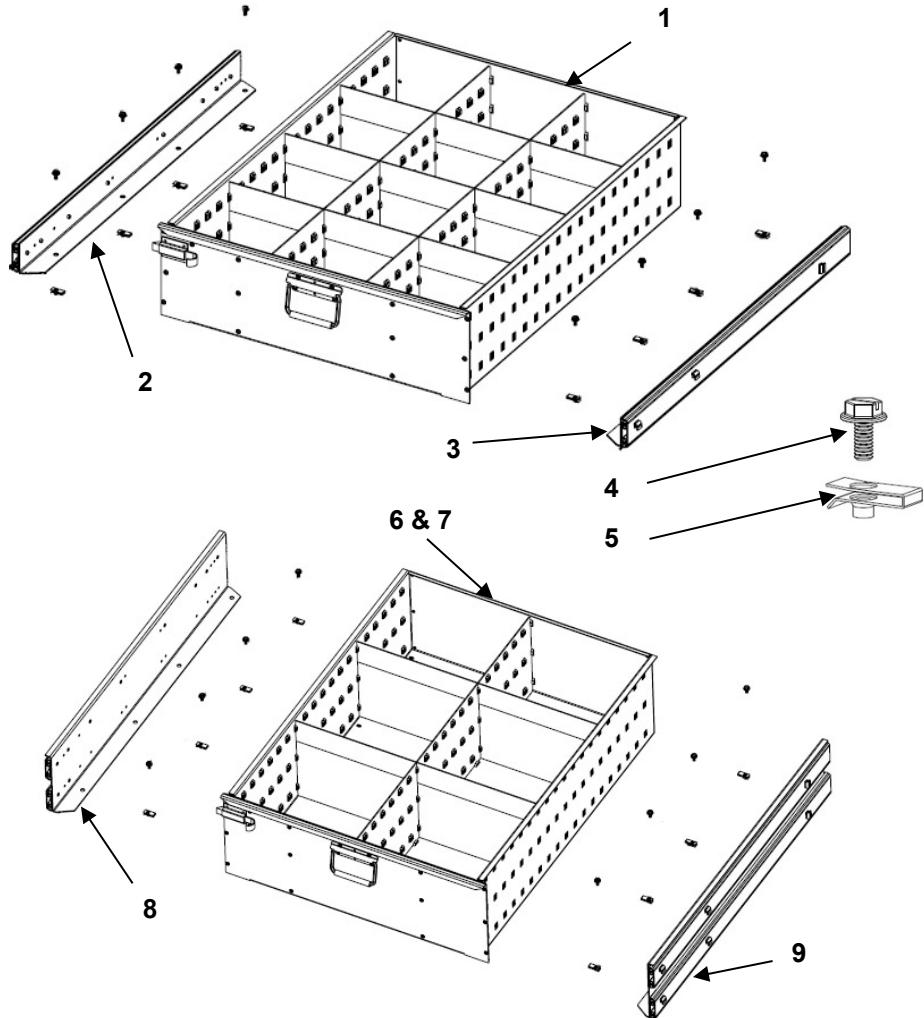STANDARD MODULE DRAWERS 10" thru 16" and BULK**FIGURE 34 STANDARD MODULE DRAWERS 10" THRU 16"**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0305 FIGURE 34 STANDARD DRAWERS 10" thru 16" and BULK	
1	8145-01-473-1351	1NSG3	15521000-001	.10" DRAWER GREEN with SLIDES and STD Dividers	1
1	8145-01-473-1351	1NSG3	15521000-002	.10" DRAWER TAN with SLIDES and STD Dividers	1
2	NOT ASSIGNED	1NSG3	15981900	..SINGLE BEARING DRAWER SLIDE LEFT	1
3	NOT ASSIGNED	1NSG3	15981901	..SINGLE BEARING DRAWER SLIDE RIGHT	1
4	NOT ASSIGNED	1NSG3	15121054	...SCREW 1/4 -20 x 5/8" BH BL	8
5	NOT ASSIGNED	1NSG3	15121055THREADED CLIP	8
6	8145-01-473-1275	1NSG3	15521200-001	.12" DRAWER GREEN with SLIDES and STD Dividers	1
6	8145-01-473-1275	1NSG3	15521200-002	.12" DRAWER TAN with SLIDES and STD Dividers	1
8	NOT ASSIGNED	1NSG3	15981902	..DOUBLE BEARING DRAWER SLIDE LEFT	1
9	NOT ASSIGNED	1NSG3	15981903	..DOUBLE BEARING DRAWER SLIDE RIGHT	1
4	NOT ASSIGNED	1NSG3	15121054	...SCREW 1/4 -20 x 5/8" BH BL	8
5	NOT ASSIGNED	1NSG3	15121055	...THREADED CLIP	8
7	8145-01-473-1527	1NSG3	15521600-001	.16" DRAWER GREEN with SLIDES and STD Dividers	1
7	8145-01-473-1527	1NSG3	15521600-002	.16" DRAWER TAN with SLIDES and STD Dividers	1
4	NOT ASSIGNED	1NSG3	15121054	...SCREW 1/4 -20 x 5/8" BH BL	8
5	NOT ASSIGNED	1NSG3	15121055	...THREADED CLIP	8
8	NOT ASSIGNED	1NSG3	15981902	..DOUBLE BEARING DRAWER SLIDE LEFT	1
9	NOT ASSIGNED	1NSG3	15981903	..DOUBLE BEARING DRAWER SLIDE RIGHT	1
END OF FIGURE 34					

END OF WORK PACKAGE


This page was intentionally left blank

PARTS SUPPORTING INFORMATION

**FPU SYSTEMS OPERATION MANUAL
(INCLUDING REPAIR PARTS)**

**EXPEDITIONARY CONTAINERIZED AUTHORIZED STOCKAGE LIST (ECASL)
BOH FPU Field Pack-up Units**

REPAIR PARTS LIST BULK STORAGE MODULES

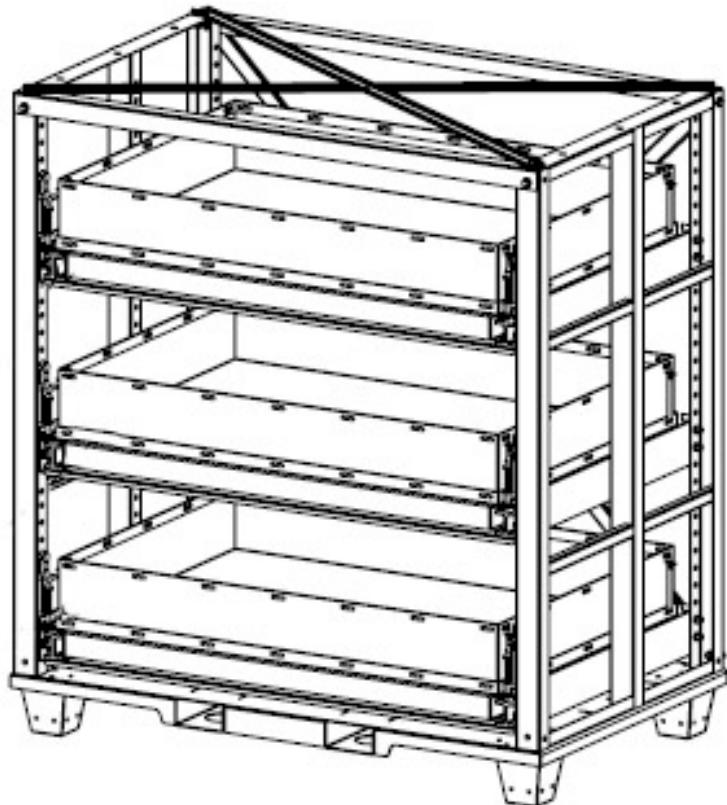

FIGURES #35 Through #39

BULK MODULE #3

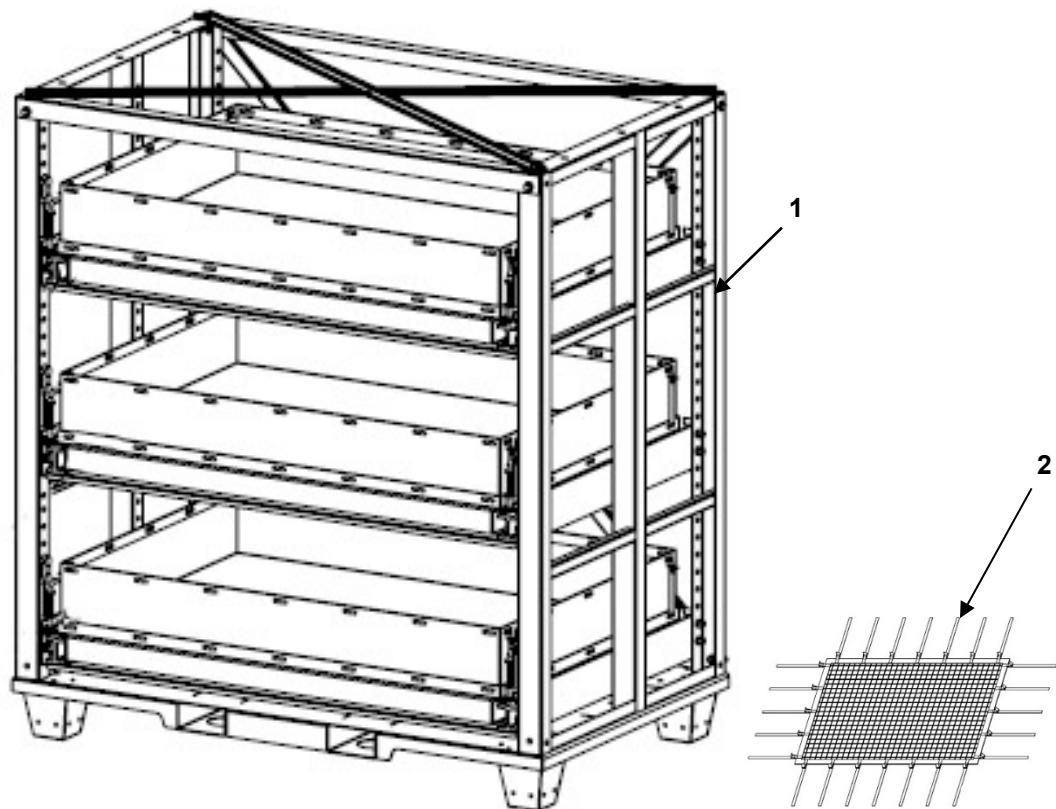
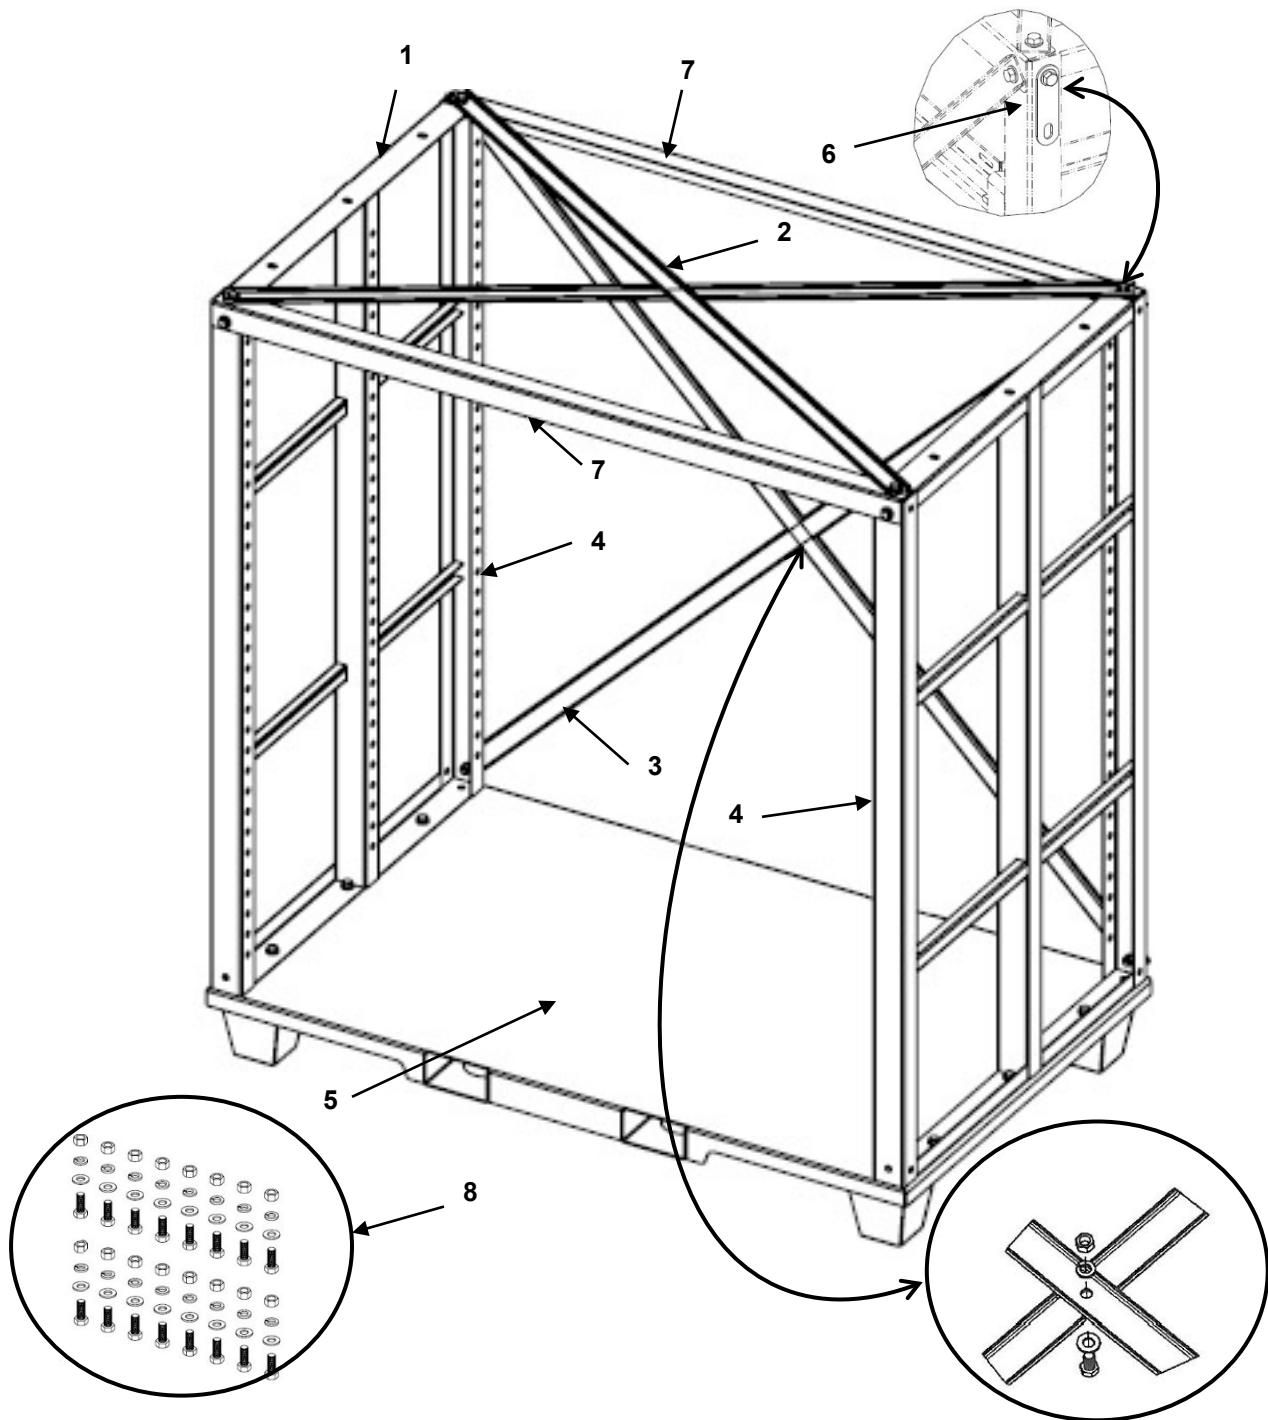
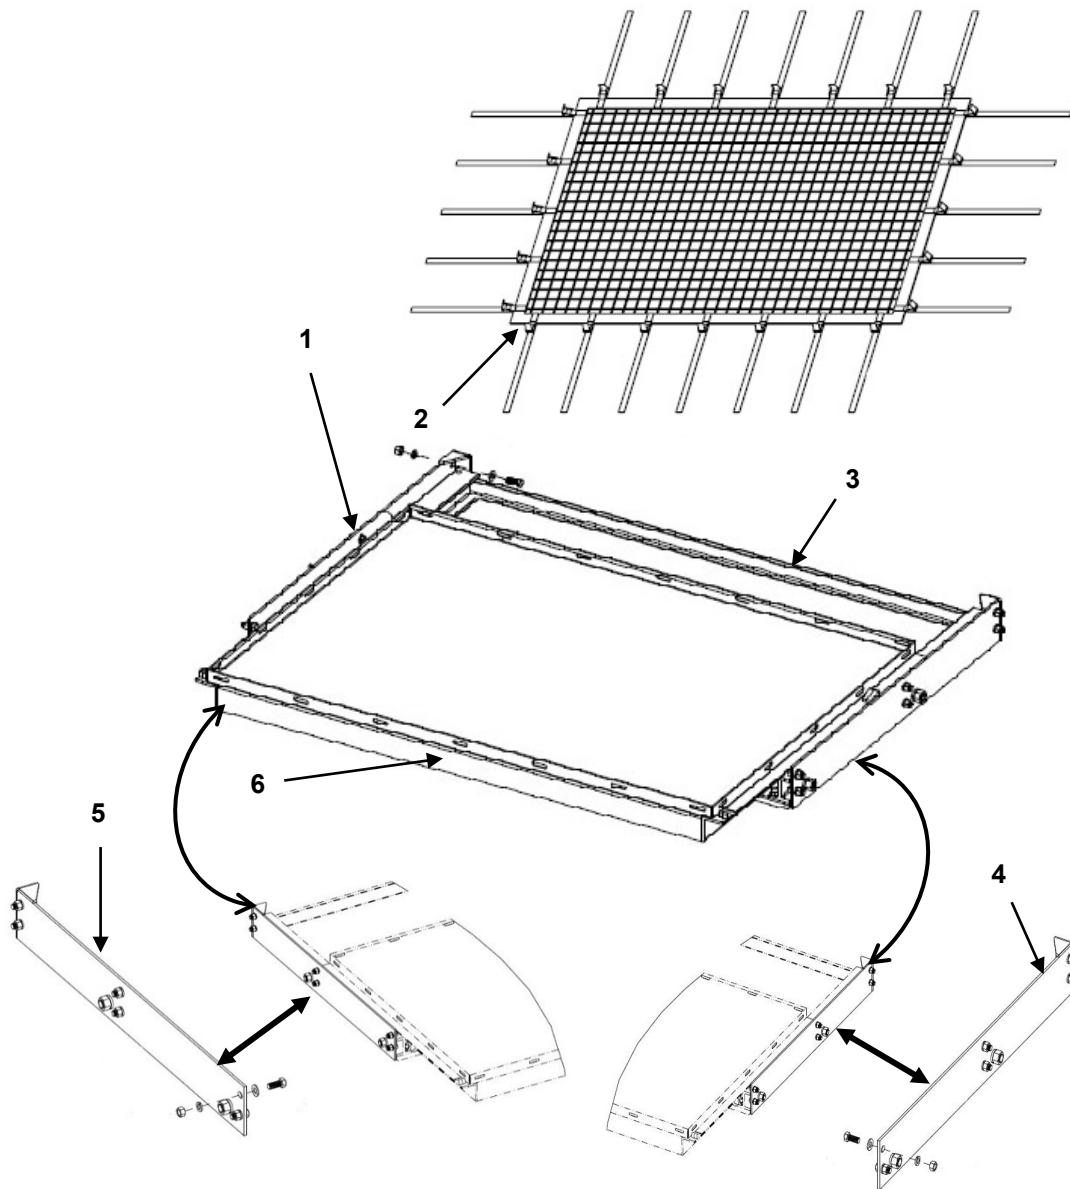


FIGURE 35 BULK MODULE #3


ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 0401 FIGURE 35 BULK STORAGE MODULE #3	
1	8145-01-588-3691	INSG3	15410203-001	.THREE BIN BULK MODULE WITH BATTERY 8" TRAYS GREEN UOC : FAA	1
2	NOT ASSIGNED	1NSG3	15410079	..NET	3
1	8145-01-588-3691	1NSG3	15410203-002	.THREE BIN BULK MODULE WITH BATTERY 8" TRAYS TAN UOC : FAB	1
2	NOT ASSIGNED	1NSG3	15410079	..NET	3
END OF FIGURE 35					

BULK STORAGE MODULE CHASSIS**FIGURE 36 BULK STORAGE MODULE CHASSIS**


(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 040101 FIGURE 36 BULK STORAGE MODULE CHASSIS	
1	NOT ASSIGNED	1NSG3	15410001-001	.FPU BULK CHASSIS ASSY GREEN	1
1	NOT ASSIGNED	1NSG3	15410001-002	.FPU BULK CHASSIS ASSY TAN	1
2	NOT ASSIGNED	1NSG3	15988913-001	..CROSS BARS TOP W/HDWR GREEN	1
2	NOT ASSIGNED	1NSG3	15988913-002	..CROSS BARS TOP W/HDWR TAN	1
3	NOT ASSIGNED	1NSG3	15988914-001	..CROSS BARS REAR W/HDWR GREEN	1
3	NOT ASSIGNED	1NSG3	15988914-002	..CROSS BARS REAR W/HDWR TAN	1
4	NOT ASSIGNED	1NSG3	15988905-001	..SIDE FRAME W/HDWR GREEN	2
4	NOT ASSIGNED	1NSG3	15988905-002	..SIDE FRAME W/HDWR TAN	2
5	NOT ASSIGNED	1NSG3	15410026-001	..BASE GREEN	1
5	NOT ASSIGNED	1NSG3	15410026-002	..BASE TAN	1
6	NOT ASSIGNED	1NSG3	15988912-001	..REAR SECURING BRACKET W/HDWR GREEN	1
6	NOT ASSIGNED	1NSG3	15988912-002	..REAR SECURING BRACKET W/HDWR TAN	1
7	NOT ASSIGNED	1NSG3	15988938-001	..CROSS BRACE F/R GREEN	2
7	NOT ASSIGNED	1NSG3	15988938-002	..CROSS BRACE F/R TAN	2
8	NOT ASSIGNED	1NSG3	15988906	...CHASSIS HARDWARE KIT	1
END OF FIGURE 36					

BULK TRAY 1000 lb.**FIGURE 37 BULK TRAY 1000 lb.**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 040102 FIGURE 37 BULK TRAY 1000 lb.	
1	NOT ASSIGNED	1NSG3	15988910-001	.TRAY ASSEMBLY 1000 lb. COMPLETE W/HDWR GREEN	1
2	NOT ASSIGNED	1NSG3	15410079	..NET	1
1	NOT ASSIGNED	1NSG3	15988910-002	.TRAY ASSEMBLY 1000 lb. COMPLETE W/HDWR TAN	1
2	NOT ASSIGNED	1NSG3	15410079	..NET	1
3	NOT ASSIGNED	1NSG3	15410083	.. INTERMEDIATE DRAWER SLIDE ASSY W/HDWR	1
4	NOT ASSIGNED	INSG3	15988907-001	... SLIDE ASSY RIGHT GREEN	1
4	NOT ASSIGNED	1NSG3	15988907-002	... SLIDE ASSY RIGHT TAN	1
5	NOT ASSIGNED	1NSG3	15988908-001	... SLIDE ASSY LEFT GREEN	1
5	NOT ASSIGNED	1NSG3	15988908-002	... SLIDE ASSY LEFT TAN	1
6	NOT ASSIGNED	1NSG3	15410085-001	... TRAY ONLY GREEN	1
6	NOT ASSIGNED	1NSG3	15410085-002	... TRAY ONLY TAN	1
END OF FIGURE 37					

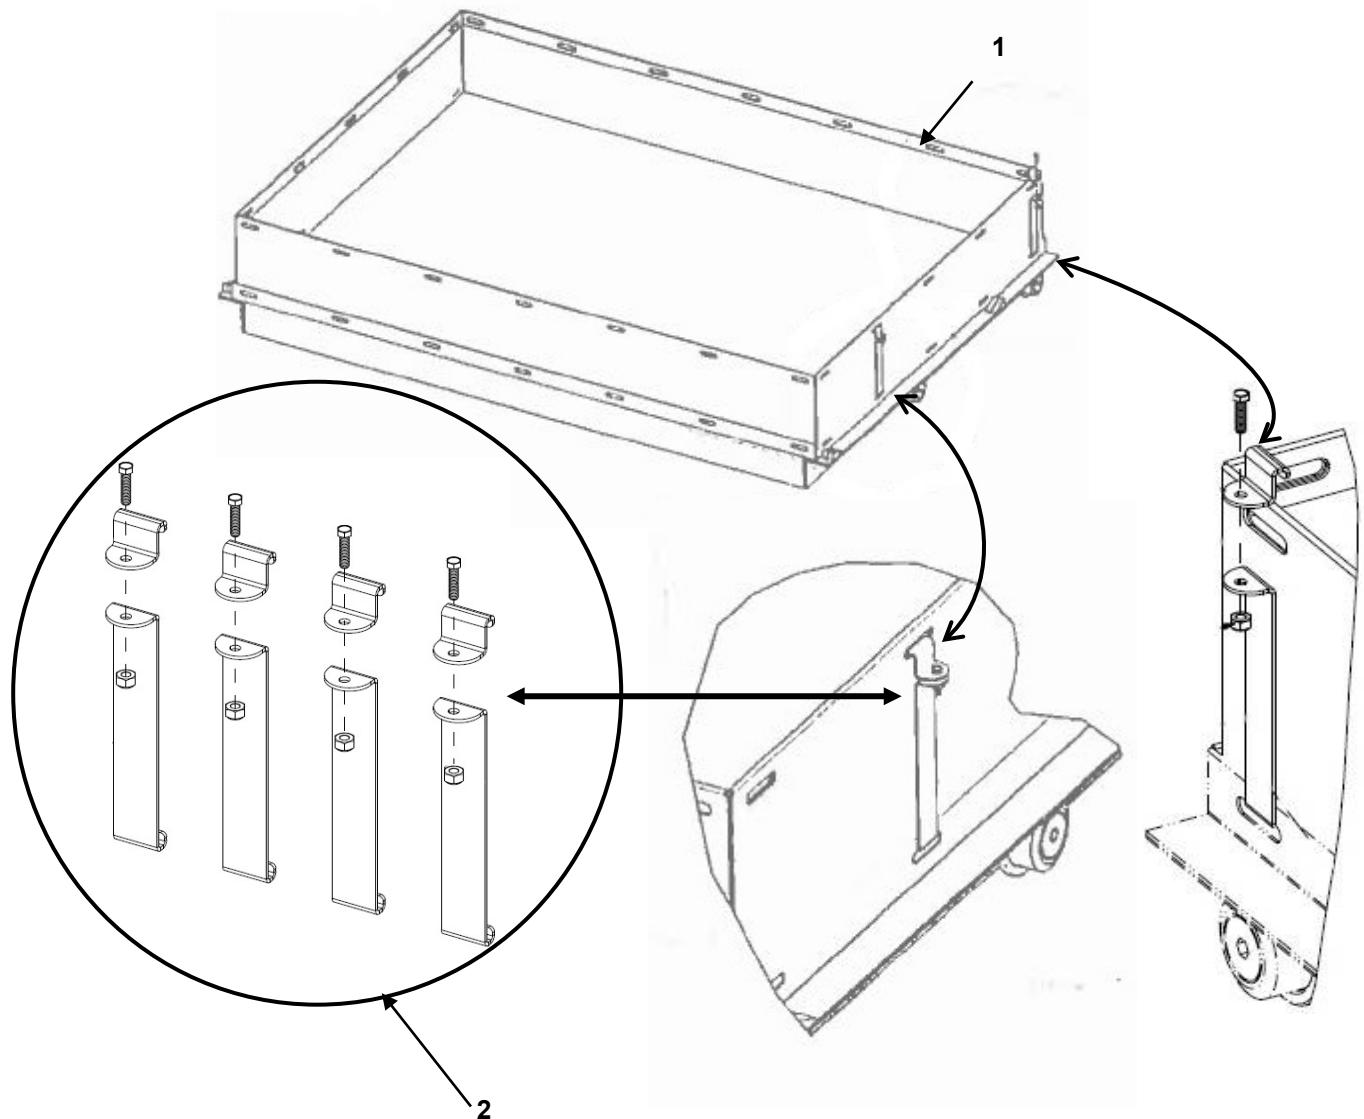8" BULK BIN ADAPTER KIT**FIGURE 38 BULK 8" BIN ADAPTER KIT**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 040103 FIGURE 38 BULK 8" BIN ADAPTER KIT	
1	NOT ASSIGNED	1NSG3	15988919-001	. BIN ADAPTER KIT 8" W/HDWR GREEN	1
1	NOT ASSIGNED	1NSG3	15988919-002	. BIN ADAPTER KIT 8" W/HDWR TAN	1
2	NOT ASSIGNED	1NSG3	15988920-001	..8 " BIN KIT CLIPS W/HDWR GREEN	1
2	NOT ASSIGNED	1NSG3	15988920-002	..8 " BIN KIT CLIPS W/HDWR TAN	1
END OF FIGURE 38					

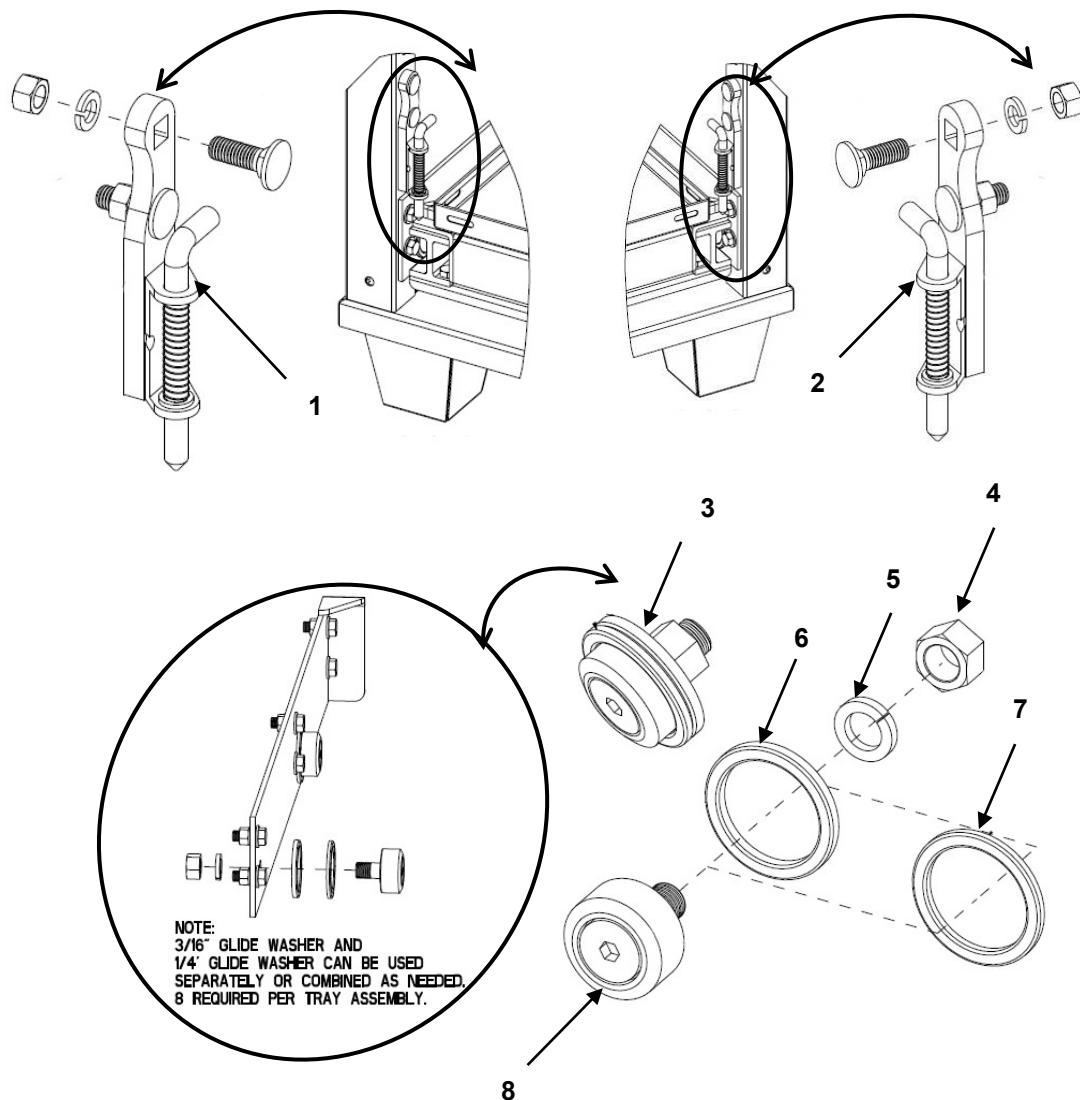LATCH AND BEARING ASSEMBLIES**FIGURE 39 LATCH AND BEARING ASSEMBLIES**

(1) ITEM NO.	(2) NSN	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
				GROUP 040104 FIGURE 40 LATCH AND BEARING ASSEMBLIES	
1	NOT ASSIGNED	1NSG3	15988916	.SHELF LATCH LEFT HAND	1
2	NOT ASSIGNED	1NSG3	15988915	.SHELF LATCH RIGHT HAND	1
3	NOT ASSIGNED	1NSG3	15988925	.ROLLER BEARING ASSY W/HDWR	4
4	NOT ASSIGNED	1NSG3	15988934	..HEX NUT	1
5	NOT ASSIGNED	1NSG3	15988933	..SPLIT WASHER	1
6	NOT ASSIGNED	1NSG3	15988937	.. $\frac{1}{4}$ INCH WASHER	1
7	NOT ASSIGNED	1NSG3	15988936	.. $\frac{3}{16}$ INCH WASHER	1
8	NOT ASSIGNED	1NSG3	15988935	..ROLLER BEARING	1
END OF FIGURE 39					

END OF WORK PACKAGE

This page was intentionally left blank

PARTS SUPPORTING INFORMATION

**FPU® SYSTEMS OPERATION MANUAL
(INCLUDING REPAIR PARTS)**

**EXPEDITIONARY CONTAINERIZED AUTHORIZED STOCKAGE LIST (ECASL)
BOH FPU Field Pack-up Units**

NSN INDEX

NSN	FIG.	ITEM	NSN	FIG.	ITEM
8145-01-473-1218	32	4	8145-01-513-6262	3B	3
8145-01-473-1218	33	1	8145-01-513-6262	25	1
8145-01-473-1226	31	3	8145-01-523-4011	3B	6
8145-01-473-1226	32	2	8145-01-523-4011	4B	6
8145-01-473-1226	33	8	8145-01-523-4011	5B	6
8145-01-473-1275	29	4	8145-01-523-4011	30	1
8145-01-473-1275	30	2	8145-01-523-4040	3B	5
8145-01-473-1275	34	6	8145-01-523-4040	4B	5
8145-01-473-1319	30	4	8145-01-523-4040	5B	5
8145-01-473-1319	31	4	8145-01-523-4040	31	1
8145-01-473-1319	32	3	8145-01-523-4068	3B	NA
8145-01-473-1319	33	7	8145-01-523-4068	4B	NA
8145-01-473-1351	29	3	8145-01-523-4068	5B	NA
8145-01-473-1351	30	3	8145-01-523-4138	3B	NA
8145-01-473-1351	31	2	8145-01-523-4138	4B	NA
8145-01-473-1351	34	1	8145-01-523-4138	5B	NA
8145-01-473-1527	29	2	8145-01-523-4140	3B	NA
8145-01-473-1527	30	5	8145-01-523-4140	4B	NA
8145-01-473-1527	34	7	8145-01-523-4140	5B	NA
8145-01-501-0900	3B	7	8145-01-523-4142	3B	NA
8145-01-501-0900	5B	7	8145-01-523-4142	4B	NA
8145-01-501-0900	29	1	8145-01-523-4142	5B	NA
8145-01-502-2494	3B	4	8145-01-523-4145	3B	NA
8145-01-502-2494	4B	4	8145-01-523-4145	4B	NA
8145-01-502-2494	5B	4	8145-01-523-4145	5B	NA
8145-01-502-2494	32	1	8145-01-523-4149	3B	NA
8145-01-502-2630	28	3	8145-01-523-4149	4B	NA
8145-01-513-6262	1B	3	8145-01-523-4149	5B	NA

NSN	FIG.	ITEM	NSN	FIG.	ITEM
8145-01-524-0244	1B	2	8145-01-654-0942	4B	NA
8145-01-524-0244	2B	2	8145-01-654-0943	4A	1
8145-01-524-0244	4B	3	8145-01-654-0943	4B	NA
8145-01-524-0244	5B	3	8145-01-654-0963	5A	1
8145-01-524-0244	21A	1	8145-01-654-0963	5B	NA
8145-01-524-0249	3B	2	8145-01-654-0968	5A	1
8145-01-524-0249	4B	2	8145-01-654-0968	5B	NA
8145-01-524-0249	5B	2	8150-01-598-3223	1B	1
8145-01-524-0249	19	1	8150-01-598-3223	2B	1
8145-01-588-3691	1B	4	8150-01-598-3223	3B	1
8145-01-588-3691	35	1	8150-01-598-3223	4B	1
8145-01-598-3332	2B	3	8150-01-598-3223	5B	1
8145-01-598-3332	21B	1	8150-01-598-3223	6	1
8145-01-598-3337	2B	3	8150-01-598-3304	1B	1
8145-01-598-3337	21B	1	8150-01-598-3304	2B	1
8145-01-598-3344	1B	5	8150-01-598-3304	3B	1
8145-01-598-3344	3B	8	8150-01-598-3304	4B	1
8145-01-598-3344	4B	7	8150-01-598-3304	5B	1
8145-01-598-3344	5B	8	8150-01-598-3304	6	1
8145-01-598-3354	1B	5	End of NSN Table		
8145-01-598-3354	3B	8			
8145-01-598-3354	4B	7			
8145-01-598-3354	5B	8			
8145-01-654-0588	2A	1			
8145-01-654-0588	2B	NA			
8145-01-654-0593	2A	1			
8145-01-654-0593	2B	NA			
8145-01-654-0914	3A	1			
8145-01-654-0914	3B	NA			
8145-01-654-0919	3A	1			
8145-01-654-0919	3B	NA			
8145-01-654-0925	1A	1			
8145-01-654-0925	1B	NA			
8145-01-654-0930	1A	1			
8145-01-654-0930	1B	NA			
8145-01-654-0942	4A	1			

END OF WORK PACKAGE

PARTS SUPPORTING INFORMATION

FPU® SYSTEMS OPERATION MANUAL (INCLUDING REPAIR PARTS)

EXPEDITIONARY CONTAINERIZED AUTHORIZED STOCKAGE LIST (ECASL) BOH FPU Field Pack-up Units

PART NUMBER INDEX

PART NUMBER	FIG.	ITEM
15120662	28	5
15121054	32	6
15121054	33	5
15121055	32	7
15121055	33	6
15240152	21A	11
15240152	21B	4
15240152	22	6
15312225	17	4
15312262	17	7
15312286	17	3
15410079	35	2
15410079	37	2
15410083	37	3
15522021	28	2
15524001	3B	NA
15524001	4B	NA
15524001	5B	NA
15524004	3B	NA
15524004	4B	NA
15524004	5B	NA
15524005	3B	NA
15524005	4B	NA
15524005	5B	NA
15524006	3B	NA
15524006	4B	NA
15524006	5B	NA
15524007	3B	NA

PART NUMBER	FIG.	ITEM
15524007	4B	NA
15524007	5B	NA
15524008	3B	NA
15524008	4B	NA
15524008	5B	NA
15940112	21B	6
15940112	22	12
15940113	20	10
15940113	22	13
15981513	8	2
15981513	9	2
15981513	10	2
15981513	11	2
15981513	12	2
15981513	13	2
15981513	14	2
15981800	18	4
15981810	23	4
15981820	20	7
15981840	24	2
15981900	33	3
15981900	34	2
15981901	33	4
15981901	34	3
15981902	34	8
15981903	34	9
15988515	8	3
15988516	9	3

PART NUMBER	FIG.	ITEM
15988517	10	3
15988518	11	3
15988518	14	3
15988519	12	3
15988520	13	3
15988585	20	5
15988586	20	6
15988627	24	4
15988628	24	5
15988798	23	3
15988808	23	8
15988808	23	8
15988906	36	8
15988915	39	2
15988916	39	1
15988925	39	3
15988933	39	5
15988934	39	4
15988935	39	8
15988936	39	7
15988937	39	6
16230211	15	1
16280029	27	1
16500903	17	5
16500905	17	9
16500950	17	6
16500955	17	8
16501604	21A	7
16501604	22	7
16501605	21A	8
16501605	22	8
16501606	20	9
16501607	20	8
16501609	21B	5
16501610	21A	10
16501610	22	9
16501611	21A	9

PART NUMBER	FIG.	ITEM
16501611	20	11
16501611	22	11
16501705	22	16
16501709	22	17
16502505	33	2
15002003-001	1B	1
15002003-001	2B	1
15002003-001	3B	1
15002003-001	4B	1
15002003-001	5B	1
15002003-001	6	1
15002003-002	1B	1
15002003-002	2B	1
15002003-002	3B	1
15002003-002	4B	1
15002003-002	5B	1
15002003-002	6	1
15310001-001	17	1
15310001-002	17	1
15310022-001	1B	2
15310022-001	2B	2
15310022-001	4B	3
15310022-001	5B	3
15310022-001	21A	1
15310022-002	1B	2
15310022-002	2B	2
15310022-002	4B	3
15310022-002	5B	3
15310022-002	21A	1
15310023-001	3B	2
15310023-001	4B	2
15310023-001	5B	2
15310023-001	19	1
15310023-002	3B	2
15310023-002	4B	2
15310023-002	5B	2
15310023-002	19	1
15310034-001	2B	3

PART NUMBER	FIG.	ITEM
15310034-001	21B	1
15310034-002	2B	3
15310034-002	21B	1
15410001-001	36	1
15410001-002	36	1
15410026-001	36	5
15410026-002	36	5
15410203-001	1B	4
15410203-001	35	1
15410203-002	1B	4
15410203-002	35	1
15410085-001	37	6
15410085-002	37	6
15520400-001	32	4
15520400-001	33	1
15520400-002	32	4
15520400-002	33	1
15520600-001	30	4
15520600-001	31	4
15520600-001	32	3
15520600-001	33	7
15520600-002	30	4
15520600-002	31	4
15520600-002	32	3
15520600-002	33	7
15520800-001	31	3
15520800-001	32	2
15520800-001	33	8
15520800-002	31	3
15520800-002	32	2
15520800-002	33	8
15521000-001	29	3
15521000-001	30	3
15521000-001	31	2
15521000-001	34	1

PART NUMBER	FIG.	ITEM
15521000-002	29	3
15521000-002	30	3
15521000-002	31	2
15521000-002	34	1
15521200-001	29	4
15521200-001	30	2
15521200-001	34	6
15521200-002	29	4
15521200-002	30	2
15521200-002	34	6
15521600-001	29	2
15521600-002	29	2
15521600-001	30	5
15521600-002	30	5
15521600-001	34	7
15521600-002	34	7
15522002	28	1
Omitted	-	-
15530122-001	1B	5
15530122-001	3B	8
15530122-001	4B	7
15530122-001	5B	8
15530122-002	1B	5
15530122-002	3B	8
15530122-002	4B	7
15530122-002	5B	8
15700021-001	3B	4
15700021-001	4B	4
15700021-001	5B	4
15700021-001	32	1
15700021-002	3B	4
15700021-002	4B	4
15700021-002	5B	4
15700021-002	32	1
15700022-001	3B	5

PART NUMBER	FIG.	ITEM
15700022-001	4B	5
15700022-001	5B	5
15700022-001	31	1
15700022-002	3B	5
15700022-002	4B	5
15700022-002	5B	5
15700022-002	31	1
15700023-001	3B	6
15700023-001	4B	6
15700023-001	5B	6
15700023-001	30	1
15700023-002	3B	6
15700023-002	4B	6
15700023-002	5B	6
15700023-002	30	1
15700026-001	3B	7
15700026-001	5B	7
15700026-001	29	1
15700026-002	3B	7
15700026-002	5B	7
15700026-002	29	1
15940110-001	15	2
15940110-002	15	2
15940111-001	26	1
15940111-002	26	1
15981521-001	7A	1
15981521-001	7B	10
15981521-001	8	1
15981521-002	7A	1
15981521-002	7B	10
15981521-002	8	1
15981522-001	7A	2
15981522-001	7B	9
15981522-001	9	1
15981522-002	7A	2

PART NUMBER	FIG.	ITEM
15981522-002	7B	9
15981522-002	9	1
15981523-001	7A	3
15981523-001	7B	8
15981523-001	10	1
15981523-002	7A	3
15981523-002	7B	8
15981523-002	10	1
15981524-001	7A	4
15981524-001	11	1
15981524-002	7A	4
15981524-002	11	1
15981525-001	7A	5
15981525-001	7B	12
15981525-001	12	1
15981525-002	7A	5
15981525-002	7B	12
15981525-002	12	1
15981526-001	7A	6
15981526-001	7B	11
15981526-001	13	1
15981526-002	7A	6
15981526-002	7B	11
15981526-002	13	1
15982246	14	5
Omitted	-	-
15988248-001	28	4
15988248-002	28	4
15988513-001	8	4
15988513-001	9	4
15988513-001	10	4
15988513-001	11	4
15988513-001	12	4
15988513-001	13	4
15988513-001	14	4

PART NUMBER	FIG.	ITEM
15988513-002	8	4
15988513-002	9	4
15988513-002	10	4
15988513-002	11	4
15988513-002	12	4
15988513-002	13	4
15988513-002	14	4
15988557-001	18	3
15988562-001	23	2
15988562-002	23	2
15988563-001	23	1
15988563-002	23	1
15988564-001	23	1
15988564-002	23	1
15988565-001	18	1
15988565-001	19	2
15988565-001	21A	2
15988565-001	21B	2
15988565-002	18	1
15988565-002	19	2
15988565-002	21A	2
15988565-002	21B	2
15988603-001	16	1
15988603-002	16	1
15988605-001	24	3
15988605-002	24	3
15988792-001	18	2
15988792-002	18	2
15988802-001	19	6
15988802-001	20	3
15988802-002	19	6
15988802-002	20	3
15988805-001	23	5
15988805-002	23	5
15988806-001	23	6

PART NUMBER	FIG.	ITEM
15988806-002	23	6
15988807-001	23	7
15988807-002	23	7
15988905-001	36	4
15988905-002	36	4
15988907-001	37	4
15988907-002	37	4
15988908-001	37	5
15988908-002	37	5
15988910-001	37	1
15988910-002	37	1
15988912-001	36	6
15988912-002	36	6
15988913-001	36	2
15988913-002	36	2
15988914-001	36	3
15988914-002	36	3
15988919-001	38	1
15988919-002	38	1
15988920-001	38	2
15988920-002	38	2
15988938-001	36	7
15988938-002	36	7
16061017-001	28	3
16061017-002	28	3
16230074-001	6	1
16230074-002	6	2
16230151-001	7B	7
16230151-001	14	1
16230151-002	7B	7
16230151-002	14	1
16500954-001	17	2
16500954-002	17	2

PART NUMBER	FIG.	ITEM
16501350-001	24	1
16501350-002	24	1
16502050-001	19	4
16502050-001	20	2
16502050-002	19	4
16502050-002	20	2
16502056-001	19	3
16502056-001	20	1
16502056-002	19	3
16502056-002	20	1
16503050-001	21A	3
16503050-001	22	1
16503050-002	21A	3
16503050-002	22	1
16503150-001	21A	6
16503150-001	22	4
16503150-002	21A	6
16503150-002	22	4
16503250-001	19	5
16503250-001	20	4
16503250-002	19	5
16503250-002	20	4
16504850-001	21A	4
16504850-001	22	2
16504850-002	21A	4
16504850-002	22	2
16504950-001	21A	5
16504950-001	22	5
16504950-002	21A	5
16504950-002	22	5
16506750-001	21B	3
16506750-002	21B	3
16509501-001	1B	3
16509501-001	3B	3
16509501-001	25	1

PART NUMBER	FIG.	ITEM
16509501-002	1B	3
16509501-002	3B	3
16509501-002	25	1
75000001-001	1A	1
75000001-001	1B	NA
75000001-002	1A	1
75000001-002	1B	NA
75000002-001	2A	1
75000002-001	2B	NA
75000002-002	2A	1
75000002-002	2B	NA
75000003-001	3A	1
75000003-001	3B	NA
75000003-002	3A	1
75000003-002	3B	NA
75000004-001	4A	1
75000004-001	4B	NA
75000004-002	4A	1
75000004-002	4B	NA
75000005-001	5A	1
75000005-001	5B	NA
75000005-002	5A	1
75000005-002	5B	NA

End of Part Number Table

END OF WORK PACKAGE

Boh Environmental, LLC

MANUFACTURER'S LIMITED WARRANTY TERMS

Boh Environmental, LLC (BOH) warrants that the Products offered, including the Field Pack-Up (FPU®) System, Containerized Mission Systems, Module Kits, and Bare Base Equipment, shall be free from defects in materials and workmanship for a period of twelve (12) months from date of purchase when normally used, maintained and operated by the Customer. Unused Product containing missing or defective components may be returned, within the warranty period, with proof of purchase, to BOH with transportation charges prepaid. BOH, at its option, shall supply a replacement item(s) or refund the purchase price of the Product. BOH shall in its sole discretion determine whether to replace the defective item(s) with identical items, or with items of identical quality and providing identical performance and functional capabilities. BOH will determine, at its sole discretion, whether or not the claim is a valid warranty item. If so, BOH will pay costs (actual transportation plus handling charge) for shipping of the replacement item, when this option is selected.

This warranty is void if Products have been damaged by the Customer as the result of improper or unreasonable use, or other causes not arising out of defects in material or workmanship. The warranty is also void if the Product has at any time been stored or used other than in accordance with the directions set out in the literature relating to the Product (e.g., user/operation manuals). BOH makes no other warranty or representation concerning the Products except that each will meet the performance specifications set forth in the literature relating to the Product. There are no further warranties, including any warranty of merchantability or fitness for a particular purpose covering the Product.

BOH will, at its option, either (1) credit user in the amount paid for any Product which does not perform to these specifications, or (2) replace or repair such Product, provided user so notifies BOH within twelve (12) months of the Products purchase date. BOH shall not be responsible for any consequential damages to user arising as a result of such performance. The Customer will return the item at their cost, if required. Boh may elect to have its representative inspect the item to validate the claim.

Other product components included in the fabrication of items purchased under contract (e.g., air conditioners and generators) that are not manufactured by Boh Environmental are warranted by their individual manufacturer. Copies of such warranties are supplied with the finished Product or are available through BOH.

Please contact BOH for other contract specific warranty terms